



[Manuals.plus](#) /

› [Devan](#) /

› Devan Portable Blender Model A11 Instruction Manual

Devan A11

Devan Portable Blender Model A11 Instruction Manual

Your Guide to Effortless Blending

1. INTRODUCTION

Thank you for choosing the Devan Portable Blender Model A11. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new blender. Please read it thoroughly before first use and retain it for future reference.

The Devan Portable Blender is designed for convenience and performance, featuring anti-jamming technology, a powerful 300W motor, a 24oz capacity, and USB-rechargeable functionality. It is constructed with BPA-free materials for your health and safety.



Image 1.1: The Devan Portable Blender, illustrating its compact design and capacity for blending smoothies or fresh ingredients.

2. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Devan Portable Blender:

LARGE CAPACITY WITH A TRAVEL LID



Marquee Power Display



700ml Large Capacity



Sip Lid



Image 2.1: Labeled components of the Devan Portable Blender, including the jar, blade assembly, control buttons, and charging port.

- **Carry Handle:** Integrated into the lid for easy portability.
- **Detachable Filter:** Helps to strain pulp for smoother drinks.
- **Food Grade Tritan Jar:** Transparent blending jar with measurement markings (up to 700ml/24oz).
- **6-Point Stainless Steel Blades:** Durable blades designed for efficient blending.
- **Clockwise Button:** Initiates blending in the standard direction.
- **Anti-clockwise Button:** Initiates blending in the reverse direction, useful for anti-jamming.
- **Type-C Charging Port:** For recharging the internal battery.
- **Two Colors Spinning Lights Display:** Provides visual feedback on operation and battery status.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your blender. Connect the provided USB Type-C cable to the charging port on the blender base and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port). The illuminated base will indicate charging status.



Image 3.1: Charging the blender and understanding the battery indicator lights.

- **1% - 17%:** No light
- **18% - 33%:** 2 green lights on
- **34% - 50%:** 4 green lights on
- **51% - 67%:** 6 green lights on
- **68% - 83%:** 8 green lights on
- **84% - 99%:** 10 green lights on
- **Full charged:** 12 green lights on

3.2 First Use Cleaning

Before using your blender for the first time, wash all detachable parts (jar, lid, filter) with warm soapy water. Rinse thoroughly and dry. The blender base should be wiped clean with a damp cloth; do not immerse the base in water.

3.3 Assembly

1. Ensure the blade assembly is securely attached to the base.
2. Place the blending jar onto the base, aligning the arrows or indicators, and twist clockwise until it locks into place.
3. Securely attach the lid to the blending jar.

4. OPERATING INSTRUCTIONS

4.1 Adding Ingredients

Open the lid and add your desired ingredients to the blending jar. For optimal blending, follow these guidelines:

- Always add liquids first (water, milk, juice) to ensure smooth blending.
- Cut fruits and vegetables into small pieces (approximately 1 inch or 2.5 cm) to prevent jamming and ensure thorough blending.
- Do not overfill the jar beyond the maximum fill line (700ml/24oz).
- For frozen fruits or ice, add a sufficient amount of liquid to cover them partially.

4.2 Blending Process

Once ingredients are added and the lid is securely fastened:

1. Press the **Clockwise Button** to start blending. The blender will operate for a preset cycle.
2. If ingredients become stuck or the blades jam, press the **Anti-clockwise Button** to reverse the blade direction. This helps dislodge ingredients. You can alternate between clockwise and anti-clockwise blending

as needed.

3. For best results, gently shake the blender during operation to ensure all ingredients come into contact with the blades.
4. Once blending is complete, the blender will stop automatically. You can also press either button again to stop it manually.

THE FIRST ANTI-JAMMING PORTABLE BLENDER



Image 4.1: The blender in action, demonstrating its ability to blend ingredients effectively with anti-jamming technology.

4.3 Safety Precautions During Operation

- Do not operate the blender when empty.
- Ensure the lid is securely closed before blending.
- Keep hands and utensils away from the blades during operation.
- Do not attempt to blend extremely hot liquids, as pressure buildup can cause the lid to open.

5. MAINTENANCE AND CLEANING

5.1 General Cleaning

The Devan Portable Blender features a waterproof design for easy cleaning.

WATERPROOF DESIGN FOR EFFORTLESS CLEANING



Image 5.1: Cleaning the blender components under running water.

- **Jar, Lid, and Filter:** These components are washable with water and are also dishwasher safe.
- **Blender Base:** The entire unit, including the base, is washable with water. However, **prolonged immersion of the base is not recommended.** Wipe the base with a damp cloth or rinse carefully, ensuring the charging port remains dry.

5.2 Self-Cleaning Function

For quick cleaning, add water and a drop of dish soap to the blending jar. Secure the lid and run a 30-second blending cycle. Rinse the jar thoroughly afterward.

5.3 Drying and Storage

After cleaning, ensure all parts are completely dry before reassembling or storing. Store the blender in a clean, dry place away from direct sunlight.

6. TROUBLESHOOTING

If you encounter issues with your Devan Portable Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Blender does not start	Low battery; Jar not securely attached; Overload protection activated.	Charge the blender fully; Ensure the jar is twisted and locked onto the base; Reduce ingredients and restart.
Blades are jammed	Too many ingredients; Ingredients are too large or hard; Insufficient liquid.	Press the Anti-clockwise button to reverse blades; Reduce ingredient size; Add more liquid; Gently shake the blender.
Leaking from the jar	Lid not properly sealed; Jar not properly attached to base.	Ensure the lid is tightly screwed on; Ensure the jar is securely locked onto the base.
Charging light flickers or does not come on	Charging port is wet; Cable is not properly connected; Faulty cable/adapter.	Ensure charging port is completely dry before charging; Reconnect the USB-C cable firmly; Try a different USB-C cable or power adapter.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Devan
Model Number	A11
Power	300 Watts
Capacity	24 oz (700 ml)
Battery	6000mAh Lithium Polymer (included)
Voltage	7.4 Volts
Material	BPA Free
Product Dimensions	2.7"D x 2.7"W x 8"H
Item Weight	1.96 pounds
Special Feature	Portable, Anti-Jamming, Bidirectional Blade Rotation
Power Source	Battery Powered
Number of Speeds	1

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

The Devan Portable Blender Model A11 comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

8.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your Devan Portable Blender, please contact

our customer support team. Refer to your purchase documentation or the Devan brand store on Amazon for contact details.

We are committed to providing excellent service and support for your Devan product.