

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Red Replacement Spool Cover for Cordless Grass Trimmer EasyGrassCut Series

Bosch F016F05800

Bosch Red Replacement Spool Cover Instruction Manual

Model: F016F05800

PRODUCT OVERVIEW

This document provides essential information for the Bosch Red Replacement Spool Cover, designed for specific Bosch EasyGrassCut cordless grass trimmer models. This component is crucial for the proper functioning and safety of your grass trimmer, protecting the cutting line spool during operation.



A close-up view of the red Bosch replacement spool cover. The cover is circular with a slightly raised center, featuring the "BOSCH" logo and a circular Bosch emblem. Arrows indicating rotation are embossed on the surface. The side shows textured gripping areas.

SAFETY INFORMATION

Always ensure the grass trimmer is switched off and the battery is removed before attempting any installation or maintenance.

- Use only genuine Bosch replacement parts to ensure compatibility and maintain product safety.
- Keep hands and fingers clear of moving parts during installation.
- Do not operate the grass trimmer without the spool cover properly installed.
- Store the replacement part in a dry, safe place away from children.

COMPATIBILITY

This replacement spool cover (Part Number F016F05800) is specifically designed for the following Bosch EasyGrassCut cordless grass trimmer models:

- EasyGrassCut 18V-230 (Type Number: 3600HC1A02)
- EasyGrassCut 18V-260 (Type Number: 3600HC1C07)
- EasyGrassCut 18V-26 (Type Number: 3600HC1C06)
- EasyGrassCut 3 (Type Number: 3600HC1H02)
- EasyGrassCut 26 (Type Number: 3600HC1J02)

Important:

Always verify the type number on your grass trimmer to ensure correct part compatibility. Using an incompatible part may lead to damage or unsafe operation.

INSTALLATION INSTRUCTIONS

1. **Safety First:** Ensure the grass trimmer is turned off and the battery pack is removed before proceeding.
2. **Remove Old Cover:** If replacing an existing cover, gently but firmly twist the old spool cover counter-clockwise (or as indicated by arrows on the cover) to unlock and remove it from the trimmer head.
3. **Inspect Spool:** Check the cutting line spool for any damage or entanglement. Ensure the line is properly wound.
4. **Align New Cover:** Place the new red replacement spool cover onto the trimmer head, aligning the tabs or grooves on the cover with the corresponding slots on the trimmer head.
5. **Secure Cover:** Press down firmly and twist the cover clockwise until it clicks into place, indicating it is securely locked. Ensure it cannot be easily removed by pulling.
6. **Final Check:** Verify that the cover is flush with the trimmer head and there are no gaps.

MAINTENANCE

The spool cover requires minimal maintenance.

- **Cleaning:** After each use, clean the spool cover with a damp cloth to remove grass clippings, dirt, and debris. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly inspect the cover for cracks, wear, or damage. Replace the cover immediately if any damage is observed to prevent injury or further damage to the trimmer.
- **Storage:** Store the trimmer with the cover installed in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Spool cover does not fit	Incorrect model compatibility.	Verify your trimmer's type number against the compatibility list. Ensure you have the correct replacement part (F016F05800).
Spool cover is loose after installation	Not fully engaged or locked.	Ensure the cover is pressed down firmly and twisted clockwise until it clicks securely into place.

Problem	Possible Cause	Solution
Spool cover is damaged quickly	Excessive impact or wear.	Avoid hitting hard surfaces with the trimmer head. Replace the cover if damaged.

SPECIFICATIONS

Part Number: F016F05800

Manufacturer: Bosch

Color: Red

Dimensions (Packaging): 10.6 x 10.3 x 3.5 cm (4.17 x 4.06 x 1.38 inches)

Weight: 25 grams (0.88 ounces)

Components Included: 1x Spool Cover

Compatibility: Bosch EasyGrassCut 18V-230, 18V-260, 18V-26, 3, 26 Series

WARRANTY AND SUPPORT

For warranty information and customer support regarding your Bosch product or this replacement part, please refer to the documentation provided with your original Bosch EasyGrassCut grass trimmer or visit the official Bosch website.

You can also contact Bosch customer service directly for assistance with part identification or installation.

[Visit the Official Bosch Store on Amazon](#)