



[Manuals.plus](#) /

› [Dirt Devil](#) /

› [Dirt Devil Full-Size Carpet Cleaner FD50300 Instruction Manual](#)

Dirt Devil FD50300

Dirt Devil Full-Size Carpet Cleaner FD50300 Instruction Manual

Model: FD50300

INTRODUCTION

This manual provides instructions for the safe and effective operation and maintenance of your Dirt Devil Full-Size Carpet Cleaner, model FD50300. Please read all instructions carefully before using the appliance.

The Dirt Devil Full-Size Carpet Cleaner is designed for cleaning carpets and removing tough dirt and stains, including pet messes. It features powerful extraction, an antimicrobial brush roll, and dual cleaning modes for versatile use.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only Dirt Devil cleaning products intended for use with this machine.
- Do not immerse. Use only on surfaces moistened by the cleaning process.

SETUP AND ASSEMBLY

Your Dirt Devil Full-Size Carpet Cleaner comes partially assembled. Follow these steps to prepare your machine for first use.

1. Handle Assembly

1. Insert the upper handle into the main body of the cleaner until it clicks securely into place.
2. Ensure the handle is firmly attached before proceeding.

2. Filling the Clean Water Tank

The machine features a dual tank system for clean and dirty water.

- Remove the clean water tank from the machine.
- Unscrew the cap and fill the tank with warm tap water up to the indicated fill line.
- Add the recommended amount of Dirt Devil carpet cleaning solution (e.g., AD31926 Pet Carpet Cleaner Solution) to the tank. Refer to the solution bottle for exact measurements.
- Securely replace the cap and reinsert the clean water tank into the machine until it locks into position.



Image: The dual tank system, highlighting the clean and dirty water tanks.

OPERATING INSTRUCTIONS

Follow these steps for effective carpet cleaning.

1. Preparing the Area

- Vacuum the carpet thoroughly to remove loose dirt and debris.
- Move furniture out of the area to be cleaned.
- Test a small, inconspicuous area of the carpet for colorfastness before full application.

2. Selecting a Cleaning Mode

Your carpet cleaner offers two cleaning modes:

- **Deep Clean Mode:** For thorough cleaning and removal of stubborn stains. This mode dispenses more water and

solution.

- **Quick Clean Mode:** For a rapid refresh with faster drying times (approximately 30 minutes). This mode dispenses less water and solution.

Turn the mode selector dial on the machine to choose your desired cleaning mode.



Image: Mode selector dial for Deep Clean and Quick Clean options.

Your browser does not support the video tag.

Video: Demonstrates the Dirt Devil Full-Size Carpet Cleaner in action, highlighting both Quick Clean and Deep Clean modes for effective carpet cleaning and pet mess removal.

3. Cleaning Your Carpet

- Plug the machine into a grounded outlet.
- Press the power button to turn on the cleaner.
- To dispense cleaning solution, press the trigger on the handle while pushing the machine forward slowly over the carpet.

- Release the trigger and pull the machine backward slowly over the same area to extract the dirty solution.
- Overlap passes slightly to ensure complete coverage.
- Continue cleaning in sections until the entire area is complete or the clean water tank is empty.
- For heavily soiled areas or pet stains, repeat passes as necessary. The powerful extraction and antimicrobial brush roll are designed to lift tough dirt and stains.

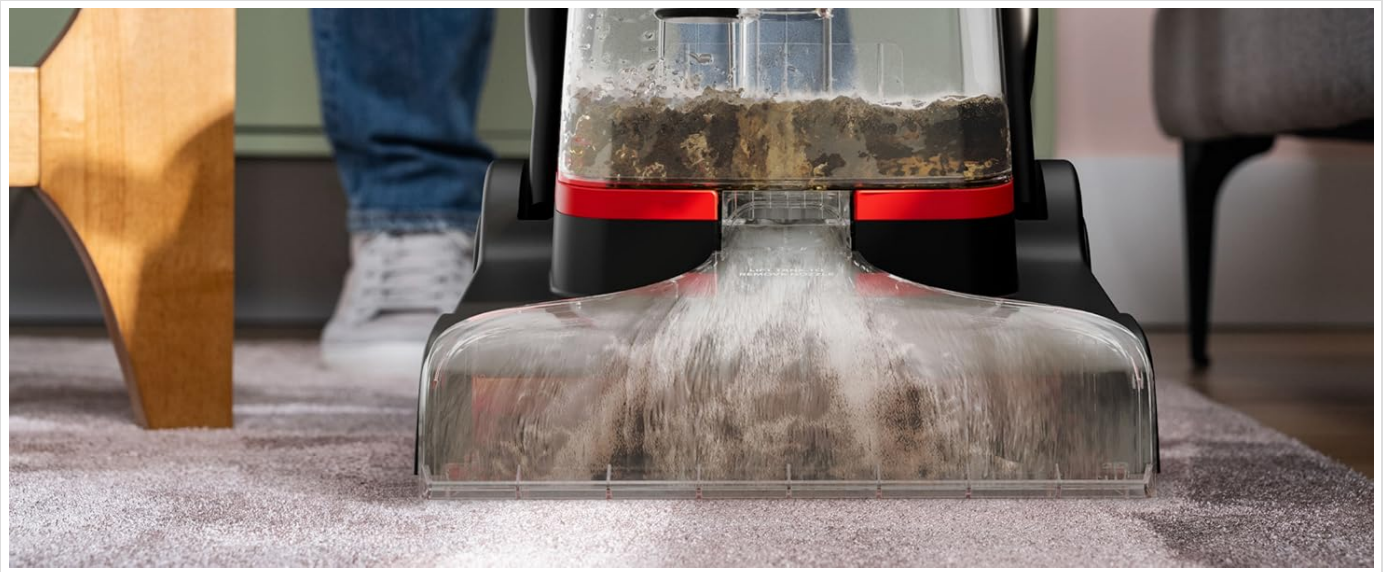


Image: The carpet cleaner performing powerful extraction on a soiled carpet.



Image: The carpet cleaner effectively removing pet messes.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your carpet cleaner.

1. Emptying and Cleaning the Dirty Water Tank

- When the dirty water tank is full, or after each use, remove it from the machine.
- Carefully pour out the dirty water into a sink or drain.
- Rinse the tank thoroughly with clean water to remove any residue.
- Allow the tank to air dry before reassembling.



Image: Emptying the dirty water tank for easy clean-up.

2. Cleaning the Brush Roll

The antimicrobial brush roll helps prevent odor-causing bacteria. Clean it regularly to maintain performance.

- Ensure the machine is unplugged.
- Access the brush roll area (refer to diagrams in the full manual if needed for specific removal instructions).
- Remove any hair, threads, or debris wrapped around the brush roll.
- Rinse the brush roll under running water if necessary and allow it to dry completely before reinstallation.

TWO CLEANING MODES

DEEP CLEAN & QUICK CLEAN



Image: The antimicrobial brush roll designed to loosen and lift stains.

3. Storing the Machine

- Ensure both clean and dirty water tanks are empty and clean.
- Wipe down the exterior of the machine with a damp cloth.
- Store the carpet cleaner in a dry, protected area.

TROUBLESHOOTING

If you encounter issues with your carpet cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure plug is fully inserted. Check power outlet with another appliance. Reset circuit breaker if necessary.
No solution dispensing.	Clean water tank empty; tank not seated correctly; spray nozzle clogged.	Refill clean water tank. Re-seat tank firmly. Clean spray nozzle if visible blockage.
Poor suction.	Dirty water tank full; dirty water tank not seated correctly; nozzle/hose clogged.	Empty dirty water tank. Re-seat tank firmly. Check for and clear any clogs in the nozzle or hose.
Brush roll not spinning.	Debris wrapped around brush roll; belt broken.	Unplug machine and remove any debris from brush roll. If belt is broken, contact customer support.
Excessive foam.	Too much cleaning solution used; using non-compatible solution.	Reduce amount of solution. Use only Dirt Devil brand cleaning solutions.

SPECIFICATIONS

Feature	Detail
Brand	Dirt Devil
Model Number	FD50310CK
Item Model Number	FD50310CK
Cleaning Modes	Deep Clean, Quick Clean
Brush Roll	Antimicrobial
Tank System	Dual (Clean & Dirty Water)
First Available Date	December 8, 2025

WARRANTY AND CUSTOMER SUPPORT

For warranty information or if you require further assistance, please contact Dirt Devil customer support. Keep your purchase receipt for warranty claims.

Contact Information: Refer to the official Dirt Devil website or your product packaging for the most up-to-date customer service contact details.