



[Manuals.plus](#) /

› [Amazon Basics](#) /

› Amazon Basics Portable 4-Foot Rectangular Folding Table User Manual (Model AMZ-4F2142-WG)

Amazon Basics AMZ-4F2142-WG

Amazon Basics Portable 4-Foot Rectangular Folding Table User Manual

Model: AMZ-4F2142-WG

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operation](#)

[Folding & Storage](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

This manual provides instructions for the Amazon Basics Portable 4-Foot Rectangular Folding Table. Designed for versatility and convenience, this table features four adjustable height settings, a carrying handle for easy transport, and a sturdy construction suitable for both indoor and outdoor events. Its innovative fold-in-half design allows for effortless setup and compact storage.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Pinch Points:** Exercise caution during setup, adjustment, and folding to avoid pinching fingers or hands in moving parts.
- **Stability:** Always ensure the table is fully unfolded, and all locking mechanisms are engaged before placing items on it. Distribute weight evenly across the tabletop.
- **Weight Limit:** Do not exceed the recommended weight capacity of the table. Overloading can cause collapse and injury.
- **Protective Foot Caps:** The table is equipped with premium protective foot caps to prevent scratches and marks on floors. Ensure they are properly seated before use.
- **Indoor/Outdoor Use:** While suitable for outdoor use, avoid prolonged exposure to harsh weather conditions to maintain product longevity.
- **Children:** Keep children away from the table during setup and folding. Supervise children when they are around the

table.

3. SETUP INSTRUCTIONS

Follow these steps to set up your Amazon Basics Portable Folding Table:

1. **Unfold the Table:** Place the folded table on a flat, stable surface. Gently pull the two halves of the tabletop apart until it is fully extended.

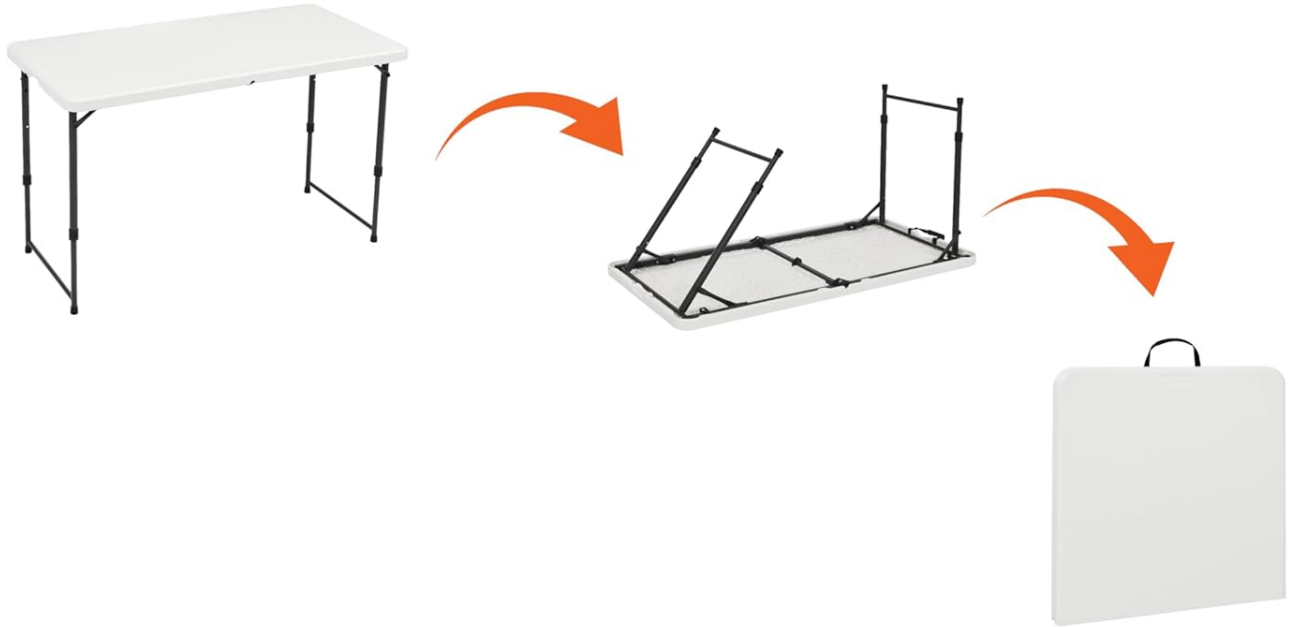


Image: The table in its folded and unfolded state, highlighting key features like the carrying handle and leg mechanisms.

 
2. **Extend the Legs:** Flip the table over so the underside is facing up. Locate the folded legs. Swing each leg assembly outwards until they are fully extended.

Space-Saving Design

4 corner buttons - easy 1-touch folding/unfolding



Convenient carrying
handle

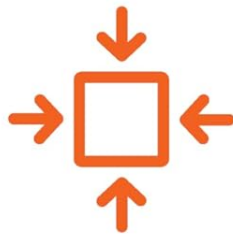

Fold-in-half design



15.8 lbs / 7.1 kg

Image: Visual guide for folding and unfolding the table, demonstrating the space-saving design.

3. **Secure the Legs:** Ensure the double gravity falling lock mechanisms engage automatically, securing the legs in place. You should hear a click as they lock.



Image: Close-up of the leg folding mechanism, showing the button to press for release.

4. **Check Stability:** Before use, gently shake the table to confirm all parts are securely locked and the table is stable.

4. OPERATING INSTRUCTIONS (HEIGHT ADJUSTMENT)

The table features 4 adjustable height settings for versatile use.

1. **Identify Adjustment Buttons:** On each leg, locate the user-friendly pinch-free buttons.
2. **Adjust Height:** Step on the horizontal tube near the bottom of the leg. Simultaneously press the adjustment button on the leg and pull the leg up or push it down to the desired height setting. Ensure both legs on one side are adjusted to the same height. Repeat for the other side.



Step on the tube,
press the button and
pull up/down to
adjust the height.

Image: Step-by-step visual for adjusting the table's height.

3. **Confirm Lock:** Release the button and ensure the leg locks securely into the chosen height position.

4 Adjustable Height Settings

Easy to adjust



Image: Overview of the four available height settings for the table.

5. FOLDING AND STORAGE

To fold the table for compact storage:

1. **Lower the Legs:** Adjust the legs to their lowest setting by pressing the adjustment buttons and pushing the legs fully inwards.
2. **Fold the Legs:** Locate the buttons on the underside of the table that release the leg locking mechanisms. Press these buttons and fold each leg assembly inwards towards the center of the table.

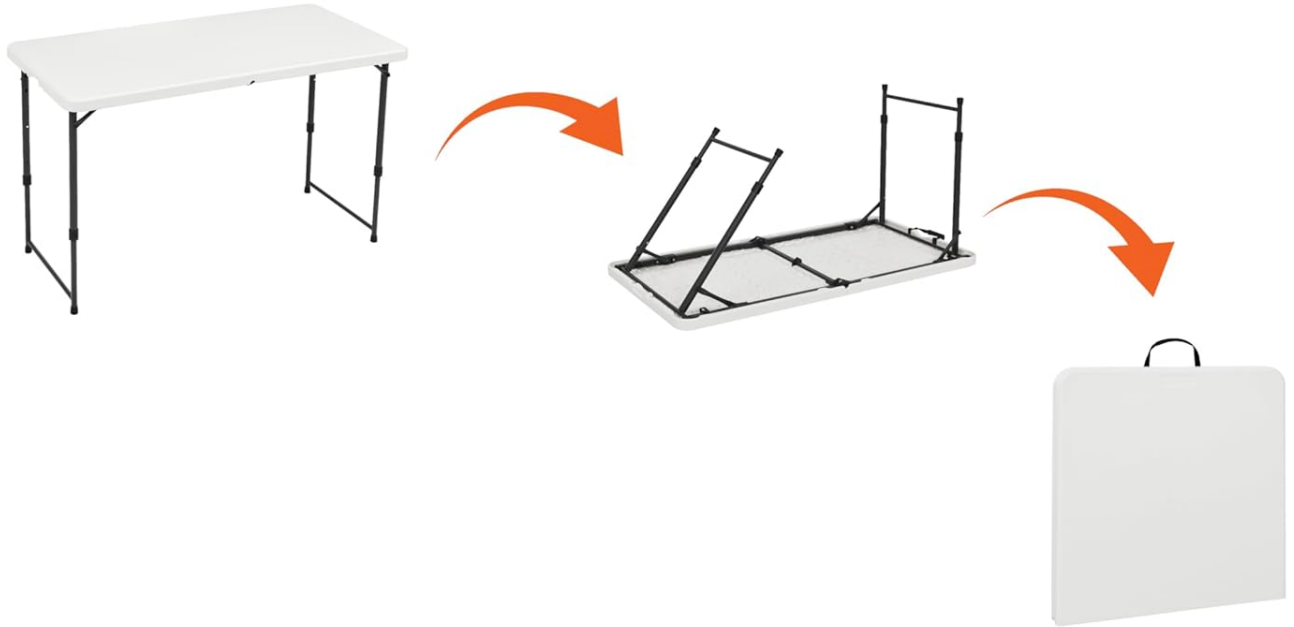


Image: Close-up of the leg folding mechanism, showing the button to press for release.

 
- 3. Fold the Tabletop:** Once the legs are folded, gently bring the two halves of the tabletop together. The table will fold in half, securing with a latch.

Space-Saving Design

4 corner buttons - easy 1-touch folding/unfolding



Convenient carrying
handle

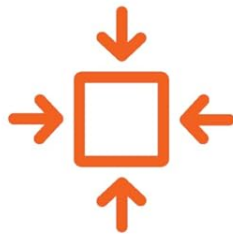

Fold-in-half design



15.8 lbs / 7.1 kg

Image: Visual guide for folding and unfolding the table, demonstrating the space-saving design.

- 4. Carry and Store:** Use the integrated carrying handle for easy transport. Store the folded table in a dry, protected area.



Portable Folding Table

4 ft / 1.2 m folding table with pinch-free setup, sturdy legs, and locking system for your portable convenience and space-saving storage.

Image: The table in a typical use scenario, highlighting its portability and functionality.

6. MAINTENANCE

To ensure the longevity and optimal performance of your folding table, follow these maintenance guidelines:

- **Cleaning:** Wipe the tabletop and frame with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals that could damage the surface.
- **Drying:** Ensure the table is completely dry before folding and storing, especially after outdoor use, to prevent mold or mildew.
- **Storage:** Store the table in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, bolts, and locking mechanisms to ensure they are tight and functioning correctly. Tighten any loose fasteners.

7. TROUBLESHOOTING

If you encounter any issues with your Amazon Basics Portable Folding Table, refer to the following common

troubleshooting tips:

- **Table Wobbles:**

- Ensure all legs are fully extended and locked into position.
- Check that the table is placed on a flat, even surface.
- Verify that all height adjustment pins are securely engaged in their respective holes.

- **Legs Difficult to Adjust/Fold:**

- Apply firm, even pressure to the adjustment buttons.
- Ensure no debris is obstructing the leg mechanisms.
- If adjusting height, ensure you are stepping on the horizontal tube as shown in the operating instructions to relieve pressure.

- **Tabletop Does Not Fold Evenly:**

- Ensure all leg assemblies are fully folded and tucked away before attempting to fold the tabletop.
- Check for any obstructions in the hinge mechanism.

8. SPECIFICATIONS

Brand	Amazon Basics
Model Name	AMZ-4F2142-WG
Product Dimensions (D x W x H)	47.8"D x 23.9"W x 33.9"H
Item Weight	7.18 Kilograms
Frame Material	High Density Polyethylene
Top Material Type	High Density Polyethylene
Color	White
Shape	Rectangular
Number of Height Positions	4
Seating Capacity	4
Indoor Outdoor Usage	Indoor, Outdoor
Required Assembly	No
UPC	840324418460

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Amazon Basics website.

Return Policy: This product is eligible for a refund/replacement within 30 days of purchase, as per Amazon's return policy.



© 2026 Amazon Basics. All rights reserved.