

Jocca Jocca Bladeless Fan (Model B0D1H1RHX8)

Jocca Bladeless Fan

INSTRUCTION MANUAL

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan before cleaning or performing any maintenance.
- Do not use the fan near water or in damp locations.
- Keep the fan away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Ensure the power cord is not damaged or pinched. Do not operate the fan with a damaged cord or plug.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not insert fingers or foreign objects into any openings of the fan.
- Use only on a stable, level surface.
- Do not cover the fan during operation.

2. PRODUCT OVERVIEW

2.1 Components

- Bladeless Fan Unit
- Remote Control
- Power Cord (integrated)



Figure 2.1: Front view of the Jocca Bladeless Fan, showcasing its sleek, modern design without visible blades.

2.2 Control Panel



Figure 2.2: Close-up of the fan's integrated touch control panel, showing buttons for Swing, Speed, On/Off, Timer, and Light functions.

2.3 Remote Control



Figure 2.3: The compact remote control for the fan, featuring buttons for power, speed, timer, swing, and LED light color selection (White, Green, Purple, Blue).

3. SETUP

3.1 Unpacking

1. Carefully remove the fan and all accessories from the packaging.
2. Check for any signs of damage. If damaged, do not use and contact customer support.
3. Retain the packaging for future storage or transport.

3.2 Placement

- Place the fan on a firm, level, and stable surface.
- Ensure there is adequate space around the fan for proper air circulation. Avoid placing it directly against walls or furniture.
- Keep the fan away from curtains, drapes, or any objects that could obstruct the air intake or outlet.

3.3 Power Connection

- Plug the power cord into a standard electrical outlet (220-240V, 50Hz).
- Ensure the voltage of your power supply matches the fan's requirements.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Functions

Button	Function
On/Off	Powers the fan on or off.
Speed	Cycles through fan speeds: Low, Mid, High.
Swing	Activates or deactivates automatic oscillation.
Timer	Sets the auto-off timer: 0.5h, 1h, 2h, 4h, 7.5h.
Light	Cycles through LED light colors (White, Green, Purple, Blue) and turns off the light.

4.2 Remote Control Functions

Button	Function
ON/OFF	Powers the fan on or off.
SPEED	Cycles through fan speeds: Low, Mid, High.
TIMER	Sets the auto-off timer: 0.5h, 1h, 2h, 4h, 7.5h.
SWING	Activates or deactivates automatic oscillation.
WHITE / GREEN / PURPLE / BLUE	Directly selects the corresponding LED light color.

4.3 Speed Adjustment

Press the **Speed** button on the control panel or remote control to cycle through the three available fan speeds: Low, Mid, and High. The indicator lights on the panel will show the current speed setting.

4.4 Oscillation

Press the **Swing** button on the control panel or remote control to activate or deactivate the automatic horizontal oscillation feature. This distributes air more widely across the room.

4.5 LED Light Modes

Press the **Light** button on the control panel to cycle through the four decorative LED light colors (White, Green, Purple, Blue) and to turn the light off. On the remote control, you can directly select the desired color using the dedicated color buttons.

4.6 Timer Function

Press the **Timer** button on the control panel or remote control to set the fan to automatically turn off after a specified period. Available settings are 0.5 hours, 1 hour, 2 hours, 4 hours, and 7.5 hours. The corresponding indicator light will illuminate.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- For dust accumulation in the air intake or outlet, use a soft brush or a vacuum cleaner with a brush attachment to gently remove dust.
- Do not immerse the fan in water or allow water to drip into the motor housing.

5.2 Storage

- If storing the fan for an extended period, clean it thoroughly as described above.
- Store the fan in its original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Fan is not blowing air strongly.	Fan speed is set to Low.	Increase the fan speed using the Speed button.
	Air intake/outlet blocked.	Ensure there are no obstructions around the fan. Clean any dust accumulation.
Remote control is not working.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
	Obstruction between remote and fan.	Ensure there is a clear line of sight between the remote and the fan's sensor.
LED light is not working.	Light function is off.	Press the Light button on the control panel or remote to cycle through colors and turn it on.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	Jocca Bladeless Fan (B0D1H1RHX8)
Power Supply	220-240V ~ 50Hz
Wattage	60 Watts
Fan Speeds	3 (Low, Mid, High)
Oscillation	Automatic Horizontal
Timer	0.5h, 1h, 2h, 4h, 7.5h
LED Light Colors	White, Green, Purple, Blue
Dimensions (approx.)	17f. x 29.2an. x 57.2al. cm (17cm D x 29.2cm W x 57.2cm H)
Noise Level	Silent Operation

8. WARRANTY AND SUPPORT

This Jocca product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact Jocca customer service. Contact details can typically be found on the product packaging or on the official Jocca website.

Please keep your purchase receipt as proof of purchase for warranty purposes.