

[Manuals.plus](#) /

› [AMIR](#) /

› AMIR Digital Alarm Clock (Model WA33KM-AM-US) Instruction Manual

AMIR WA33KM-AM-US

AMIR Digital Alarm Clock (Model WA33KM-AM-US) Instruction Manual

Your guide to setting up and operating your AMIR Digital Alarm Clock.

PRODUCT OVERVIEW

The AMIR Digital Alarm Clock (Model WA33KM-AM-US) is designed for clear time display and reliable alarm functions. It features a large LED display, adjustable brightness, dual power options, and smart alarm settings to enhance your daily routine.



Image: Front view of the AMIR Digital Alarm Clock displaying '15:00' in large white LED digits.

KEY FEATURES

- **Extra-Large LED Display:** 6.3-inch wide display for easy readability from a distance.
- **Dual Power Options:** Operates via USB-C for continuous display or AAA batteries for power-saving mode and time memory.
- **Smart Alarm & Snooze:** Customizable alarm schedules (Mon-Fri, Mon-Sat, daily, weekends) and a 9-minute snooze function.
- **Automatic DST Adjustment:** Automatically adjusts for Daylight Saving Time.
- **Adjustable Brightness:** 4 brightness levels (Bright/Medium/Low/Ultra Low) and an auto-dimming night mode (7 PM–7 AM).

PACKAGE CONTENTS

- AMIR Digital Alarm Clock
- USB-C Power Cable
- User Manual



Image: The AMIR Digital Alarm Clock, its USB-C cable, and the instruction manual laid out on a surface.

SETUP

Powering the Clock

The AMIR Digital Alarm Clock can be powered in two ways:

- **USB-C Power (Recommended):** Connect the provided USB-C cable to the clock and a compatible USB power adapter (not included). This ensures the display remains continuously on and provides full time memory function.
- **AAA Batteries (Backup/Power Saving):** Insert 3 AAA batteries (not included) into the battery compartment on the back. When running on battery power alone, the screen will turn off after 10 seconds to conserve energy. The clock will retain time settings in this mode.

EASY TO SET

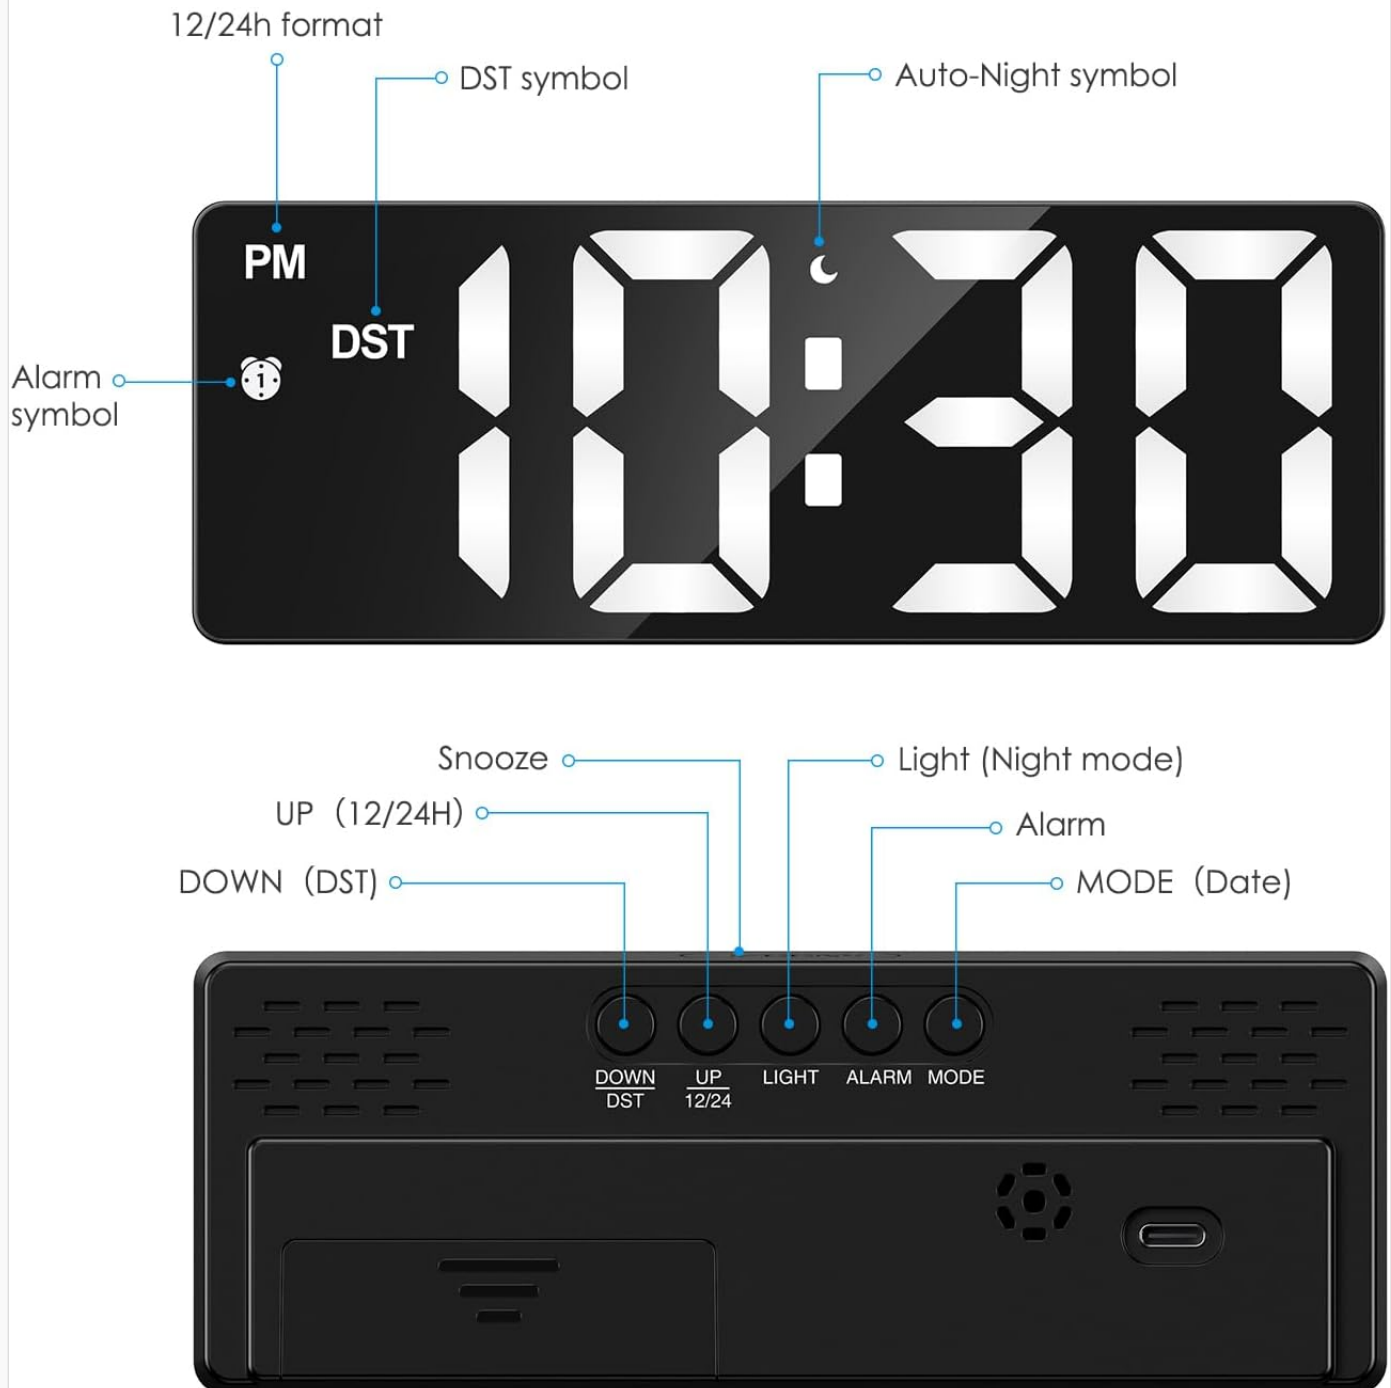


Image: Illustration of the dual power supply options: AAA battery compartment and USB-C input.

Initial Time Setting

Upon first power-up or after a full power loss without battery backup, you may need to set the time.

1. Press and hold the **MODE** button on the back for 2 seconds to enter time setting mode.

2. The hour digits will flash. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **MODE** again to switch to minute setting. The minute digits will flash. Use **UP** or **DOWN** to adjust the minutes.
4. Press **MODE** one more time to confirm and exit time setting.

DUAL POWER SUPPLY



3AAA (not included)
Screen will auto-off in 10
seconds on battery power.



USB (included)
Backlight is always on



Image: Rear view of the clock highlighting the control buttons for easy setup.

12/24 Hour Format

To switch between 12-hour and 24-hour display formats, briefly press the **UP (12/24H)** button on the back of the clock.

Your browser does not support the video tag.

Video: A demonstration of how to easily set the time and alarm on the AMIR Digital Alarm Clock.

OPERATING INSTRUCTIONS

Setting the Alarm

The clock supports dual alarms. Follow these steps to set an alarm:

1. Press and hold the **ALARM** button on the back for 2 seconds to enter alarm setting mode. The hour digits for Alarm 1 will flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **ALARM** again to switch to minute setting. Use **UP** or **DOWN** to adjust the minutes.
4. Press **ALARM** again to select the alarm frequency: Mon-Fri, Mon-Sat, Daily, or Weekends only. Use **UP** or **DOWN** to cycle through options.
5. Press **ALARM** one more time to confirm Alarm 1 settings.
6. To set Alarm 2, repeat steps 1-5.

Activating/Deactivating Alarm

Briefly press the **ALARM** button to toggle Alarm 1 or Alarm 2 on/off. An alarm icon will appear on the display when an alarm is active.

Your browser does not support the video tag.

Video: A step-by-step guide on how to set the alarm function on the digital clock.

Snooze Function

When the alarm sounds, press the large **SNOOZE** button on top of the clock to activate a 9-minute snooze. The alarm will sound again after 9 minutes. To turn off the alarm completely, press any other button on the back.

Touch Snooze

Press the "SNOOZE" button for extra 9 minutes sleep



Image: The large snooze button on top of the clock and visual representations of the four alarm modes.

Adjusting Brightness

The clock offers 4 levels of brightness and an auto-dimming night mode:

- Briefly press the **LIGHT** button on the back to cycle through brightness levels: Bright, Medium, Low, Ultra Low.
- **Night Mode:** The display will automatically dim between 7 PM and 7 AM.
- When operating on battery power, the screen turns off after 10 seconds. Tap any button to temporarily illuminate the display.

5-Level Brightness

Auto night brightness (19:00-06:59)



High



Medium



Low



Ultra low



Off

Image: Visual guide to the five brightness levels, including 'Off' for the display.

Daylight Saving Time (DST)

To activate or deactivate Daylight Saving Time, press the **DOWN (DST)** button on the back. The clock will adjust automatically.

Your browser does not support the video tag.

Video: Instructions on how to set the brightness, activate night mode, and adjust for Daylight Saving Time.

MAINTENANCE

- Clean the clock with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Keep the clock away from extreme temperatures, direct sunlight, and moisture.
- If using batteries, replace them when the display becomes dim or unresponsive.

TROUBLESHOOTING

- **Screen turns off after 10 seconds:** This is normal behavior when the clock is powered by batteries only (power-saving mode). To keep the screen always on, connect the clock via USB-C.
- **Clock does not light up:** Ensure the USB power plug is working correctly or replace the batteries. Verify that the positive and negative terminals of the AAA batteries are installed correctly.
- **Time/Alarm difficult to set:** Refer to the 'Initial Time Setting' and 'Setting the Alarm' sections for detailed, step-by-step instructions.

SPECIFICATIONS

Feature	Detail
Brand	AMIR
Model Number	WA33KM-AM-US
Color	Black
Display Type	Digital LED
Power Source	Battery Powered (3 AAA, not included) + Type-C USB
Special Features	Adjustable Brightness, Alarm, Large Display, Snooze, Auto DST
Product Dimensions	1.49 x 1.5 x 1.57 inches
Item Weight	4.2 ounces
Material	Acrylonitrile Butadiene Styrene (ABS)

WARRANTY AND SUPPORT

AMIR offers a Lifetime Warranty for this product. For any inquiries or support, please refer to the contact information provided with your purchase or on the official AMIR website.

© 2026 AMIR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question