

JOYIN Princess Tent

JOYIN Princess Tent Instruction Manual

Model: Princess Tent

1. PRODUCT OVERVIEW

The JOYIN Princess Tent is a large, castle-themed playhouse designed for children's indoor and outdoor imaginative play. This portable and lightweight tent provides a dedicated space for creative adventures, inspiring hours of fun.



Image: The JOYIN Princess Tent, showcasing its vibrant pink castle design with a pointed roof and open entrance.

2. FEATURES

- **Comprehensive Set:** Includes a graphic tent with castle motifs, a convenient carrying tote, roof anchors, 4 sturdy poles, and floor anchors.
- **Easy Assembly:** Designed for quick and hassle-free setup.
- **Kid-Friendly Design:** Enchanting castle theme with majestic towers, royal motifs, vibrant colors, and intricate patterns.
- **Spacious Interior:** Provides ample room for children to play and explore comfortably.
- **Quality Materials:** Crafted from durable and safe materials, easy to clean.
- **Portable:** Lightweight design facilitates easy installation and transport for both indoor and outdoor use.

3. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your Princess Tent:

1. **Unpack the Tent:** Carefully remove the tent from its carrying tote. The tent is designed to pop open automatically.
2. **Assemble the Poles:** The tent comes with 4 sturdy poles. Connect the segments of each pole if they are not already joined.
3. **Insert Poles into Sleeves:** Locate the fabric sleeves or pockets inside the tent structure. Insert one assembled pole into each sleeve, guiding it gently until it reaches the end.
4. **Secure the Poles:** Ensure the poles are securely seated in the designated pockets at the top and bottom of the tent to provide stability.



Image: A visual guide illustrating the four-step assembly process, from unpacking to securing the poles.

To disassemble, simply reverse the steps: remove the poles, and the tent can be folded back into its compact shape for storage in the carrying tote.

4. OPERATING INSTRUCTIONS (PLAY & USAGE)

The JOYIN Princess Tent is designed for imaginative play both indoors and outdoors. Its spacious interior allows for multiple children and toys.

- **Entrance:** The tent features a roll-up door that can be tied open for easy access or left down for a more enclosed play space.
- **Ventilation:** Mesh windows provide airflow and allow for adult supervision while children play inside.
- **Imaginative Play:** Encourage children to use the tent as a castle, a secret hideaway, or any other setting their imagination creates.



FAIRYTALE KINGDOM PLAY

Create a magical world for your little girl to play.

Image: A child entering the tent, demonstrating the accessible entrance for play.



Image: The interior of the tent, showing a child and a toy, highlighting the ample space for activities.

5. MAINTENANCE

- **Cleaning:** The tent is made from easy-to-clean materials. Wipe down surfaces with a damp cloth and mild soap if necessary. Allow to air dry completely before folding and storing.
- **Storage:** When not in use, disassemble the tent and store it in its provided carrying tote in a cool, dry place away from direct sunlight to prolong its lifespan.



EASY-TO-CLEAN & DURABLE
Effortlessly maintain a fresh and bright tent with minimal care.

Image: A hand cleaning the tent fabric, demonstrating its easy-to-clean surface.

6. SAFETY INFORMATION

- **Adult Supervision:** Always ensure children are supervised by an adult while playing in or around the tent.
- **Fire Safety:** Keep the tent away from open flames, heat sources, and electrical heaters. The fabric may not be fire-resistant.
- **Regular Inspection:** Periodically check the tent for any signs of wear, tear, or damage to poles or fabric. Discontinue use if damaged.
- **Age Recommendation:** Suitable for children aged 3 years and up.

7. SPECIFICATIONS

Attribute	Value
Package Dimensions	16.06 x 12.24 x 2.24 inches

Item Weight	2.33 pounds
ASIN	B0D1KMLQNL
Manufacturer Recommended Age	3 years and up
Manufacturer	Joyin US Corp





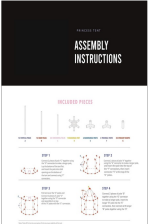
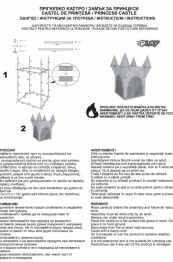


Image: The tent with overlaid text indicating its approximate dimensions: 41.5 inches in width and 48 inches in height.

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your JOYIN Princess Tent, please refer to the contact information provided on the product packaging or visit the official JOYIN website. Please retain your proof of purchase for any warranty claims.

Related Documents - Princess Tent

	<p>Trampoline Sprinkler Installation and Usage Guide</p> <p>Instructions for installing and using a trampoline sprinkler for outdoor summer fun. Learn how to connect the sprinkler to your water source and attach it to your trampoline.</p>
	<p>Costzon Kids Play Tent Assembly Instructions</p> <p>Step-by-step assembly guide for the Costzon Kids Play Tent, including a list of accessories and general safety warnings.</p>
	<p>Kids Tent User Manual: Assembly and Care Guide</p> <p>Comprehensive user manual for the Kids Tent, providing step-by-step assembly instructions, parts list, dimensions, and care guidelines for this playhouse.</p>
	<p>RedFinches Princess Tent Assembly Instructions</p> <p>Step-by-step guide for assembling the RedFinches Princess Tent, featuring clear instructions and detailed visual descriptions of each assembly stage.</p>
	<p>Ejoy Princess Tent Assembly Instructions - 55" x 55" x 54" Kids Play Tent Guide</p> <p>Detailed, step-by-step assembly instructions for the Ejoy Princess Tent (55 in. L x 55 in. W x 54 in. H). Includes a parts list and visual descriptions for easy setup of this kids' play tent.</p>
	<p>IPLAY Princess Castle Assembly Instructions and Safety Warnings</p> <p>Comprehensive guide for assembling the IPLAY Princess Castle, including safety precautions and usage guidelines. Suitable for children's play.</p>