

Manuals.plus /

> Daewoo /

> Daewoo 40DM63FA Smart TV User Manual

Daewoo 40DM63FA

Daewoo 40DM63FA Smart TV User Manual

Model: 40DM63FA | Brand: Daewoo

1. INTRODUCTION

Thank you for purchasing the Daewoo 40DM63FA Smart TV. This television features a 40-inch Full HD (1920 x 1080 pixels) DLED display, offering clear and vibrant visuals. Powered by Android 11, it provides access to a wide range of streaming services and applications, including Netflix, Prime Video, Disney+, and YouTube. The integrated audio system delivers 16W of sound with Dolby Audio support for an immersive viewing experience. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the television. Keep this manual for future reference.

- **Power Supply:** Ensure the power supply voltage matches the rating on the TV's label. Do not overload power outlets.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow to prevent overheating.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Lightning:** During lightning storms or when unused for long periods, unplug the TV from the power outlet.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Daewoo 40DM63FA Smart TV Unit
- Remote Control

- AAA Batteries (for remote control)
- TV Stand Components (2 feet)
- Power Cord
- User Manual (this document)
- Screws for Stand Installation

4. PHYSICAL OVERVIEW

Familiarize yourself with the various parts and connections of your Daewoo Smart TV.



Figure 4.1: Front View. This image displays the front of the Daewoo 40DM63FA Smart TV, highlighting its slim bezels and the central Daewoo branding. The screen shows a vibrant nature scene, indicating its Full HD display capabilities.



Figure 4.2: Angled Front View. This perspective shows the Daewoo 40DM63FA Smart TV from a slight angle, emphasizing its sleek design and the stable placement provided by its two stand feet.



Figure 4.3: Side View (Left). This image illustrates the ultra-slim profile of the Daewoo 40DM63FA Smart TV, showcasing its modern and space-saving design.



Figure 4.4: Side View (Right) with Ports. This view highlights the connectivity options available on the side and rear of the Daewoo 40DM63FA Smart TV, including various input ports for external devices.

Input/Output Ports (Refer to Figure 4.4)

- **HDMI Ports:** For connecting high-definition devices like Blu-ray players, game consoles, or set-top boxes.
- **USB Ports:** For connecting USB storage devices to play media files or for software updates.
- **Antenna/Cable Input:** For connecting an external antenna or cable TV signal.
- **Ethernet (LAN) Port:** For a wired network connection to access internet features.
- **Audio Out:** For connecting external audio systems or headphones.
- **Power Input:** For connecting the power cord.

5. SETUP

5.1 Unpacking and Placement

1. Carefully remove the TV from its packaging. It is recommended to have two people for this.
2. Place the TV face down on a soft, flat surface (e.g., a blanket or foam) to protect the screen.
3. Choose a suitable location for your TV, ensuring it is on a stable surface or securely mounted.

5.2 Stand Installation

If you are not wall-mounting the TV, follow these steps to attach the stand feet:

1. Identify the left and right stand feet.
2. Align each stand foot with the corresponding slots on the bottom of the TV.
3. Secure each foot with the provided screws using a screwdriver.
4. Carefully lift the TV to an upright position and place it on a flat, stable surface.

5.3 Wall Mounting (Optional)

The TV supports VESA wall mounts. Refer to the wall mount kit's instructions for installation. Ensure the wall mount is compatible with the TV's VESA pattern and weight.

5.4 Connecting Peripherals

- **Power:** Connect the power cord to the TV's power input and then to a wall outlet.
- **HDMI Devices:** Connect Blu-ray players, game consoles, or set-top boxes to the HDMI ports.
- **USB Devices:** Insert USB drives into the USB ports for media playback.
- **Antenna/Cable:** Connect your antenna or cable TV signal to the Antenna/Cable input.
- **Network:** For a wired internet connection, connect an Ethernet cable from your router to the TV's LAN port. For wireless, you will configure Wi-Fi during initial setup.

5.5 Initial Power On and Setup Wizard

1. Plug in the TV and press the Power button on the remote control.
2. The TV will display the initial setup wizard. Follow the on-screen prompts to:
 - Select your language.
 - Connect to a Wi-Fi network (if not using wired Ethernet).
 - Sign in with your Google Account to access Android TV features and apps.
 - Scan for available TV channels (if an antenna is connected).
 - Agree to terms and conditions.

6. OPERATING YOUR SMART TV

6.1 Remote Control Overview

The remote control allows you to navigate the TV's functions. Insert the provided AAA batteries into the remote control, observing polarity.

- **Power Button:** Turns the TV on or off.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and select options.
- **Volume Up/Down:** Adjusts the volume level.
- **Channel Up/Down:** Changes TV channels.

- **Home Button:** Returns to the Android TV home screen.
- **Back Button:** Returns to the previous screen or menu.
- **App Buttons:** Dedicated buttons for popular streaming services (e.g., Netflix, Prime Video).
- **Google Assistant Button:** Activates voice control (requires internet connection and Google Account).

6.2 Android TV Interface

The Android TV home screen provides quick access to your favorite apps, live TV, and content recommendations.

- **Apps:** Browse and launch installed applications from the 'Apps' row. You can download more from the Google Play Store.
- **Inputs:** Switch between connected devices (HDMI 1, HDMI 2, etc.) or TV tuner.
- **Settings:** Access TV settings for picture, sound, network, system, and more.

6.3 Picture and Sound Settings

Customize your viewing and listening experience through the settings menu.

- **Picture Modes:** Select from predefined modes (e.g., Standard, Vivid, Movie, Game) or customize settings like Brightness, Contrast, Color, and Sharpness. The TV supports Super Resolution, Blue Stretch, HLG, and HDR10 for enhanced image quality.
- **Sound Modes:** Choose from sound presets (e.g., Standard, Music, Movie) or use the customizable equalizer to fine-tune audio output. Dolby Audio is supported for rich sound.

7. MAINTENANCE

7.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks on the screen, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly on the screen).
- Avoid using abrasive cleaners, waxes, or solvents.

7.2 Storage

If you need to store the TV for an extended period, ensure it is unplugged, clean, and stored in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

8. TROUBLESHOOTING

This section addresses common issues you might encounter. If the problem persists, contact Daewoo customer support.

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet not working; Remote control batteries dead.	Check power cord connection; Test outlet with another device; Replace remote control batteries.

Problem	Possible Cause	Solution
No Picture, but Sound is Present	Incorrect input source selected; External device not powered on or connected properly.	Press the 'Input' button on the remote to select the correct source; Check connections and power of external devices.
No Sound, but Picture is Present	Volume is muted or too low; External audio system not connected or configured correctly.	Press the 'Mute' button or increase volume; Check audio cable connections to external systems; Adjust TV's audio output settings.
Remote Control Not Working	Batteries are dead or inserted incorrectly; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries, ensuring correct polarity; Remove any obstructions; Ensure remote sensor is clear.
Cannot Connect to Wi-Fi	Incorrect password; Router is off or too far; Network interference.	Double-check Wi-Fi password; Move router closer or use wired connection; Restart router and TV.

9. SPECIFICATIONS

Detailed technical specifications for the Daewoo 40DM63FA Smart TV.

Feature	Specification
Brand	Daewoo
Model Number	40DM63FA
Screen Size	40 Inches
Display Type	DLED (Direct LED)
Resolution	Full HD (1920 x 1080 pixels)
Operating System	Android 11
Image Technologies	Super Resolution, Blue Stretch, HLG, HDR10, UHD Scalable
Audio Output Power	16W (2 speakers)
Audio Technologies	Dolby Audio, Customizable Equalizer
Connectivity	Wi-Fi, HDMI, USB, Ethernet (LAN), Antenna/Cable Input, Audio Out
Mounting Compatibility	Wall mount, Tabletop stand
Product Weight	7.75 kg
Year of Model	2018 (as per Amazon listing, likely refers to base model year)

10. WARRANTY AND SUPPORT

Your Daewoo 40DM63FA Smart TV comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Daewoo customer support. Contact information can typically be found on the Daewoo official website or on your product's packaging.

When contacting support, please have your TV's model number (40DM63FA) and serial number ready. The serial number is usually located on a sticker on the back of the TV.

© 2024 Daewoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D1KNG13B>

More documents and user manuals: <https://manuals.plus/>