

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [REBO](#) /
- › [REBO Orchid Wooden Swing Set Model O4.5.00529.0 Instruction Manual](#)

REBO O4.5.00529.0

REBO Orchid Wooden Swing Set Instruction Manual

Model: O4.5.00529.0

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your REBO Orchid Wooden Swing Set. Please read these instructions carefully before assembly and retain them for future reference.

Product Description: The REBO Orchid Wooden Swing Set is a robust outdoor play structure featuring a swing and a slide, constructed from durable untreated wood. It is designed for domestic and private use.

2. SAFETY INFORMATION

- **Age Restriction:** Not suitable for children under 3 years of age.
- **Supervision:** Always use under direct adult supervision.
- **Intended Use:** For domestic and private use only. Not for commercial or public use.
- **Safety Standard:** This product is designed and manufactured in accordance with toy safety standard DIN EN 71.
- **Weight Limit:** Maximum user weight for the swing is 50 kg (110 lbs).
- **Installation:** Ensure the swing set is securely anchored to the ground using the provided ground anchors.
- **Maintenance:** Regularly inspect all components for wear and tear, especially ropes, connections, and wooden parts. Replace damaged parts immediately.
- **Clearance:** Ensure adequate clear space around the swing set to prevent collisions.

3. PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, contact REBO customer support.

- Wooden frame components (untreated wood)
- Swing seat with ropes
- Slide component (Dark Green)
- Galvanized, powder-coated swing brackets
- Assembly hardware (screws, bolts, etc.)
- 4 Ground anchors

- Assembly instructions manual (separate document)



Figure 1: Overview of the REBO Orchid Wooden Swing Set, featuring a natural wood frame, a green swing seat, and a green slide.

4. SETUP AND ASSEMBLY

Assembly requires two adults. Tools required (not included): drill, screwdriver, wrench, measuring tape, level.

1. **Site Selection:** Choose a level, soft surface (e.g., grass, sand) for installation. Ensure sufficient clearance around the swing set (minimum 2 meters in all directions). Avoid placing near fences, trees, or other obstacles.
2. **Unpack Components:** Carefully unpack all components and lay them out. Check against the parts list in the separate assembly instructions.
3. **Wood Preparation:** The wood is untreated. It is recommended to treat the wood with a suitable outdoor wood stain or paint for longevity and weather protection.
4. **Frame Assembly:** Follow the detailed step-by-step instructions provided in the separate assembly manual. Note that the wood is not pre-drilled, so drilling will be required for secure connections.

5. **Attach Swing Brackets:** Secure the galvanized, powder-coated swing brackets to the main beam as per instructions.
6. **Install Swing Seat:** Attach the swing seat ropes to the swing brackets. The ropes are height-adjustable; ensure the swing seat is at an appropriate height for the intended users, allowing feet to touch the ground when seated.
7. **Install Slide:** Securely attach the green slide to the platform structure. Ensure all connections are tight and the slide is stable.
8. **Ground Anchoring:** Crucially, secure the swing set to the ground using the four provided ground anchors. This prevents tipping and ensures stability during use. Dig holes, insert anchors, and backfill with concrete if necessary for maximum stability (concrete not included).
9. **Final Check:** Before first use, thoroughly check all bolts, screws, and connections to ensure they are tight and secure. Verify the stability of the entire structure.



Figure 2: Top-down view illustrating detailed component dimensions: Total length (including slide) 2973mm (117in), Swing arm width 2014mm (79in), Swing height 1841mm (72in), Slide structure height 1872mm (74in), Swing leg base depth 1246mm (49in), Slide leg base depth 720mm (28in).



Figure 3: Front view of the assembled REBO Orchid Swing Set, showing the swing and slide components.

5. OPERATING INSTRUCTIONS

The REBO Orchid Wooden Swing Set is designed for active play. Follow these guidelines for safe operation:

- **Single User Per Swing:** Only one child should use the swing at a time.
- **Proper Seating:** Children should sit properly on the swing seat, holding onto the ropes firmly.
- **Sliding Safely:** Only one child should use the slide at a time. Slide feet first, in a seated position. Ensure the landing area is clear.
- **Adult Supervision:** Always ensure an adult is present to supervise children using the swing set.
- **No Horseplay:** Prohibit pushing, shoving, or other rough play around the swing set.
- **Weather Conditions:** Do not use the swing set during strong winds, rain, or icy conditions.

6. MAINTENANCE

Regular maintenance is crucial for the safety and longevity of your REBO Orchid Wooden Swing Set.

- **Weekly Checks:**

- Inspect all bolts, nuts, and screws for tightness. Tighten as necessary.
- Check ropes for fraying, cuts, or excessive wear. Replace if damaged.
- Examine the swing seat and slide for cracks, sharp edges, or damage.
- Ensure ground anchors are still secure and the structure is stable.

- **Monthly Checks:**

- Inspect wooden components for splinters, cracks, or rot. Sand down splinters. Treat cracks with wood filler if minor, or replace components if severe.
- Check metal parts (brackets, hardware) for rust or corrosion. Clean and treat as needed.

- **Annual Maintenance:**

- Re-treat wooden parts with a suitable outdoor wood preservative, stain, or paint to protect against weather and prolong lifespan.
- Lubricate moving parts (if any) with a non-toxic lubricant.

- **Cleaning:** Clean the swing set with mild soap and water. Avoid harsh chemicals that could damage materials or pose a risk to children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing set feels unstable or wobbly.	Loose connections; insufficient ground anchoring; uneven ground.	Tighten all bolts and screws. Re-secure ground anchors, potentially using concrete for added stability. Ensure installation surface is level.
Squeaking noises during use.	Friction between metal parts or wood joints.	Apply a non-toxic lubricant to metal-on-metal contact points. Check wood joints for tightness.
Ropes show signs of wear.	Normal wear and tear; exposure to elements.	Replace ropes immediately if fraying or damage is observed. Do not attempt to repair damaged ropes.
Wood developing splinters or cracks.	Natural aging of wood; lack of protective treatment; weather exposure.	Sand down splinters. For minor cracks, use wood filler. For significant damage, replace the affected wooden component. Apply wood preservative annually.

8. SPECIFICATIONS

Feature	Detail
Model Number	O4.5.00529.0
Brand	REBO
Material	Untreated Solid Fir Wood (Frame), Plastic (Slide, Swing Seat)

Feature	Detail
Color	Natural Wood (Frame), Dark Green (Slide, Swing Seat)
Overall Dimensions (L x W x H)	184 cm x 184 cm x 187 cm (72.4 in x 72.4 in x 73.6 in)
Item Weight	14 Kilograms (30.86 lbs)
Maximum User Weight (Swing)	50 kg (110 lbs)
Number of Seats	1 (Swing)
Assembly Required	Yes
Safety Standard	DIN EN 71
Included Accessories	4 Ground Anchors

Note: Detailed component dimensions are illustrated in Figure 2.



Figure 4: Side view of the REBO Orchid Wooden Swing Set, highlighting the structure and components.

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms is not provided in the product description. Please refer to your purchase documentation or contact the retailer for warranty details.

For technical support, missing parts, or further inquiries, please contact REBO customer service through the retailer where the product was purchased.

Spare Parts Availability: Information regarding spare parts availability is not provided. Please contact customer service for inquiries.

