

[Manuals.plus](#) /

› [Electronic Spices](#) /

› Electronic Spices AC Remote Control User Manual for Hitachi AC (Model AC-68A)

Electronic Spices AC-68A

Electronic Spices AC Remote Control User Manual

Model: AC-68A | Compatible with Hitachi AC

INTRODUCTION

This manual provides instructions for the Electronic Spices AC Remote Control, model AC-68A. This remote is designed for use with Hitachi Split and Window Air Conditioners, offering essential functions for comfortable climate control. It features a user-friendly design and requires no programming for immediate use, utilizing a strong infrared signal for communication with your AC unit.

SETUP

1. Battery Installation

The AC-68A remote requires two AAA batteries (included with the product). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control with the battery compartment.

Please Match the Image with your existing or old remote before ordering

This is not universal remote. it will only work if it exactly match your existing remote

Note:- Please check all buttons on the remote before ordering the remote

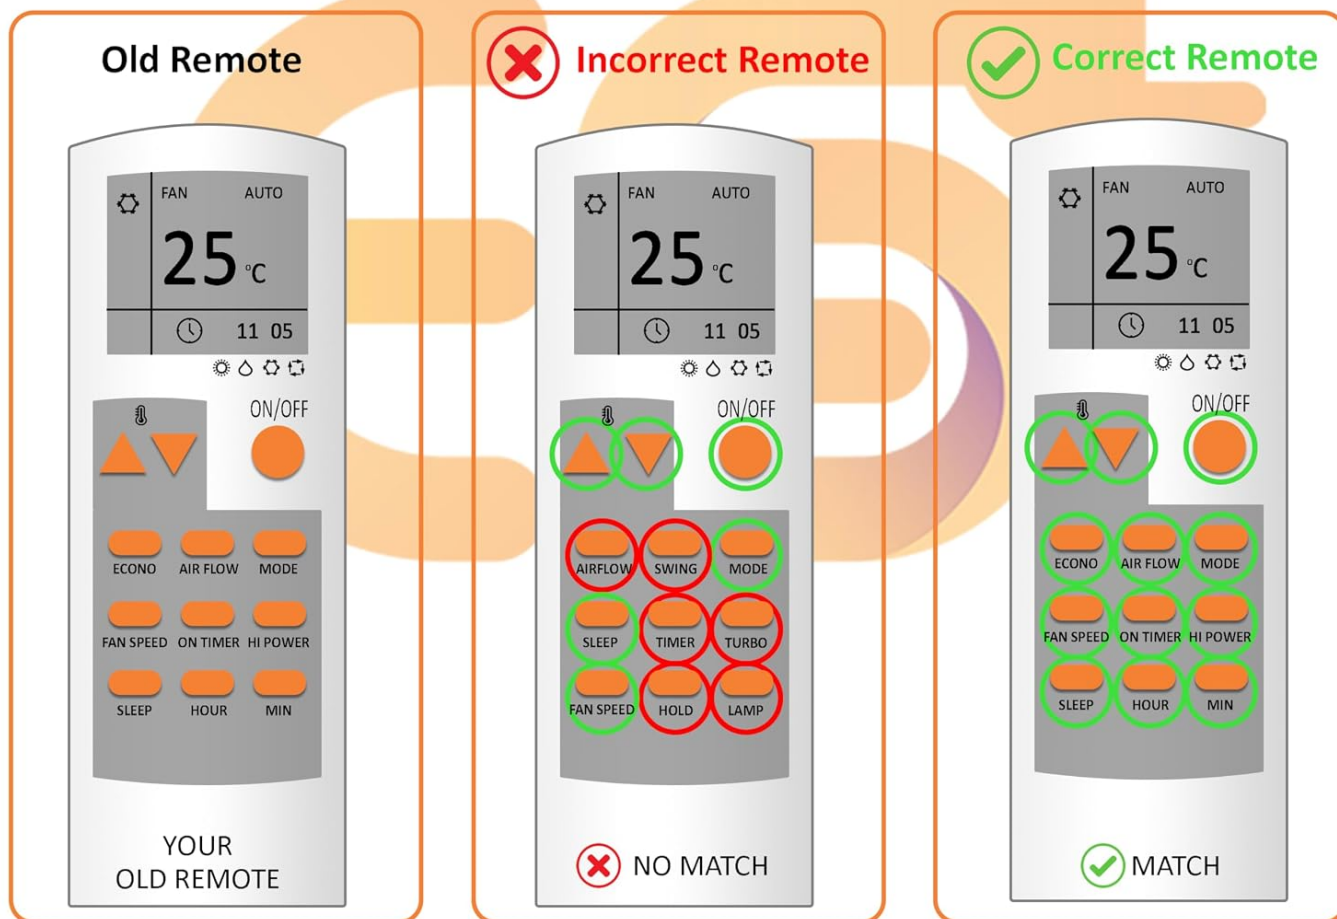


Image: Remote control with AAA batteries ready for insertion.

2. Initial Use

The Electronic Spices AC-68A remote control is pre-programmed for Hitachi AC units and requires no additional setup or coding. Once batteries are installed, it is ready for immediate use.

OPERATING INSTRUCTIONS

Point the remote control directly at the indoor unit of your Hitachi AC. Ensure there are no obstructions between the remote and the AC unit for optimal signal transmission.



Image: Front view of the AC-68A remote control, showing buttons and display.

Common Functions:

- **Power Button:** Turns the AC unit ON or OFF.
- **Temperature Control:** Use the **TEMP UP** and **TEMP DOWN** buttons to adjust the desired temperature.
- **Mode Selection:** Press the **MODE** button to cycle through available modes (e.g., Cool, Dry, Fan, Auto).
- **Fan Speed:** Use the **FAN** button to adjust the fan speed (e.g., Low, Medium, High, Auto).
- **Swing Control:** Activates or deactivates the louver swing function.
- **Timer Settings:** Allows setting a timer for the AC unit to turn ON or OFF automatically. Refer to your AC unit's manual for specific timer programming details.

The remote features a digital display for easy viewing of current settings.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote's signal becomes weak or the display fades. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote and the AC unit's receiver.
 - Confirm the remote is pointed directly at the AC unit.
- **Weak signal or intermittent response:**
 - Replace batteries.
 - Move closer to the AC unit. The maximum effective range is approximately 8 meters.
 - Ensure the remote's infrared emitter is clean and unobstructed.
- **AC unit not performing a specific function:**
 - Verify that the AC unit itself is functioning correctly.
 - Some advanced functions might require specific settings on the AC unit itself. Refer to your Hitachi AC unit's user manual.

SPECIFICATIONS

Brand	Electronic Spices
Model Name	AC REMOTE
Model Number	AC-68A
Compatible Devices	Hitachi Air Conditioner
Special Feature	Ergonomic
Colour	White (Model No. 68A with Backlight)
Max Number of Supported Devices	1
Controller Type	Button Control
Maximum Range	8 metres
Battery Types	AAA Alkaline

Item Weight	100 Grams
Item Dimensions (L x W x H)	20L x 13W x 45H Millimeters

WARRANTY AND SUPPORT

Warranty Information:

This product may be eligible for an optional 1-year extended warranty from Onsitego. Please refer to the product listing or your purchase documentation for details on how to avail this service.

Manufacturer Contact:

For product support or inquiries, please contact the manufacturer:

Electronic Spices

Main, Ismailpur Rd, near Gyan Mandir Chowk,
F- Block, Jaitpur, New Delhi, 110044, India
Phone: 8929992403

