



Manuals.plus /

› GAMFAMI /

› Wireless Controller with Hall Joystick for PS4,Pro,Slim - User Manual

## GAMFAMI T48

# Wireless Controller User Manual

Model: T48

## INTRODUCTION

---

Thank you for choosing the GAMFAMI Wireless Controller. This manual provides detailed instructions on how to set up, operate, and maintain your controller, ensuring an optimal gaming experience on your PS4, PS4 Pro, PS4 Slim, and PC. This controller features Hall Effect joysticks for enhanced precision and longevity, advanced macro programming buttons (M1/M2), dual shock vibration, a built-in speaker, and a 1000mAh rechargeable battery for extended playtime.

## PACKAGE CONTENTS

---

- GAMFAMI Wireless Controller (Model T48)
- USB Charging Cable
- User Manual

## CONTROLLER OVERVIEW

---

Familiarize yourself with the various buttons and features of your new controller.



Figure 1: Front view of the GAMFAMI Wireless Controller, showing the Hall joysticks, D-pad, action buttons, Share, Options, PS button, and touch pad. The controller is black with blue accents on the grips.



Figure 2: Back view of the GAMFAMI Wireless Controller, highlighting the M1 and M2 macro programming buttons located on the rear grips.



Figure 3: Close-up illustration demonstrating the Hall Effect joystick technology, which prevents drift and ensures smooth, precise control.

## SETUP AND CONNECTION

---

### Initial Charging

Before first use, fully charge the controller. Connect the supplied USB charging cable to the controller's charging port and the other end to a USB port on your PS4 console or a compatible USB wall adapter. The light bar on the controller will indicate charging status and turn off when fully charged.

### Pairing with PS4

1. Ensure your PS4 console is powered on.
2. Connect the controller to the PS4 console using the supplied USB charging cable.
3. Press the PS button on the controller. The light bar will flash and then glow steadily, indicating successful pairing.
4. Once paired, you can disconnect the USB cable for wireless play. The controller will automatically connect wirelessly to the PS4 in the future when the PS button is pressed.

### Connecting to PC

The controller can be connected to a PC via USB cable or wirelessly via Bluetooth (if your PC has Bluetooth capability). For wired connection, simply plug the USB cable into your PC. For Bluetooth, follow your PC's standard Bluetooth pairing procedure, typically by holding the Share and PS buttons on the controller until the light bar flashes rapidly, then selecting the controller from your PC's Bluetooth device list.

## OPERATING INSTRUCTIONS

---

### Basic Functions

- **PS Button:** Powers on the controller, accesses the PS4 Home screen, or brings up the Quick Menu during gameplay.
- **Share Button:** Used for sharing screenshots and video clips.
- **Options Button:** Accesses in-game menus or options.
- **Touch Pad:** Functions as a clickable button and a multi-touch surface for specific game interactions.
- **Hall Joysticks:** Provide precise 360-degree movement with reduced drift.
- **Dual Shock Vibration:** Provides haptic feedback for immersive gameplay.
- **Built-in Speaker:** Enhances audio experience for certain game effects.
- **3.5mm Audio Jack:** Connect compatible headsets for game audio and chat.

### Macro Programming (M1/M2 Buttons)

The M1 and M2 buttons on the back of the controller can be programmed to perform complex sequences or map single button presses. Up to 25 operations can be edited into one program.

**Mappable Buttons:** X, O, Square, Triangle, Up, Down, Left, Right, L3, R3, L1, R1, L2, R2.

1. **Enter Programming Mode:** Press and hold the M1 (or M2) button you wish to program, then simultaneously press the Options button. The light bar will change color to indicate programming mode.
2. **Record Sequence:** Press the buttons in the desired sequence. For example, to program a "combo technique," press the sequence of buttons required for that combo.
3. **Save Program:** Press the M1 (or M2) button again to save the program. The light bar will return to its original color.
4. **Execute Macro:** Press the programmed M1 (or M2) button during gameplay to execute the recorded sequence.
5. **Clear Macro:** To clear a macro, enter programming mode for the specific M button, then press the M button again without recording any sequence.

## Turbo Function

The Turbo function allows a button to be rapidly pressed repeatedly by holding it down, providing an advantage in games requiring fast inputs.

1. **Activate Turbo:** Press and hold the Turbo button, then press the action button (e.g., X, O, Square, Triangle, L1, R1, L2, R2) you wish to apply Turbo to. The light bar will flash to confirm activation.
2. **Deactivate Turbo:** Press and hold the Turbo button again, then press the same action button. The light bar will stop flashing, indicating deactivation.

## MAINTENANCE AND CARE

- Clean the controller regularly with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid exposing the controller to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble the controller. This will void the warranty.
- Store the controller in a clean, dry place when not in use.
- Charge the controller regularly, even if not in frequent use, to maintain battery health.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not turn on.	Low battery.	Charge the controller fully using the supplied USB cable.
Controller does not connect to PS4.	Not paired or pairing issue.	Connect the controller to the PS4 with the USB cable and press the PS button to re-pair. Ensure the PS4 is on.
Input lag or unresponsive buttons.	Interference or low battery.	Ensure no strong wireless interference. Charge the controller. Try a wired connection to rule out wireless issues.
Joystick drift.	Software calibration needed or rare hardware issue.	The Hall Effect joysticks are designed to minimize drift. If persistent, try resetting the controller (locate a small reset pinhole on the back, use a paperclip). If the issue persists, contact customer support.
Macro programming not working.	Incorrect programming steps.	Review the "Macro Programming" section and ensure steps are followed precisely.

## SPECIFICATIONS

**Model:** T48

**Connectivity:** Wireless (Bluetooth), Wired (USB)

**Battery:** 1000mAh Lithium Ion (included)

**Dimensions:** Approximately 7.09 x 4.92 x 2.76 inches

**Weight:** Approximately 13 ounces

**Compatibility:** PS4, PS4 Pro, PS4 Slim, PC

**Manufacturer:** GAMFAMI

**Date First Available:** May 5, 2024

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact GAMFAMI customer service through the retailer where the product was purchased or visit the official GAMFAMI website. Please have your model number (T48) and purchase details ready when contacting support.

*Note: Warranty terms may vary by region and retailer.*

