

[Manuals.plus](#) /

> [GAMFAMI](#) /

> GAMFAMI Wireless Controller TERIOS for PS4, PS4 Pro, PS4 Slim Instruction Manual

GAMFAMI TERIOS

GAMFAMI TERIOS Wireless Controller Instruction Manual

Model: TERIOS

INTRODUCTION

This manual provides detailed instructions for the GAMFAMI TERIOS Wireless Controller. Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming experience. This controller is designed for use with PlayStation 4, PS4 Pro, and PS4 Slim consoles.

PRODUCT FEATURES

- **Hall Effect Joysticks:** Equipped with Hall joysticks to prevent drift and ensure a longer lifespan with smooth, precise control.
- **Macro Programming:** Two programmable back buttons (M1, M2) allow mapping of various inputs (X, O, Triangle, Square, Up, Down, Left, Right, L3, R3, L1, R1, L2, R2) for enhanced gameplay.
- **Wireless Connectivity:** Enjoy a seamless wireless gaming experience with Bluetooth technology.
- **Dual Shock Vibration:** Enhanced dual shock motors provide immersive haptic feedback for a realistic gaming experience.
- **Turbo Function:** Activate the Turbo feature for rapid, repeated button presses, offering a competitive advantage.
- **Long-lasting Battery:** Features a 1000mAh rechargeable battery for extended play sessions.
- **Ergonomic Design:** Lightweight and durable ABS construction with textured grips for comfortable handling.
- **Built-in Speaker & 3.5mm Audio Jack:** Provides high-quality audio directly from the controller and supports headset connection.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- GAMFAMI TERIOS Wireless Controller

- USB Charging Cable
- Instruction Manual

CONTROLLER LAYOUT

Familiarize yourself with the buttons and features of your GAMFAMI TERIOS Wireless Controller.



Front view of the GAMFAMI TERIOS Wireless Controller, showing the joysticks, D-pad, action buttons, Share, Options, Home, and Turbo buttons, and the touchpad.

- **Directional Pad (D-Pad):** For directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** Standard PlayStation action buttons.
- **Left/Right Analog Sticks:** For precise movement and camera control. Features Hall Effect technology.
- **SHARE Button:** For sharing gameplay content.
- **OPTIONS Button:** For in-game menus and options.
- **PS Button (Home Button):** To access the PS4 system menu.
- **L1/R1 Buttons:** Shoulder buttons.
- **L2/R2 Triggers:** Analog triggers.
- **Touchpad:** Multi-touch input area.
- **M1/M2 Buttons:** Programmable back buttons.

- **TURBO Button:** Activates/deactivates turbo function.
- **3.5mm Headset Jack:** For connecting a compatible headset.
- **USB-C Port:** For charging and wired connection.



Back view of the controller, highlighting the M1 and M2 programmable buttons and product information.

SETUP AND CONNECTION

Pairing with PS4/PS4 Pro/PS4 Slim

1. Ensure your PS4 console is powered on.
2. Connect the controller to your PS4 console using the included USB charging cable.
3. Press the PS button on the controller. The light bar will flash, indicating it is pairing.
4. Once the light bar turns solid, the controller is successfully paired and ready for use.
5. You can now disconnect the USB cable for wireless play.

Reconnecting to PS4

After initial pairing, simply press the PS button on the controller to reconnect wirelessly to your PS4 console.

OPERATING INSTRUCTIONS

Using the Turbo Function

1. Press and hold the **TURBO** button.
2. While holding **TURBO**, press the action button (e.g., Cross, Circle, Square, Triangle, L1, R1, L2, R2) you wish to apply the turbo function to.
3. Release both buttons. The selected action button will now rapidly repeat its input when held down.
4. To disable turbo for a specific button, repeat the process: hold **TURBO** and press the turbo-enabled action button.
5. To disable turbo for all buttons, press and hold the **TURBO** button for 5 seconds.

Macro Programming (M1/M2 Buttons)

The M1 and M2 buttons on the back of the controller can be programmed to replicate other button inputs.

1. Press and hold the **SHARE** button and the **M1** or **M2** button simultaneously for 3 seconds until the light bar flashes rapidly. This indicates macro programming mode.
2. Press the button(s) you wish to map to M1 or M2 (e.g., X, O, Triangle, Square, Up, Down, Left, Right, L3, R3, L1, R1, L2, R2). You can map a single button or a sequence of buttons.
3. Press the **M1** or **M2** button again to save the macro. The light bar will stop flashing rapidly and return to its normal state.
4. To clear a macro, repeat step 1, then press the **M1** or **M2** button twice without pressing any other buttons.



Illustration of the advanced buttons and their programming capabilities.

CHARGING AND BATTERY MANAGEMENT

The controller is equipped with a 1000mAh rechargeable battery.

Charging the Controller

1. Connect the included USB charging cable to the USB-C port on the controller.
2. Connect the other end of the cable to a USB port on your PS4 console (when powered on or in rest mode) or a

compatible USB wall adapter (5V/1A recommended).

3. The light bar on the controller will slowly pulse orange while charging.
4. Once fully charged, the light bar will turn off.


Battery Level Indication

The controller's light bar will indicate battery status. A low battery will cause the light bar to flash red. It is recommended to charge the controller when this occurs.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Solution
Controller does not connect/pair.	Ensure the controller is charged. Connect the controller to the PS4 with the USB cable and press the PS button to repair. Restart your PS4 console.
Controller experiences input lag or disconnection.	Ensure there are no strong wireless interference sources nearby. Move closer to the PS4 console. Try connecting the controller via USB cable for a stable wired connection.
Joysticks exhibit drift.	<p>The controller uses Hall Effect joysticks designed to minimize drift. If drift occurs, try restarting the controller and console.</p> <p>Ensure the controller's firmware is up to date (check manufacturer's website for updates).</p>  <p>Illustration of Hall Effect joystick technology, designed to prevent drift.</p>

Problem	Solution
Controller does not charge.	Verify the USB cable is securely connected to both the controller and the power source. Try a different USB cable or power source. Ensure the PS4 console is powered on or in rest mode if charging via the console.

SPECIFICATIONS

Model Name	TERIOS
Brand	GAMFAMI
Compatible Devices	PS4, PS4 Pro, PS4 Slim
Controller Type	Gamepad
Connectivity Technology	Bluetooth (Wireless)
Power Source	Battery Powered
Battery Capacity	1000mAh
Item Weight	0.37 Kilograms
Color	Black Red

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official GAMFAMI website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, please contact GAMFAMI customer service through their official channels.

