

M8807

Generic Face Neck Massager User Manual

Model: M8807

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the device. Keep this manual for future reference.

- Do not use on broken, irritated, or infected skin.
- Consult a physician before use if you have any pre-existing medical conditions, especially skin conditions, heart conditions, or are pregnant.
- Keep out of reach of children.
- Do not immerse the device in water or any other liquid. Clean with a damp cloth only.
- Use only the provided USB cable for charging.
- Discontinue use immediately if you experience any discomfort or adverse reactions.
- This device is for cosmetic use only and is not intended to diagnose, treat, cure, or prevent any disease.

PRODUCT OVERVIEW

The Generic Face Neck Massager is a versatile skin rejuvenation device designed to improve skin appearance through heat and vibration. It features multiple modes to address various skin concerns.

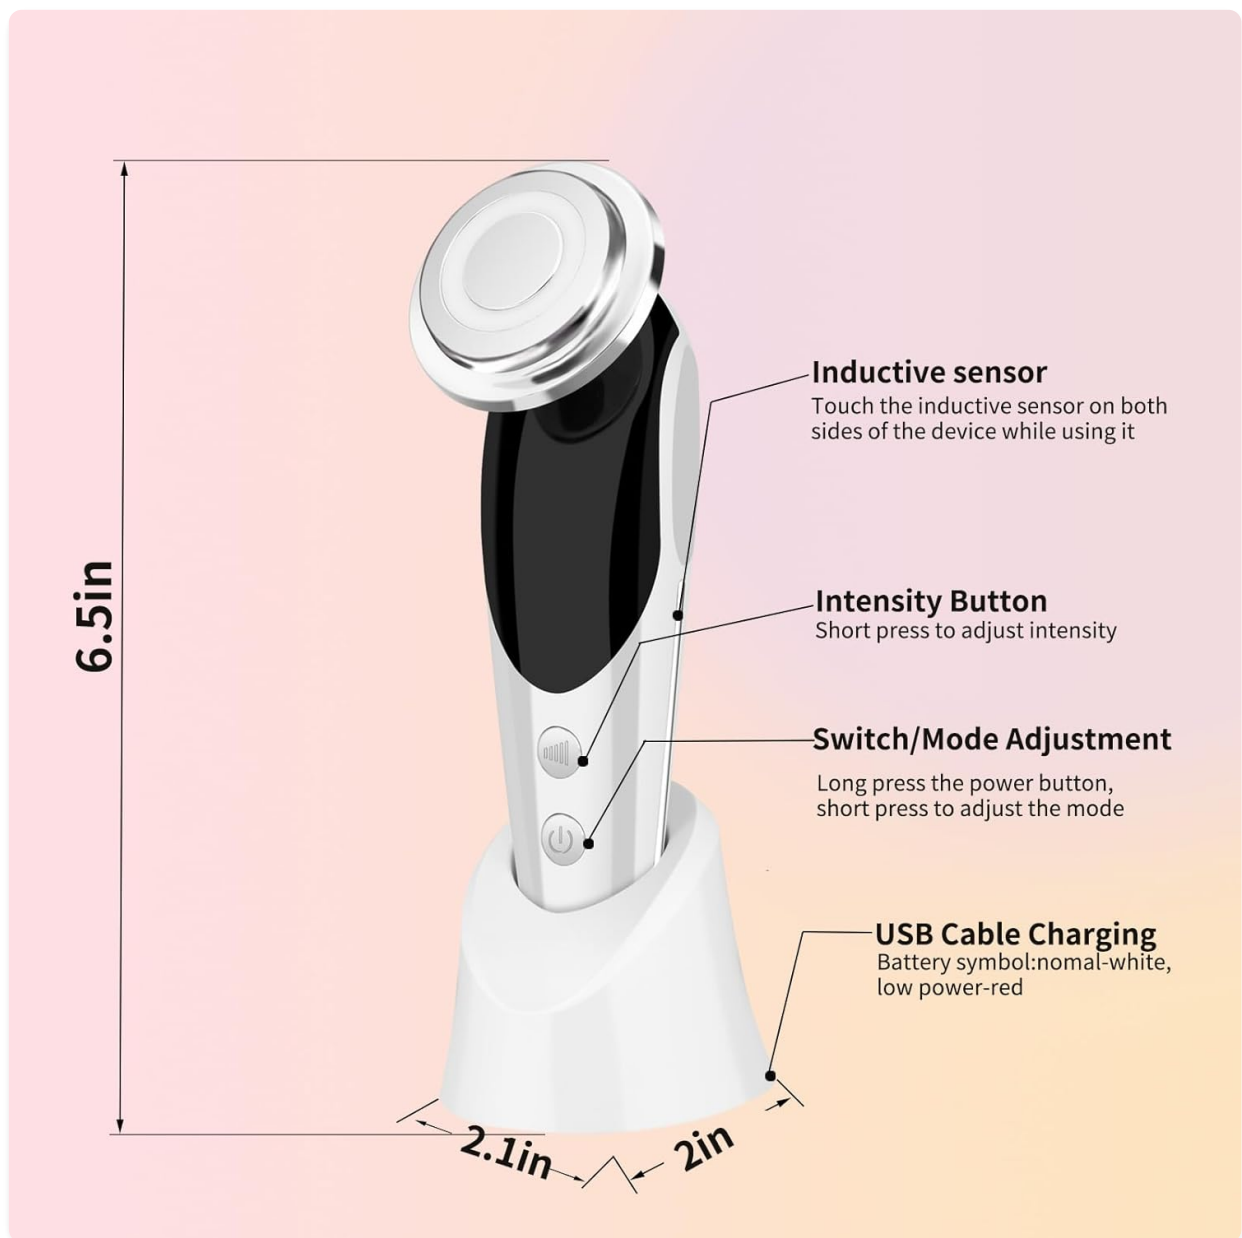


Figure 1: Device Components and Dimensions. This image illustrates the key parts of the massager, including the inductive sensor, intensity button, switch/mode adjustment button, and USB cable charging port. Dimensions are approximately 6.5 inches in length and 2.1 inches in width.

Components:

- **Inductive Sensor:** Located on both sides of the device, touch these sensors while using the device for proper operation.
- **Intensity Button:** Short press to adjust the intensity level.
- **Switch/Mode Adjustment Button:** Long press to power on/off. Short press to cycle through different modes.
- **USB Cable Charging Port:** For recharging the device. Battery symbol indicates charge status (white for normal, red for low power).

WHAT'S INCLUDED

- 1 × Generic Face Neck Massager Device
- 1 × User Manual
- 1 × USB Charging Cable

SETUP

Charging the Device:

1. Connect the provided USB charging cable to the charging port on the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The battery indicator light will show the charging status. Charge the device fully before first use.

OPERATING INSTRUCTIONS

Before use, ensure your skin is clean and apply your preferred skincare product (serum, cream, or essence) to the area you wish to treat. Hold the device by touching the inductive sensors on both sides.

General Usage:

1. **Power On:** Long press the Switch/Mode Adjustment button to turn on the device.
2. **Select Mode:** Short press the Switch/Mode Adjustment button to cycle through the available modes.
3. **Adjust Intensity:** Short press the Intensity button to adjust the vibration intensity within the selected mode.
4. **Application:** Gently glide the massage head along the contours of your face, chin, neck, or other desired areas. Move in an upward and outward motion.
5. **Power Off:** Long press the Switch/Mode Adjustment button to turn off the device after use.

Modes and Functions:

FACE NECK MASSAGER



Figure 2: Device Modes and Their Benefits. This image details the five distinct modes of the massager and their primary functions for skin rejuvenation.

- **Clean Mode:** Designed for thorough cleansing, helping to remove dirt from the skin.
- **Red Mode:** Aims to reduce the appearance of wrinkles and fine lines.
- **Blue Mode:** Focuses on nourishing and tightening the skin.
- **Orange Mode:** Targets anti-aging benefits and helps balance skin oil secretion.
- **Colored Mode:** Enhances the absorption of nutrient essences into the skin.



Figure 3: Illustrative Skin Improvement. This image provides a visual representation of potential skin texture and wrinkle reduction results from consistent use of the device.

MAINTENANCE AND CARE

- After each use, wipe the massage head with a clean, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Ensure the device is completely dry before storing.
- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Do not disassemble the device. Any repairs should be performed by qualified personnel.

TROUBLESHOOTING

If you encounter any issues with your device, please refer to the following table:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Device does not turn on.	Ensure the device is fully charged. Long press the power button firmly.
Device stops working during use.	The battery might be low. Recharge the device. Ensure your fingers are touching the inductive sensors.
No vibration or heat.	Check if the correct mode is selected. Ensure the device is in contact with your skin and your fingers are on the inductive sensors.
Charging indicator not working.	Ensure the USB cable is properly connected to both the device and the power source. Try a different USB port or adapter.


SPECIFICATIONS

Attribute	Value
Brand	Generic
Model Number	M8807
Power Source	Corded Electric (USB Charging)
Included Components	Face Massager, Manual, USB Data Cable
Product Benefits	Anti-Aging, reducing fine lines and wrinkles, improving skin elasticity and firmness, enhancing skin tone and radiance
Manufacturer	Mcomgz
Date First Available	13 April 2024

WARRANTY AND SUPPORT

Your Generic Face Neck Massager comes with a 35-day satisfaction guarantee. If you are not satisfied with your product, you are eligible for a free return and refund.

For any questions, concerns, or support needs, please contact the seller directly. We aim to respond and resolve issues within 24 hours.

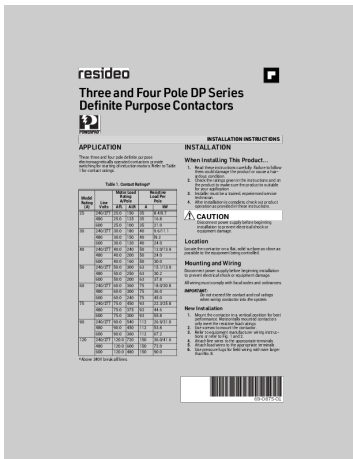


[pdf] Installation Guide Instructions

69 0875—01 Three and Four Pole DP Series Definite Purpose Contactors Installation Instructions

Resideo Technical Communications 0875 Jun 25 2021 — Read these instructions carefully Failure to follow them could damage the product or cause a hazardous condition 2 Check ratings given in the digitalassets resideo damroot Original 10011 |||

Three and Four Pole DP Series Definite Purpose Contactors APPLICATION These three and four pole def ... PPLY AND THERMOSTAT OR OTHER CONTROLLER. 3 QUICK-CONNECT TERMINALS FOR ACCESSORY CONNECTIONS ONLY. **M8807** Fig. 2. Typical hookup for 4-pole contactor. TO AUXILIARY LOAD TO CONTROLLED LOAD 1 ADD DI...

 score:34 filesize: 616.8 K page_count: 2 document date: 2021-04-13

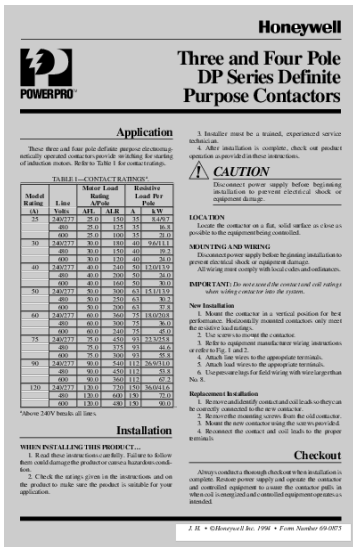

[pdf] Instructions Borchure


69 0875 Three and Four Pole DP Series Definite Purpose Contactors Installation Instructions H BC

Technical Communications Honeywell DP3040C5001 Brochure 1 behler young UserFiles Resource |||

POWERPROTM Three and Four Pole DP Series Definite Purpose Contactors

Application These three and ... PLY AND THERMOSTAT OR OTHER CONTROLLER. 3 QUICK-CONNECT TERMINALS FOR ACCESSORY CONNECTIONS ONLY. **M8807** Home and Building Control Honeywell Inc. 1985 Douglas Drive North Golden Valley, MN 55422 Pri...

 score:33 filesize: 78.49 K page_count: 2 document date: 2007-05-07

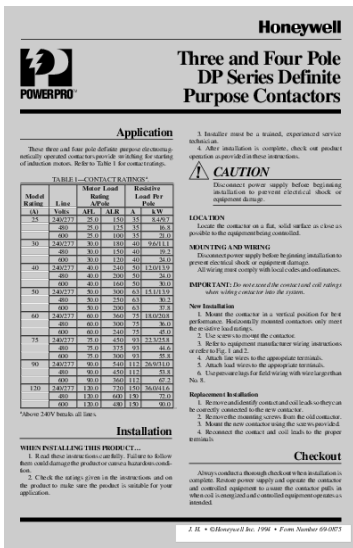

[pdf] Instructions


69 0875 Three and Four Pole DP Series Definite Purpose Contactors Installation Instructions H BC

Technical Communications Honeywell DP3060B5010 Contactor 60A 3 120v Coil Stromquist Company lit stromquist docs HONEYWELL REGULAR |||

POWERPROTM Three and Four Pole DP Series Definite Purpose Contactors

Application These three and ... PLY AND THERMOSTAT OR OTHER CONTROLLER. 3 QUICK-CONNECT TERMINALS FOR ACCESSORY CONNECTIONS ONLY. **M8807** Home and Building Control Honeywell Inc. 1985 Douglas Drive North Golden Valley, MN 55422 Pri...

 score:32 filesize: 75.64 K page_count: 2 document date: 2001-02-26

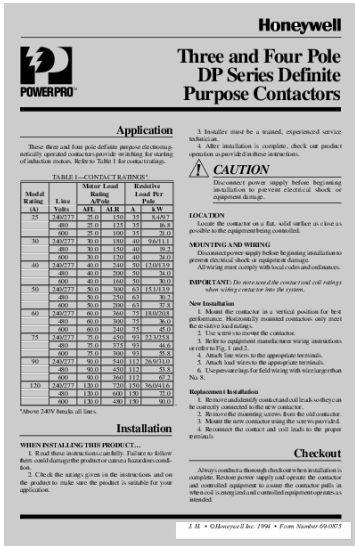

[pdf] Instructions

69 0875 Three and Four Pole DP Series Definite Purpose Contactors Installation Instructions H BC Technical Communications Materials DP3075C5014 Honeywell 3Pole75 Amp 208 240V Contactor Industrial Stores 140014539769 IM industrialstores media product attachments ||| POWERPROTM Three and Four Pole DP Series Definite Purpose Contactors Application These three and ... PLY AND THERMOSTAT OR OTHER CONTROLLER. 3 QUICK-CONNECT TERMINALS FOR ACCESSORY CONNECTIONS ONLY. **M8807** Home and Building Control Honeywell Inc. 1985 Douglas Drive North Golden Valley, MN 55422 Pri...

score:31 filesize: 74.8 K page_count: 2 document date: 2014-05-15




[pdf] Catalog

Hugi Colour Collection Catalogue DAGHyubn7Ks BACiChW04EU Jane View Here Stonebaths New Zealand v 1718253505 cdn shopify s files 1 0033 2192 1651 ||| Colour Collection Solid Surface Sheets Solid Surface Sheets are versatile and durable materials ... Solid Surface M8808-B M8857 M8912 M8808 M8872 M8909 009 M8915 M8916 M8862 M8905 M8801 **M8807** M8812 M8813 M8817 M8816 M8818 M8819 M8820 M8823 010 Modified Solid Surface M8884 ... score:24 filesize: 2.83 M page_count: 53 document date: 2024-06-13



[pdf] Document


Pared de WPC M160 8 290x60cm ezencial peficha tecnica pared wpccdnd shopify s files 1 0776 5901 3435 ficha wpc v 1725764201 ||| ezencial.pe Ficha Tcnica - Pared WPC ezencial.pe ezencial.pe ezencial.pe ezencial.pe ezencial.pe ... cial.pe ezencial.pe ezencial.pe ezencial.pe ezencial.pe ezencial.pe e YC8027 YC8017 YC8026 **M8807** M53481 M66112 M8017N M160-8 M44 ezencial.pe ezencial.pe ezencial.pe ezencial.pe ezen... score:22 filesize: 7.25 M page_count: 0 document date: 0000-00-00

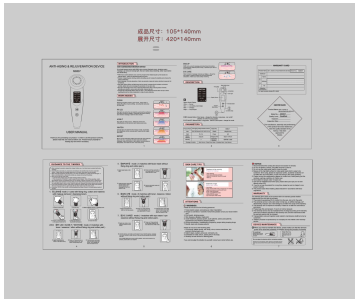 

[pdf] Document

M8807 Administrator R Model No M8807 Quality Level Qualified Inspector Inspection Date The manufacture assembly and performance of this product have been tested meet C125MPlustL ref dp quick view m media amazon images I ||| ... score:21 filesize: 7.39 M page_count: 1 document date: 2022-11-04

[pdf] Catalog

KKR solid surface material catalogue 2022 cdr Administrator features include renew ability seamlessly jointing a wide variety of colors and shapes fire proofing high temperature resistance 1725364162vp8 yfisher m6118 |||

KINGKONREE INTERNATIONAL CHINA SURFACE INDUSTRIAL CO., LTD.

Website: www.kingkonree.com www.kkrsolid.com ... k forward to cooperating and developing together KKR-M8854 KKR-M7811 KKR-M8808-B KKR-M8870 KKR-**M8807** KINGKONREE INTERNATIONAL CHINA SURFACE INDUSTRIAL CO.,LTD 011 KKR-M5807 KKR-M7806 KKR-M887...

score:19 filesize: 19.87 M page_count: 17 document date: 2022-03-14

[pdf] Catalog

PROLENE® Vital Medical Supplies Product Characteristics PROLENE® Suture Physical Material Polypropylene Construction Monofilament Absorbable Non absorbable prolene suture catalogue srsltid AfmBOorUQxWPJnphEnbsB2m9Rsx9 t9QuApin9fAj47y2dRM6zknXuuz vitalmedicalsupplies au globalassets ebos microsites jj ethicon |||

PROLENE PROLENE® Polypropylene Suture Product Characteristics Physical Material Construction Abso ... M8707 8/0 7/0 6/0 5/0 4/0 0.4 0.5 0.7 1 1.5 8705H* M8705* 8704H* 8807H W8803 M8704* **M8807** W8664 W8665 * New Zealand Indent 8 Australia New Zealand Indent PROLENE Monofilam...

score:16 filesize: 2.39 M page_count: 12 document date: 2016-04-05

[pdf] User Manual Troubleshooting Guide

n16 Electronic Service Manual Nissan Europe N V mt jdmfsm info Auto Japan N15 N16 B10 V10 Almera Tino 2005 01n16e uk |||

MANUAL TRANSAXLE MT SECTION CONTENTS RS5F30A PREPARATION

..... n Part number* Thickness mm in Part number* 3.63
0.1429 32348-M8800 4.12 0.1622 32348-**M8807** 3.70 0.1457 32348-M8801 4.19
0.1650 32348-M8808 3.77 0.1484 32348-M8802 4.26 0.1...

score:14 filesize: 5.02 M page_count: 136 document date: 2001-06-20


[pdf] User Manual Troubleshooting Guide

n16 Electronic Service Manual Nissan Europe N V mt jdmfsm info Auto Japan N15 N16 B10 V10 Almera Tino 2005 01n16e 333 |||

MANUAL TRANSAXLE MT SECTION CONTENTS RS5F30A PREPARATION

..... n Part number* Thickness mm in Part number* 3.63
0.1429 32348-M8800 4.12 0.1622 32348-**M8807** 3.70 0.1457 32348-M8801 4.19
0.1650 32348-M8808 3.77 0.1484 32348-M8802 4.26 0.1...

 score:14 filesize: 4.42 M page_count: 136 document date: 2001-08-06

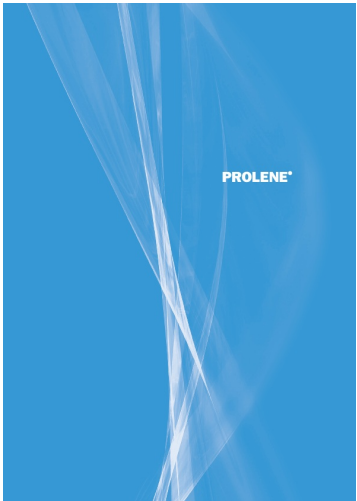

MANUAL TRANSAXLE
SECTION **MT**

CONTENTS

PREPARATION	RS5F30A	4	Cross-sectional View - RS5F30A	17
Special Service Tests	RS5F30A	4	Cross-sectional View - RS5F30A	18
Commercial Service Tests	RS5F30A	5	DOUBLE COIL SYNCHRONIZER	19
PREPARATION	RS5F30A	7	REPAIRING CR SEAL	20
Special Service Tests	RS5F30A	7	DIFFERENTIAL OIL SEAL	21
Commercial Service Tests	RS5F30A	8	Position Switch Check	21
PREPARATION	RS5F30A	10	POP SWITCH	22
Special Service Tests	RS5F30A	10	BACK-UP LAMP SWITCH AND POP SWITCH	22
Commercial Service Tests	RS5F30A	11	REMOVAL AND INSTALLATION	23
PREPARATION	RS5F30A	12	Removal	23
Special Service Tests	RS5F30A	12	Installation	24
Commercial Service Tests	RS5F30A	13	MODEL TO ENGINE	25
MODEL VIBRATION AND HARDNESS (NPS)	RS5F30A	13	REMOVAL AND INSTALLATION	26
TRUBLESHOOTING	RS5F30A	13	Removal	26
NHT Troubleshooting Chart	RS5F30A	13	Installation	27
MANUAL TRANSAXLE	RS5F30A	13	MODEL TO ENGINE	28
MT OIL	RS5F30A	14	TRANSAXLE GEAR CONTROL	29
Changing MT OIL	RS5F30A	14	Components	29
Checking	RS5F30A	14	OVERHAUL	30
Oil Leak and Oil Level	RS5F30A	14	Gear Components	30
MT OIL	RS5F30A	15	Shift Control Components	31
Changing MT OIL	RS5F30A	15	Shift Control Components	32
Checking	RS5F30A	15	REPAIR FOR COMPONENT PARTS	36
Oil Leak and Oil Level	RS5F30A	15	Input Shaft and Gears	36
DESCRIPTION	RS5F30A	16	REASSEMBLY	36
Cross-sectional View - RS5F30A	RS5F30A	16		

MANUAL TRANSAXLE
SECTION **MT**

CONTENTS

PREPARATION	RS5F30A	4	Cross-sectional View - RS5F30A	17
Special Service Tests	RS5F30A	4	Cross-sectional View - RS5F30A	18
Commercial Service Tests	RS5F30A	5	DOUBLE COIL SYNCHRONIZER	19
PREPARATION	RS5F30A	7	REPAIRING CR SEAL	20
Special Service Tests	RS5F30A	7	DIFFERENTIAL OIL SEAL	21
Commercial Service Tests	RS5F30A	8	Position Switch Check	21
PREPARATION	RS5F30A	10	POP SWITCH	22
Special Service Tests	RS5F30A	10	BACK-UP LAMP SWITCH AND POP SWITCH	22
Commercial Service Tests	RS5F30A	11	REMOVAL AND INSTALLATION	23
PREPARATION	RS5F30A	12	Removal	23
Special Service Tests	RS5F30A	12	Installation	24
Commercial Service Tests	RS5F30A	13	MODEL TO ENGINE	25
MODEL VIBRATION AND HARDNESS (NPS)	RS5F30A	13	REMOVAL AND INSTALLATION	26
TRUBLESHOOTING	RS5F30A	13	Removal	26
NHT Troubleshooting Chart	RS5F30A	13	Installation	27
MANUAL TRANSAXLE	RS5F30A	13	MODEL TO ENGINE	28
MT OIL	RS5F30A	14	TRANSAXLE GEAR CONTROL	29
Changing MT OIL	RS5F30A	14	Components	29
Checking	RS5F30A	14	OVERHAUL	30
Oil Leak and Oil Level	RS5F30A	14	Gear Components	30
MT OIL	RS5F30A	15	Shift Control Components	31
Changing MT OIL	RS5F30A	15	Shift Control Components	32
Checking	RS5F30A	15	REPAIR FOR COMPONENT PARTS	36
Oil Leak and Oil Level	RS5F30A	15	Input Shaft and Gears	36
DESCRIPTION	RS5F30A	16	REASSEMBLY	36
Cross-sectional View - RS5F30A	RS5F30A	16		

