

[Manuals.plus](#) /

› [SQQBZZ](#) /

› SQQBZZ 11.5-inch Portable DVD Player User Manual (Model B0D1P8ZKRS)

SQQBZZ B0D1P8ZKRS

SQQBZZ 11.5-inch Portable DVD Player User Manual

Model: B0D1P8ZKRS

Brand: SQQBZZ

1. INTRODUCTION

Thank you for choosing the SQQBZZ 11.5-inch Portable DVD Player. This device is designed to provide portable entertainment with its 9.5-inch swivel HD screen, long-lasting battery, and support for various media formats. This manual provides essential information for setting up, operating, and maintaining your new DVD player.



Figure 1: SQQBZZ 11.5-inch Portable DVD Player with remote.

2. What's in the Box?

Please check the package contents upon unboxing:

- Portable DVD Player *1
- Remote Control *1
- Power Adapter *1
- Car Charger *1
- AV Cable *1

What's in the box?

9.5" Portable DVD Player

3-in1 AV Cable

AC Adapter

Car Charger

Remote Control

User's Guides



Figure 2: Package contents of the portable DVD player.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Portable Design:** Compact and easy to carry, ideal for travel.
- **Swivel HD Screen:** 9.5-inch (800*480 resolution) screen with 270° rotation and 180° flip for optimal viewing angles.
- **Extended Battery Life:** Built-in battery provides 4-6 hours of continuous playback.
- **Enhanced Audio:** Equipped with two high-power speakers and a 3.5mm earphone jack.
- **Multi-Format Support:** Plays DVD, CD, DVD $\pm$ R, CD -R(RW), SVCD -R(RW), DVD $\pm$ RW, VCD (excluding Blu-ray). Supports media files via USB and SD Card (up to 32G) including VOB, AVI, MPEG, MP3, WMA, JPEG.
- **Region-Free Playback:** Compatible with discs from all regions.
- **Sync Screen Function:** Connects to TV or projector via AV cable for a larger display.
- **Break-Point Memory:** Resumes playback from where you left off.

3.2 Device Ports and Controls

Familiarize yourself with the various ports and controls on your portable DVD player:



Figure 3: Side ports of the DVD player.

USB Port: For connecting USB drives to play media files.

SD Card Slot: For inserting SD cards (up to 32GB) to play media files.

Earphone Port: 3.5mm jack for connecting headphones.

AV OUT: For connecting to a TV or projector to output video and audio.

AV IN: For connecting an external video source.

ON/OFF Switch: Power switch for the device.

DC IN: Power input for the AC adapter or car charger.



Break-Point Memory Function

Ensure you back to the last memory.

Foldable & Rotatable Screen



Figure 4: Screen rotation and folding capabilities.

4. SETUP

4.1 Charging the Battery

Before first use, fully charge the built-in Lithium Polymer battery. The player can be charged using the included AC power adapter or car charger.

1. Connect the AC power adapter to the DC IN port on the player and plug it into a wall outlet.
2. For in-car charging, connect the car charger to the DC IN port and plug it into your vehicle's cigarette lighter socket.
3. The charging indicator light will typically show red while charging and turn green when fully charged.

A full charge provides approximately 4-6 hours of playback time.



Figure 5: Charging options for the portable DVD player.

4.2 Powering On/Off

1. Locate the ON/OFF switch on the side of the player.
2. Slide the switch to the "ON" position.
3. Press the power button on the top of the player to turn on the screen.
4. To power off, press the power button again, then slide the ON/OFF switch to the "OFF" position.

4.3 Connecting to a TV or Projector (Sync Screen)

You can connect your portable DVD player to a larger display using the included AV cable.

1. Ensure both the DVD player and the TV/projector are turned off.
2. Connect one end of the AV cable (3.5mm jack) to the AV OUT port on the DVD player.
3. Connect the RCA plugs (Yellow for Video, Red for Right Audio, White for Left Audio) to the corresponding AV IN ports on your TV or projector.

4. Turn on the TV/projector and select the correct AV input source.
5. Turn on the portable DVD player. The content from the DVD player should now be displayed on the external screen.

Sync Screen to TV

Connect to the TV through AV cable, get a larger and highr-definition screen



Figure 6: Connecting the DVD player to a TV.

5. OPERATING INSTRUCTIONS

5.1 Playing a DVD/CD

1. Gently press the "OPEN" button or tab to open the disc cover.
2. Place the DVD or CD onto the disc spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc cover firmly until it clicks.
4. The player will automatically detect and begin playing the disc. If not, press the "Play" button.

Multiple Formats Supported

- 📀 **DVD Formats:** DVD,DVD+R,DVD-R,DVD+RW,DVD-RW,CD,CD+R,CD+RW,CD-RW,VCD,SVCD(Blu-Ray not Support)
- ▶ **Video Formats:** VOB,AVI,MPEG1,MPEG2,XVID
- 🎵 **Audio Formats:** MP3,WMA
- 🖼️ **Image Formats:** JPG,JPEG



Figure 7: Inserting a DVD and media card slots.

5.2 Using USB Drive or SD Card

The player supports media files from USB drives and SD cards up to 32GB.

1. Insert your USB drive into the USB port or your SD card into the SD card slot.
2. Use the "DVD/USB/SD" button to switch to the appropriate input source.
3. Navigate through your files using the directional buttons and select your desired media.

5.3 Screen Adjustment

The 9.5-inch screen can be rotated 270° and flipped 180° for versatile viewing angles, including tablet mode or for mounting on a car headrest.



Break-Point Memory Function

Ensure you back to the last memory.

Foldable & Rotatable Screen



Figure 8: Flexible screen positioning.

5.4 Break-Point Memory Function

The player features a break-point memory function, allowing you to resume playback from where you last stopped a DVD. This is particularly useful for interrupted viewing sessions.



Break-Point Memory Function

Ensure you back to the last memory.

Foldable & Rotatable Screen



Figure 9: Break-point memory in action.

5.5 Supported Formats

The player supports a wide range of disc and digital media formats:

- **Disc Formats:** DVD, CD, DVD $\pm$ R, CD -R(RW), SVCD -R(RW), DVD $\pm$ RW, VCD (Note: Blu-ray discs are not supported).
- **Video Formats:** VOB, AVI, MPEG, MP3, WMA, JPEG (Note: Only supports 720*480 resolution video files. Does not support 1080P or 4K video.)
- **Image Formats:** JPEG (Note: Only supports 2650*1440 resolution image files)

6. MAINTENANCE

6.1 Cleaning the Device

- Use a soft, dry cloth to clean the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners

or solvents.

- Keep the disc tray and lens free from dust and debris. Use a specialized DVD lens cleaner if necessary.

6.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the player for an extended period, charge the battery to about 50% and store it in a cool, dry place.
- Avoid exposing the player to extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; ON/OFF switch is off; power button not pressed.	Charge the battery; ensure ON/OFF switch is in "ON" position; press the power button.
Disc does not play or skips.	Disc is dirty, scratched, or inserted incorrectly; unsupported disc format.	Clean the disc; ensure disc is inserted correctly; check if the disc format is supported (refer to Section 5.5).
No sound.	Volume is too low or muted; external speakers/headphones not connected properly.	Increase volume; check mute setting; ensure audio connections are secure.
No picture on external TV/projector.	Incorrect AV input selected on TV; AV cable not connected properly.	Select the correct AV input on your TV/projector; ensure AV cable is securely connected to both devices.
USB/SD card not recognized.	Unsupported file format; card/drive not inserted correctly; capacity exceeds 32GB.	Check file formats (refer to Section 5.5); reinsert card/drive; ensure capacity is within limits.

8. SPECIFICATIONS

- **Product Dimensions:** 16 x 9 x 3 inches
- **Item Weight:** 2.99 pounds
- **Screen Size:** 9.5 Inches
- **Display Type:** LCD
- **Battery:** 1 Lithium Polymer battery (included), 4-6 hours playback
- **Media Type:** CD, DVD, DVD +R(-R), SVCD, VCD
- **Supported Digital Media:** USB, SD Card (up to 32GB)
- **Video Resolution Support:** 720*480 (does not support 1080P, 4K)
- **Image Resolution Support:** 2650*1440
- **Manufacturer:** SQQBZZ

9. WARRANTY AND SUPPORT

Your SQQBZZ Portable DVD Player comes with a **12-MONTH Warranty**. For any questions or support needs, please contact our customer service. We offer 24-HOUR friendly customer support.

For further assistance, please refer to the contact information provided with your purchase or visit the official SQQBZZ website.

10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: SQQBZZ 11.5" Portable DVD Player with 9.5" Swivel Screen. This video provides a visual overview of the product's features and functionality.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D1P8ZKRS>

More documents and user manuals: <https://manuals.plus/>