

MoMi WOSP00047

# MoMi ISLA Stroller User Manual

Model: WOSP00047

## 1. INTRODUCTION AND SAFETY WARNINGS

Thank you for choosing the MoMi ISLA Stroller. This manual provides important instructions for the safe assembly, operation, and maintenance of your stroller. Please read it thoroughly before first use and keep it for future reference.

### Important Safety Information:

- **WARNING:** Never leave your child unattended in the stroller.
- **WARNING:** Ensure that all locking devices are engaged before use.
- **WARNING:** To avoid injury, ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** Always use the restraint system.
- **WARNING:** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- This product is suitable for children from 6 months up to 15 kg.
- The parking device shall be engaged during the loading and unloading of children.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the product will affect the stability of the product.
- The stroller is not suitable for running or skating.
- Use only replacement parts supplied or recommended by the manufacturer.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your MoMi ISLA Stroller.



**Figure 2.1:** Overall view of the MoMi ISLA Stroller in pink melange.



**Figure 2.2:** Close-up of the child's removable snack tray and the 5-point safety harness.





**Figure 2.3:** The handlebar features a convenient cup holder for parents.



**Figure 2.4:** The adjustable canopy includes a viewing window to check on your child.



**Figure 2.5:** The stroller comes with a matching changing bag.





**Figure 2.6:** A warm footmuff is included for colder weather.

## Key Components:

- **Handlebar:** For pushing and steering, with integrated cup holder.
- **Canopy:** Adjustable sun canopy with viewing window.
- **Seat Unit:** Padded seat with adjustable recline.
- **5-Point Harness:** Secure restraint system for your child.
- **Snack Tray:** Removable tray for child's snacks and drinks.
- **Footrest:** 3-step adjustable footrest for child's comfort.
- **Wheels:** 6.5-inch wheels with excellent shock absorption for a smooth ride.
- **Brakes:** Reliable foot-operated parking brake.
- **Shopping Basket:** Large basket under the seat (max. load 2 kg).
- **Accessories:** Includes changing bag and warm footmuff.

## 3. SETUP AND ASSEMBLY

---

Follow these steps to assemble your MoMi ISLA Stroller.

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage or missing parts.
2. **Unfolding the Stroller:** Release the folding lock (if engaged). Hold the handlebar and lift the stroller upwards until the frame locks into place. Ensure both sides are fully extended and locked. You should hear a click.
3. **Attaching Wheels:** Insert the front and rear wheels into their respective slots until they click securely into place. Pull on the wheels to ensure they are firmly attached.
4. **Attaching the Snack Tray:** Align the snack tray with the attachment points on the child's bumper bar and push firmly until it clicks into place.
5. **Attaching Accessories:** The changing bag can be hung on the handlebar. The footmuff can be attached to the seat unit using the designated loops/straps.





Figure 3.1: The stroller folds compactly for easy transport and storage.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Folding and Unfolding

- **To Unfold:** Release the folding lock. Hold the handlebar and lift the stroller until the frame locks into place. Ensure all parts are securely locked before placing a child in the stroller.
- **To Fold:** Engage the parking brake. Locate the folding mechanism (usually near the handlebar or on the frame). Follow the instructions to release the lock and fold the stroller downwards until it is compact. Secure with the folding lock.

### 4.2 Adjusting the Seat and Footrest

- **Seat Recline:** The seat recline can be adjusted to multiple positions. Locate the recline adjustment mechanism (typically a strap or lever behind the seat) and adjust to the desired angle.

- **Footrest Adjustment:** The footrest has 3 adjustable positions. Press the buttons on either side of the footrest and move it up or down to the desired position.

### 4.3 Using the 5-Point Harness

- **To Fasten:** Insert the two buckle prongs into the central buckle until they click.
- **To Release:** Press the button on the central buckle to release the prongs.
- **Adjusting Straps:** Adjust the shoulder and waist straps to ensure a snug but comfortable fit for your child. The shoulder straps can be adjusted for height as your child grows.

### 4.4 Engaging the Brakes

- To engage the brake, press down firmly on the brake pedal located near the rear wheels.
- To release the brake, lift the pedal upwards. Always ensure the brake is fully engaged when the stroller is stationary.

## 5. MAINTENANCE AND CARE

- **Cleaning Fabric Parts:** The fabric parts can be spot cleaned with a damp cloth and mild soap. Do not machine wash or tumble dry. Allow to air dry completely.
- **Cleaning Frame and Plastic Parts:** Wipe the frame and plastic components with a damp cloth. Do not use abrasive cleaners.
- **Wheel Maintenance:** Regularly check the wheels for debris and clean them. Lubricate moving parts (e.g., wheel axles) periodically with a silicone-based lubricant to ensure smooth operation.
- **Storage:** Store the stroller in a dry place, away from direct sunlight and extreme temperatures, to prevent fading and material degradation.
- **Regular Checks:** Periodically check all screws, rivets, and fastening devices to ensure they are secure. Tighten any loose parts.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your stroller.

Problem	Possible Cause	Solution
Stroller does not unfold/fold easily.	Folding mechanism is stiff or not fully disengaged/engaged.	Ensure the folding lock is fully released. Lubricate moving parts of the folding mechanism if necessary. Apply firm, even pressure.
Wheels squeak or do not turn smoothly.	Dirt/debris in axles; lack of lubrication.	Clean wheels and axles thoroughly. Apply a silicone-based lubricant to the moving parts of the wheels.
Brake is not holding securely.	Brake mechanism is dirty or worn.	Clean the brake mechanism. Ensure it is fully engaged. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Harness buckle is difficult to fasten/unfasten.	Debris in the buckle; misaligned prongs.	Clean the buckle thoroughly. Ensure the prongs are inserted correctly and fully.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	WOSP00047
Product Dimensions (L x W x H)	96.5 x 46.9 x 105.7 cm
Product Weight	7.9 kg
Maximum Suggested Weight	15 kg
Recommended Age	From 6 months
Harness Type	5-point harness
Fabric Type	Textile, Plastic
Material Type	EVA
Additional Features	Changing bag, shopping basket, warm footmuff, cup holder, removable snack tray

## 8. WARRANTY AND SUPPORT

MoMi products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer.

For technical support, spare parts, or any questions not covered in this manual, please contact MoMi customer service through the contact information provided on the official MoMi website or your purchase documentation.

Please have your model number (WOSP00047) and date of purchase ready when contacting support.



