

Momcozy AW01

Momcozy CocoSway Electric Baby Swing Instruction Manual

Model: AW01

IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the Momcozy CocoSway Electric Baby Swing. Keep this manual for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- **Maximum Weight:** This product is designed for infants up to 20 lbs (9 kg). Do not use for children over 20 lbs.
- **Age Range:** Suitable for infants from birth until they can sit up unassisted, attempt to climb out, or reach 20 lbs, whichever comes first.
- **Supervision:** Never leave your child unattended in the swing. Always keep your child in view.
- **Harness:** Always use the 5-point harness system. Ensure it is properly adjusted and securely fastened.
- **Placement:** Place the swing on a flat, level surface. Do not use near stairs, windows, or heat sources.
- **Assembly:** Ensure all parts are correctly assembled and securely locked before use.
- **Power Cord:** Keep the power cord away from children. Do not use if the cord is damaged.
- **Modifications:** Do not modify the product or use accessories not approved by Momcozy.

PRODUCT OVERVIEW

The Momcozy CocoSway Electric Baby Swing is designed to provide a soothing and comfortable experience for your infant, mimicking natural parent-like motions. It features a 180° rotating seat, multiple sway patterns, and adjustable speeds.

Key Features:

- **6 Parent-Inspired Sway Motions:** Offers a variety of movements to comfort your baby.
- **4 Adjustable Speeds:** Customize the intensity of the sway motion.
- **180° Rotating Seat:** Allows you to easily change the baby's orientation without moving the entire unit.

- **Adjustable Recline:** Seat reclines from 15° to 28° for optimal comfort.
- **Quiet Operation:** Designed to run silently, minimizing disturbance.
- **Breathable & Comfortable Seat:** Features breathable mesh and soft velvet-touch edges.
- **Secure 5-Point Harness:** Ensures your baby is safely secured.
- **Stable Metal Base:** Provides enhanced stability and prevents tipping.
- **Intuitive Controls:** Touchscreen panel on the base and a convenient remote control.
- **Machine-Washable Cover:** Easy to remove and clean.
- **Built-in Lullabies:** Includes 8 preset sounds and lullabies.
- **Removable Plush Toy:** For entertainment.

Components:



Figure 1: Key components of the Momcozy CocoSway Electric Baby Swing.

SETUP INSTRUCTIONS

Follow these steps to assemble your Momcozy CocoSway Electric Baby Swing.

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components are present.
2. **Assemble Base:** Attach the support legs to the main base unit. Ensure they click securely into place.
3. **Attach Seat to Base:** Align the seat's connector with the slot on the base unit. Push down firmly until it locks into position. You should hear a click.



Figure 2: Inserting the seat into the base unit.

4. **Install Seat Cushion:** Thread the shoulder and cross straps through the corresponding holes in the seat cushion. Ensure the cushion is properly aligned and secured.
5. **Attach Toy Bar:** Insert the toy bar into the designated slot on the seat frame.
6. **Connect Power:** Plug the power adapter into the swing's power port and then into a wall outlet.

Assembly Video Guide:

Video 1: This video demonstrates the step-by-step assembly process for the Momcozy CocoSway Baby Swing.

OPERATING INSTRUCTIONS

Learn how to use the various functions of your Momcozy CocoSway Electric Baby Swing.

Control Panel:



Figure 3: Touchscreen control panel on the swing base.

Remote Control:



Figure 4: Remote control for convenient operation.

1. **Power On/Off:** Press the power button on the control panel or remote to turn the swing on or off.
2. **Select Sway Motion:** Use the motion selection buttons on the control panel or remote to cycle through the 6 available sway patterns (Side to Side, Up and Down, Wave, Kangaroo Jump, Carousel, Swing).

Comfort Your Little One Just Like You Do

6 Motions
4 Speeds

  Side to Side	  Up and Down
  Wave	  Kangaroo Jump
  Carousel	  Swing



Figure 5: The 6 distinct sway motions.

3. **Adjust Speed:** Use the speed adjustment buttons (+/-) on the control panel or remote to select one of the 4 speed settings.
4. **Rotate Seat:** Manually rotate the seat 180° to face your baby in different directions. This allows for continuous

Rotate and Recline Like a Breeze

The baby swing seat easily rotates 180°



Figure 6: The 180° rotating seat feature.

5. **Adjust Recline:** Use the recline adjustment mechanism (typically a lever or button on the seat) to set the seat recline between 15° and 28°.



Velvet-Mesh Seat Cover

Keep baby safe, cozy, and cool



Adjustable Recline Positions

Adjust recline angles seamlessly from 15° to 28°

Figure 7: Adjustable recline positions for the seat.

- 6. **Play Music/Lullabies:** Press the music button to cycle through the 8 built-in lullabies. Adjust volume using the volume buttons.
- 7. **Set Timer:** Use the timer button to set the swing to operate for a specific duration (e.g., 15, 30, 45 minutes).

Operation Guide Video:

Video 2: This video provides a detailed guide on operating the Momcozy CocoSway Electric Baby Swing's features.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygiene of your baby swing.

Cleaning the Seat Cover:

The seat cover is machine-washable for easy cleaning.

- 1. **Remove Cover:** Unfasten the harness and carefully detach the seat cover from the swing frame.
- 2. **Machine Wash:** Wash the seat cover in cold water on a gentle cycle with mild detergent. Do not use bleach.



Figure 8: The seat cover is machine washable.

- 3. **Air Dry:** Lay flat to air dry. Do not tumble dry or iron.
- 4. **Reattach Cover:** Once completely dry, reattach the cover to the swing frame, ensuring all straps are correctly threaded and secured.

Cleaning the Frame and Base:

- Wipe down the plastic and metal parts of the swing frame and base with a damp cloth and mild soap.
- Do not immerse the base unit in water.
- Ensure all parts are completely dry before reassembling or using the swing.

TROUBLESHOOTING

If you encounter any issues with your Momcozy CocoSway Electric Baby Swing, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Swing does not turn on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely plugged into the swing and a working wall outlet. Try a different outlet.

Problem	Possible Cause	Solution
Swing motion is weak or inconsistent.	Weight limit exceeded; obstruction; low power.	Ensure child's weight is within the 20 lbs limit. Check for any obstructions. Verify power connection.
Remote control not working.	Batteries are dead; remote out of range; obstruction.	Replace remote batteries. Ensure remote is pointed towards the swing's sensor. Remove any obstructions between remote and swing.
Unusual noise from the motor.	Internal mechanism issue.	Discontinue use and contact customer support.
Seat does not rotate smoothly.	Obstruction or debris in the rotation mechanism.	Check for any foreign objects around the seat's rotation point. Clean if necessary.

If the problem persists after attempting these solutions, please contact Momcozy customer support for further assistance.

SPECIFICATIONS

Detailed specifications for the Momcozy CocoSway Electric Baby Swing.

- **Brand:** Momcozy
- **Model Number:** AW01
- **Color:** Haze
- **Material:** Fabric, Foam, Metal, Plastic
- **Product Dimensions (D x W x H):** 36" x 37.4" x 27.5"



Figure 9: Product dimensions.

- **Age Range:** Baby
- **Maximum Weight Recommendation:** 20 Pounds (9 kg)
- **Assembly Required:** Yes
- **UPC:** 810123509713
- **GTIN:** 810123509713

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Momcozy website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Momcozy Official Store: [Visit Momcozy Store on Amazon](#)

For any product-related inquiries, technical assistance, or warranty claims, please reach out to the manufacturer's support team.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question