

Classic IRC87581

Classic Replacement Remote Control for Daewoo 43DH55UQ2

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Classic Replacement Remote Control, specifically designed for Daewoo 43DH55UQ2 televisions. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

SETUP

1. Battery Installation

Your remote control requires two AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Product Features

Caractéristiques du produit

**Large, robust,
high-contrast keys.**

**Robustes touches
à contraste élevé.**

**Modern design for
digital TV.**

**Design moderne
pour la
TV numérique**

**Batteries
included**

Piles fournies.



Image: The Classic Replacement Remote Control shown alongside two AAA batteries, illustrating the included power source.

2. Initial Use

This remote control is pre-programmed for Daewoo 43DH55UQ2 televisions and typically requires no additional setup. Simply point the remote control towards your TV and begin using it.

OPERATING INSTRUCTIONS

Familiarize yourself with the various buttons and their functions:



Image: A clear, top-down view of the Classic Replacement Remote Control, showcasing all buttons and their layout.

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select TV channels.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the TV channel up or down.
- **Mute Button** (⏸): Mutes or unmutes the TV sound.
- **Input Button**: Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button**: Opens the TV's main menu for settings and options.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Navigate through menus and confirm selections.
- **Return/Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Closes the current menu or application.
- **Guide Button**: Displays the electronic program guide (EPG).
- **Color Buttons (Red, Green, Yellow, Blue)**: Perform specific functions within certain menus or applications, as indicated on screen.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Control media playback when applicable.



Image: A hand holding the Classic Replacement Remote Control, demonstrating typical usage while pointed towards a television screen.

MAINTENANCE

Cleaning the Remote Control

To keep your remote control in good condition, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control range is poor.	Low batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries; Remove any objects blocking the line of sight; Ensure TV's IR sensor is clear.
Certain buttons do not respond.	Button stuck or damaged; TV model incompatibility (unlikely for this specific remote).	Gently press the button multiple times; If issue persists, contact support.

SPECIFICATIONS

- **Model Compatibility:** Daewoo 43DH55UQ2 (and other compatible Daewoo models)
- **Power Source:** 2 x AAA Batteries (included)
- **Manufacturer:** Classic
- **Manufacturer Reference:** IRC87581
- **ASIN:** B0D1RFWCQS
- **Date First Available:** 15 April 2024

WARRANTY AND SUPPORT

Information regarding specific warranty terms for this product is not provided in this manual. For warranty claims, technical support, or further assistance, please refer to the seller's information provided at the time of purchase or contact the manufacturer directly.

Please retain your proof of purchase for any warranty-related inquiries.

© 2024 Classic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question