

tectake 801217

User Manual: tectake® Chloé Folding Sun Loungers

Model: 801217 | Brand: tectake

PRODUCT OVERVIEW

The tectake® Chloé Folding Sun Lounger offers a blend of functionality and comfort for your outdoor relaxation. This set of two loungers features a backrest with four adjustable positions, a continuously adjustable sunshade, and a thick, removable headrest cushion for personalized comfort. Constructed with a powder-coated steel frame and a water-repellent, breathable polyester cover, these loungers are designed for stability and ease of maintenance. Their convenient folding function and integrated carry handle make them ideal for use in your garden, patio, balcony, by the pool, or for camping and beach trips.



Image: Two tectake Chloé folding sun loungers, showcasing their design, adjustable features, and compact folded form.

SAFETY INSTRUCTIONS

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 120 kg (approximately 264 lbs) per lounger to prevent damage or injury.
- **Stable Surface:** Always place the lounger on a flat, stable, and level surface to ensure stability and prevent tipping.
- **Folding Mechanism:** Exercise caution when folding and unfolding the lounger to avoid pinching fingers or hands. Ensure all locking mechanisms are securely engaged before use.
- **Children and Pets:** Keep children and pets away from the lounger during assembly, folding, and unfolding. Do not allow children to play unsupervised on or around the lounger.
- **Weather Conditions:** While water-repellent, prolonged exposure to extreme weather conditions (heavy rain, strong winds) may cause damage. Store the lounger indoors or under cover during adverse weather.
- **Inspection:** Regularly inspect the lounger for any signs of wear, damage, or loose parts. Do not use if damaged.
- **Cleaning:** Use only mild soap and water for cleaning. Avoid harsh chemicals or abrasive materials that could damage the fabric or frame.

PACKAGE CONTENTS

Please check the package contents carefully upon receipt to ensure all parts are present.

- Folding Sun Lounger (x2)
- Headrest Cushion (x2)
- Mounting Material (pre-assembled or minimal assembly required)
- Assembly Instructions (this manual)



HIGHLIGHTS



Flexibele rugleuning

4-voudig verstelbaar, van volledig vlak tot 60°



Individuele schaduw

dankzij het traploos verstelbare schuifdak



Polyester bekleding

is ademend, robuust en waterafstotend



Inclusief hoofdkussen

extra comfort, naar behoefte verwijderbaar



Groot zijvak

met open netvak & handige ritssluiting



Stabiel stalen frame

gepoedercoat en belastbaar tot 120 kg



Slimme inklapfunctie

met 2 handgrepen voor gemakkelijk transport



100% stabiel

dankzij vloervriendelijke antislip voetjes



**ZACHT. VERWIJDERBAAR
HOOFDKUSSEN**



**HANDIG
ZIJVAK**

Image: Key features of the tectake Chloé sun lounger, including the headrest, side pocket, and durable construction.

SETUP GUIDE

The tectake Chloé sun loungers are designed for quick and easy setup.

1. Unfolding the Lounger:

Place the folded lounger on a flat, open surface. Gently pull the two ends of the lounger apart until the frame fully

extends and locks into place. Ensure all legs are firmly on the ground and the frame is stable.



Image: Visual demonstration of unfolding the lounger and adjusting the backrest.

2. Attaching the Headrest Cushion:

The headrest cushion is designed to be removable. Simply place it at the top of the lounger for added comfort. It can be adjusted or removed as desired.

3. Adjusting the Sunshade:

The sunshade is pre-attached. To adjust its angle, gently push or pull the sunshade to your desired position. It is continuously adjustable to provide optimal shade.

OPERATING INSTRUCTIONS

Adjusting the Backrest

The backrest of the Chloé sun lounger can be adjusted to four different positions, allowing you to find your ideal angle for relaxation, reading, or sunbathing.

1. To adjust the backrest, slightly lift the backrest section.
2. Locate the adjustment mechanism on the side of the lounger (a notched bar).

3. Select one of the four available notches to set the desired recline angle. The angles typically range from fully flat (0°) to an upright sitting position (60°).
4. Gently lower the backrest until it securely rests in the chosen notch. Ensure it is stable before applying full weight.



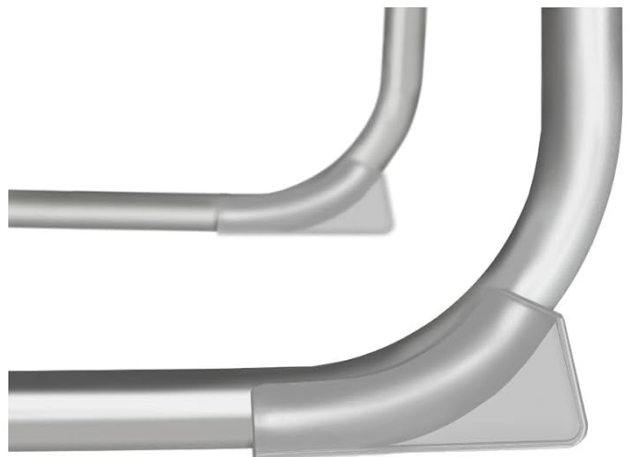
1. **Comfortabele extra's**
in de vorm van een comfortabel hoofdkussen en een handige zijtas met 2 compartimenten



2. **Rugleuning met 4 hoekstanden**
is met één handeling verstelbaar van een liggende naar een zittende positie



3. **Individueel zonnedak**
traploos verstelbaar, zodat het kan worden aangepast aan de actuele stand van de zon



4. **Effectieve bescherming tegen schade**
dankzij de 6 antislip & vloerbeschermende voetdoppen op het roestvrije aluminium frame

Image: Detailed view of the backrest adjustment mechanism and other features.

Using the Sunshade

The integrated sunshade provides personal shade and can be adjusted to block direct sunlight.

- To adjust the sunshade, gently pivot it forward or backward along its axis.
- The sunshade offers continuous adjustment, allowing you to fine-tune its angle to match the sun's position.

Utilizing the Side Pocket

Each lounger is equipped with a practical side pocket, ideal for storing small personal items such as a book, phone, or sunscreen.

- The side pocket is located on the side of the lounger, easily accessible while relaxing.
- It features multiple compartments for organized storage.

MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your tectake Chloé sun loungers.

- **Cleaning the Fabric:**

The polyester cover is water-repellent and easy to clean. For general cleaning, wipe with a damp cloth using mild soap and water. Rinse thoroughly with clean water and allow to air dry completely before folding or storing. Do not use bleach or harsh detergents.



Image: The water-repellent fabric of the lounger, demonstrating its easy-care properties.

- **Frame Care:**

The powder-coated steel frame can be wiped clean with a damp cloth. Avoid abrasive cleaners that could scratch the finish. Inspect the frame periodically for any signs of rust or damage, especially if exposed to moisture frequently.

- **Storage:**

When not in use for extended periods, especially during off-season or adverse weather, fold the loungers and store them in a dry, protected area. The integrated carry handle makes transport and storage convenient.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lounger feels unstable or wobbly.	Not fully unfolded or placed on an uneven surface.	Ensure the lounger is fully extended and all locking mechanisms are engaged. Move to a flat, level surface.
Backrest does not stay in position.	Adjustment mechanism not fully engaged.	Lift the backrest slightly and ensure it clicks securely into one of the four notches.
Difficulty folding the lounger.	Mechanism might be stiff or misaligned.	Ensure the backrest is in the fully flat position. Apply gentle, even pressure when folding. Check for any obstructions.
Fabric appears dirty or stained.	Accumulated dirt or spills.	Clean with a damp cloth and mild soap. For stubborn stains, a soft brush may be used gently. Rinse and air dry.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model	801217
Brand	tectake
Color	Grey
Material	Powder-coated steel frame, 100% polyester cover
Total Measurements (Highest Position)	Approx. 68 cm (W) x 161 cm (D) x 111 cm (H)
Total Measurements (Lowest Position)	Approx. 68 cm (W) x 190 cm (D) x 28 cm (H)
Folded Dimensions	Approx. 68 cm (W) x 16 cm (D) x 73 cm (H)
Lying Surface Dimensions	Approx. 52 cm (W) x 186 cm (L)
Sunshade Dimensions	Approx. 57 cm (W) x 40 cm (D)
Headrest Cushion Dimensions	Approx. 33.5 cm (W) x 7 cm (D) x 14 cm (H)
Side Pocket Dimensions	Approx. 35 cm (W) x 24.5 cm (H)
Adjustable Backrest Heights	4 positions (approx. 0°, 20°, 40°, 60°)
Steel Tube Diameter	Approx. 2.2 cm
Maximum Load Capacity	120 kg (264 lbs)
Item Weight	Approx. 6.3 kg (13.9 lbs) per lounger

AFMETINGEN

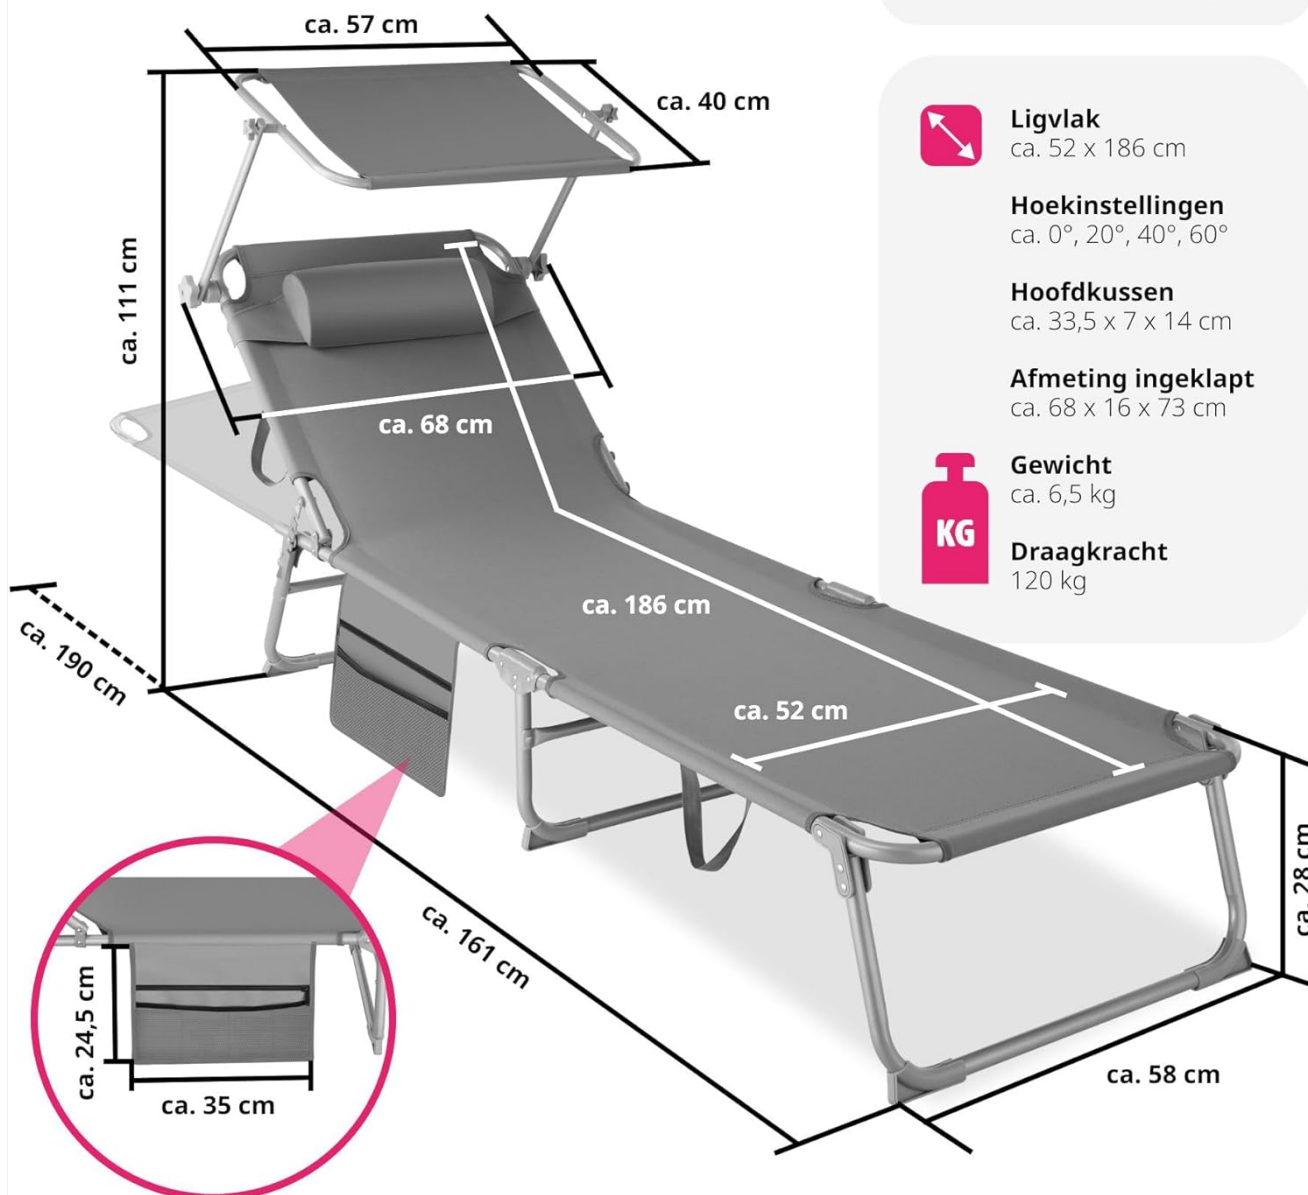 


Image: Detailed dimensional drawing of the tectake Chloé sun lounger.

WARRANTY INFORMATION

tectake products are manufactured with high-quality materials and undergo strict quality control. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official tectake website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

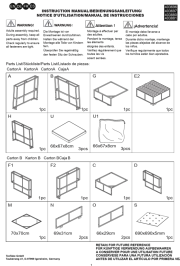 
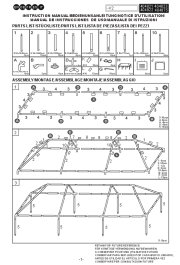 
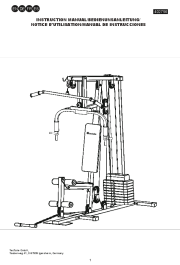 
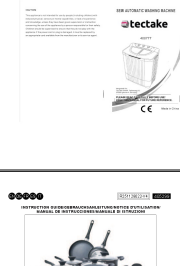 
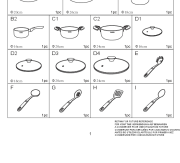 
Should you have any questions, require assistance with assembly, or encounter any issues with your tectake Chloé sun loungers, please contact tectake customer support.

For contact details, please visit the official tectake website or refer to the contact information provided on your product packaging.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this item at this time.

Related Documents - 801217

	<p>TecTake Rattan Garden Furniture Assembly Instructions</p> <p>Comprehensive assembly instructions for TecTake rattan garden furniture sets, including a detailed parts list and step-by-step visual guidance. Model numbers: 403696, 403697, 403880, 403881.</p>
	<p>tectake Gazebo Instruction Manual - Assembly Guide</p> <p>Comprehensive instruction manual for assembling and maintaining your tectake gazebo. Includes parts list, step-by-step assembly, location advice, care instructions, and contact information.</p>
	<p>TecTake 402756 Home Gym Assembly and Exercise Guide</p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>
	<p>TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p>
	<p>tectake Non-Stick Cookware Set Instruction Manual & Parts List</p> <p>Comprehensive instruction manual and parts list for the tectake non-stick cookware set (Model R251128022-V4, 405299), including safety guidelines, usage instructions, and cleaning advice.</p>

