

- [Manuals.plus](#) /
- › [Dtirszxy](#) /
 - › Dtirszxy Replacement Infrared Remote Control for ZEEMR D1 Pro and M1 Pro Z1 Projectors User Manual

Dtirszxy Dtirszxy

Dtirszxy Replacement Infrared Remote Control User Manual

For ZEEMR D1 Pro and M1 Pro Z1 Projectors

1. PRODUCT OVERVIEW

This manual provides instructions for the Dtirszxy Replacement Infrared Remote Control, designed for use with ZEEMR D1 Pro and M1 Pro Z1 projectors. This remote control allows for convenient operation of your projector's functions from a distance.



Image 1.1: Front view of the Dtirszy Replacement Infrared Remote Control.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Dtirszy Replacement Infrared Remote Control
- 1 x User Manual (this document)

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Image 3.1: Rear view of the remote control with the battery compartment open, showing slots for two AAA batteries.

4. OPERATING INSTRUCTIONS

To ensure proper function, point the remote control directly towards the signal receiving window of your ZEEMR projector during operation.

4.1 Button Functions

- **Power Button** (): Turns the projector on or off.
- **Settings Button** (⚙️): Accesses the projector's settings menu.
- **Directional Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK Button (Center of D-Pad)**: Confirms selections.
- **Back Button** (↶): Returns to the previous screen or menu.
- **Microphone Button** (): Activates voice control or search (if supported by the projector).

- **Home Button ():** Returns to the main home screen.
- **Volume Up/Down (+ / -):** Adjusts the audio volume.
- **Menu/List Button (≡):** Opens context-sensitive menus or lists.
- **Focus/Keystone Buttons (/):** Adjusts image focus or keystone correction.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or solvents, as these may damage the surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

6. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the proper polarity.
 - Replace the batteries with fresh ones.
 - Make sure there are no obstructions between the remote control and the projector's infrared receiver.
 - Confirm you are pointing the remote directly at the projector's IR sensor.
- **Short operating range:**
 - Replace the batteries.
 - Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.
- **Specific buttons not working:**
 - Check for any physical damage or debris around the button.
 - Ensure the remote is compatible with the specific function you are trying to use on your projector model.

7. SPECIFICATIONS

Model Number	Dtirszxy
Compatible Devices	ZEEMR D1 Pro, ZEEMR M1 Pro Z1 Projectors
Control Type	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Color	Black

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical support, warranty claims, or any questions regarding your Dtirszy remote control, please contact the seller or retailer from whom you purchased the product. Please have your purchase details and product model number ready when contacting support.

© 2024 Dtirszy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D1RKHFT4>

More documents and user manuals: <https://manuals.plus/>