

XSHOT 36809

XSHOT Skins Pro Series Fury-X Blaster Instruction Manual

1. INTRODUCTION AND OVERVIEW

The XSHOT Skins Pro Series Fury-X Blaster is engineered for accuracy and distance, designed to enhance your dart blasting experience. This manual provides essential information for the safe and effective use of your blaster.

The Fury-X features a quick-release 20 half-dart capacity clip and utilizes XSHOT Air Pocket Technology half darts for improved flight performance. It also incorporates Slam Fire Action, allowing for rapid dart deployment.



**GO PRO WITH
XSHOT FURY-X**

Image 1.1: User holding the XSHOT Skins Pro Series Fury-X Blaster, demonstrating its ready-to-use stance.



Image 1.2: A display of various XSHOT Pro Series blasters, including the Fury-X, highlighting the product line.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

This product is recommended for ages **14 years and up** due to its performance capabilities. Always wear eye protection when operating this blaster to prevent eye injuries. Do not aim at eyes or face. Use only official XSHOT darts. Do not modify the blaster or darts.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x XSHOT Skins Pro Series Fury-X Blaster
- 40x XSHOT Pro Series Half-Length Air Pocket Technology Foam Darts

4. SETUP AND ASSEMBLY

4.1. Loading Darts into the Magazine

1. Hold the magazine securely.
2. Insert the XSHOT Pro Series Half-Length Darts into the magazine slots, ensuring they are fully seated. The magazine has a capacity of 20 darts.



Image 4.1: Demonstrating the correct method for loading darts into the magazine.

4.2. Inserting the Magazine into the Blaster

1. Locate the magazine well on the underside of the blaster.
2. Align the loaded magazine with the magazine well.
3. Push the magazine firmly upwards until it clicks into place. Ensure it is securely seated before use.



Image 4.2: Illustrating the process of inserting the loaded dart magazine into the blaster.

5. OPERATING INSTRUCTIONS

5.1. Priming the Blaster

To prime the blaster, pull the priming slide located at the rear of the blaster all the way back until it locks into place, then push it forward. This action prepares a dart for firing.

5.2. Firing the Blaster (Slam Fire Action)

1. Ensure the blaster is primed and the safety is disengaged (if applicable).
2. Aim at your target, ensuring no people or animals are in the line of fire.
3. To fire a single dart, pull the trigger.

4. For rapid firing, hold down the trigger and continuously pump the priming slide back and forth. This is the Slam Fire Action feature, allowing you to quickly empty the magazine.



Image 5.1: User demonstrating the dual-wielding capability and rapid firing action of the blaster.

6. MAINTENANCE

To ensure optimal performance and longevity of your XSHOT Skins Pro Series Fury-X Blaster, follow these maintenance guidelines:

- **Cleaning:** Wipe the blaster with a clean, dry cloth to remove dust and debris. Do not use harsh chemicals or immerse the blaster in water.
- **Dart Care:** Store darts in a clean, dry place. Avoid bending or damaging darts, as this can affect performance and potentially cause jams.
- **Storage:** Store the blaster in a cool, dry environment away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

7.1. Blaster Not Firing or Darts Jamming

- **Check Darts:** Ensure darts are not damaged, bent, or wet. Use only official XSHOT darts.
- **Magazine Insertion:** Verify that the magazine is fully and correctly inserted into the blaster until it clicks.
- **Priming:** Confirm the blaster is fully primed. The priming slide must be pulled all the way back and then pushed forward until it locks.
- **Clear Jams:** If a dart is visibly jammed, carefully remove the magazine and gently clear the obstruction from the dart path. Do not force the priming slide or trigger if a jam is suspected.

If issues persist after following these steps, please contact customer support.

8. SPECIFICATIONS

Product Dimensions	20.08 x 2.56 x 9.25 inches
Item Weight	1.76 pounds
Item Model Number	36809
Manufacturer Recommended Age	14 years and up
Release Date	November 1, 2024
Manufacturer	ZURU

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official ZURU XSHOT website. Keep your purchase receipt as proof of purchase.