

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Meilocar](#) /

› [Meilocar Storage Cabinet SHX7340-WH User Manual](#)

Meilocar SHX7340-WH

Meilocar Storage Cabinet SHX7340-WH User Manual

Farmhouse Sideboard Buffet Cabinet with Storage and Height Adjustable Shelf

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Meilocar Storage Cabinet, Model SHX7340-WH. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

The Meilocar Storage Cabinet is designed to offer versatile storage solutions for various rooms, including living rooms, dining rooms, kitchens, and hallways. It features a spacious tabletop, a large drawer, and a cabinet with an adjustable shelf.



Image 1.1: The Meilocar Storage Cabinet (Model SHX7340-WH) in a white finish, featuring a top drawer and two cabinet doors with decorative X-panels.

2. SAFETY INFORMATION

WARNING: To prevent tipping, the anti-tipping device must be properly installed and used. Failure to do so can result in serious injury or death.

- Always install the anti-tipping device provided with the cabinet.
- Do not allow children to climb on the cabinet.
- Place heavier items in the lower sections of the cabinet.
- Ensure the cabinet is placed on a level surface.

MORE DETAILS



Image 2.1: Detail showing the anti-tipping device attachment point on the cabinet's rear top edge, along with the magnetic door lock and metal door handles.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. Refer to the included instruction manual's diagram for a complete list of components.

Expected Components:

- Cabinet panels (top, bottom, sides, back)
- Drawer components
- Cabinet doors
- Adjustable shelf
- Hardware pack (screws, dowels, cam locks, handles, anti-tipping kit, magnetic locks)
- Assembly instruction manual

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the step-by-step diagrams provided in the separate instruction manual included in your package. It is recommended to have two people for assembly.

General Assembly Steps:

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Compare parts with the diagram in the instruction manual.
2. **Assemble the Frame:** Attach side panels to the bottom panel using the specified hardware.
3. **Install Back Panel:** Secure the back panel to the assembled frame.
4. **Assemble Drawer:** Follow instructions to construct the drawer box and attach the drawer front and handle.
5. **Install Drawer into Frame:** Slide the assembled drawer into its designated runners within the cabinet frame.
6. **Attach Cabinet Doors:** Mount the doors to the cabinet frame using hinges. Ensure proper alignment.
7. **Install Adjustable Shelf:** Insert shelf pins at the desired height and place the adjustable shelf.
8. **Attach Handles:** Secure the metal handles to the drawer and cabinet doors.
9. **Install Anti-Tipping Device:** Crucially, attach the anti-tipping device to the back of the cabinet and secure it to a wall stud according to the instructions.

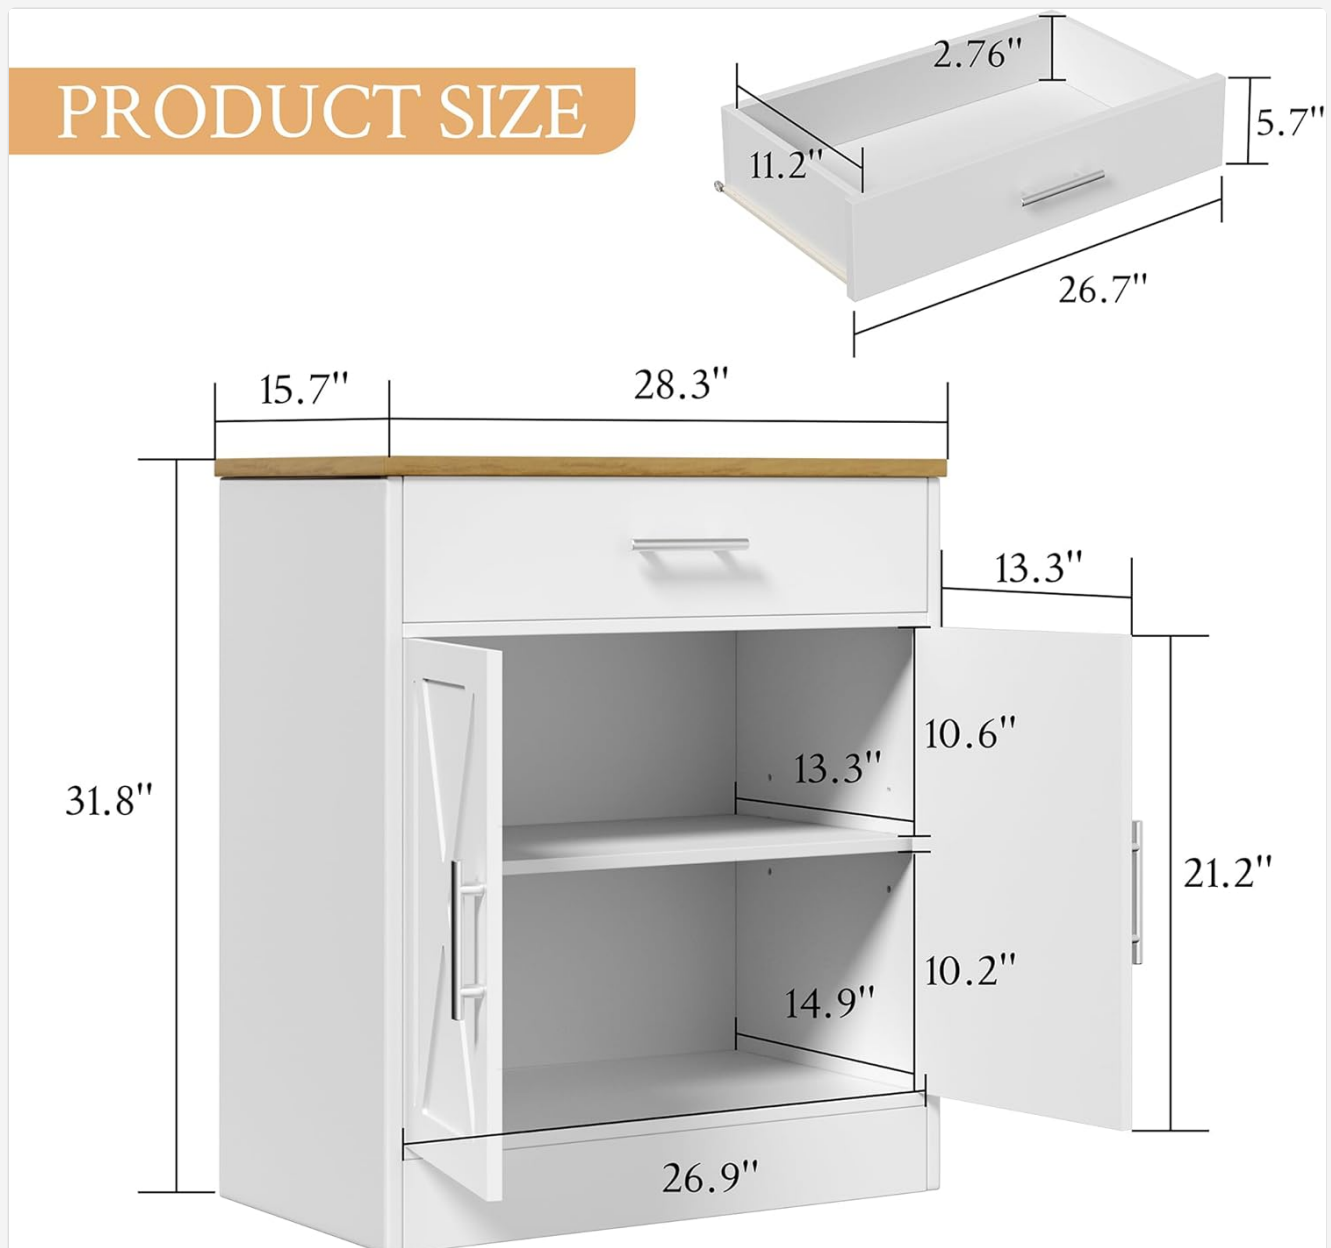


Image 4.1: Dimensional diagram of the Meilocar Storage Cabinet, illustrating overall dimensions (28.3"W x 15.7"D x 31.8"H), drawer dimensions (26.7"W x 11.2"D x 2.8"H), and internal cabinet shelf spacing.

5. OPERATING INSTRUCTIONS

5.1 Using the Adjustable Shelf

The cabinet features one adjustable shelf, allowing you to customize the storage space to accommodate items of various heights.

1. Open the cabinet doors.
2. Remove any items from the shelf.
3. Carefully lift the shelf and remove the four shelf pins from their current holes.
4. Reinsert the shelf pins into the desired height adjustment holes. Ensure all four pins are at the same level.
5. Place the shelf back onto the pins, ensuring it is stable and level before placing items on it.



Image 5.1: View inside the cabinet showing the adjustable shelf and the multiple pre-drilled holes for height customization.

5.2 Using the Drawer

The top drawer provides convenient storage for smaller items. It is designed for smooth operation.

- To open, gently pull the metal handle.
- To close, push the drawer firmly until it is fully seated.
- Avoid overloading the drawer to ensure smooth movement and prevent damage to the runners.



Image 5.2: The top drawer of the cabinet shown open, revealing ample space for storing various items like dishes or utensils.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining or damage to the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Placement:** Avoid placing the cabinet in direct sunlight or near heat sources, as this can cause fading or warping.
- **Moving:** When moving the cabinet, always lift it rather than dragging it to prevent damage to the legs and frame.

7. TROUBLESHOOTING

Problem: Cabinet feels unstable or wobbly.

- **Solution:** Ensure all assembly screws are tightened. Verify the cabinet is on a level surface. Confirm the anti-tipping device is securely installed to a wall stud.

Problem: Drawer does not slide smoothly.

- **Solution:** Check for obstructions in the drawer runners. Ensure the drawer is not overloaded. Verify that the drawer slides were installed correctly during assembly.

Problem: Cabinet doors do not close properly.

- **Solution:** Check for obstructions. Ensure hinges are properly aligned and tightened. Adjust hinges if necessary (refer to the assembly manual for hinge adjustment details).

8. SPECIFICATIONS

Feature	Detail
Brand	Meilocar
Model Number	SHX7340-WH
Color	White
Product Dimensions (D x W x H)	15.7" x 31.8" x 28.3"
Drawer Dimensions (W x D x H)	26.7" x 11.2" x 2.8"
Material	Engineered Wood (Frame, Back), Wood (Top)
Special Feature	Adjustable Shelf, Anti-tipping Device
Number of Shelves	1 (adjustable)
Number of Drawers	1
Assembly Required	Yes
Item Weight	51 Pounds

9. WARRANTY AND CUSTOMER SUPPORT

Meilocar offers a free replacement or parts guarantee for any quality problem within 1 year from the date of purchase.

Customer Service:

If you encounter any problems or have questions regarding your Meilocar Storage Cabinet, please contact our customer support team. Our team aims to respond within 24 hours.

To contact customer service:

1. Log in to your Amazon account.
2. Navigate to "Your Orders".

3. Find the order ID for your Meilocar Storage Cabinet.
4. Click "Contact seller".

© 2025 Meilocar. All rights reserved.

This manual is for informational purposes only. Meilocar reserves the right to make changes to products without prior notice.