

Odokee U2-SV-001

Odokee Digital Alarm Clock (Model U2-SV-001) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the Odokee Digital Alarm Clock, Model U2-SV-001. Please read this manual thoroughly before using the product to ensure correct operation and to maximize its features. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The Odokee Digital Alarm Clock is designed for ease of use and clear visibility, featuring a large display, adjustable brightness, multiple alarm sounds, and a multi-color night light. It also includes a convenient USB charging port.

Key Features:

- Large, bold 2-inch numbers for easy readability.
- 5-level adjustable brightness dimmer for the time display.
- Extra loud alarm with 5 selectable wake-up sounds and adjustable volume (30-110dB).
- Battery backup for time and alarm settings during power outages (display off).
- Integrated USB charging port for external devices.
- 8-color night light with adjustable brightness.
- Front-facing buttons for effortless setup and operation.

Components:

Refer to the image below for a visual representation of the clock's front panel and buttons.



Figure 2.1: Front view of the Odokee Digital Alarm Clock showing the display and control buttons.

The back of the clock features the power input, USB charging port, and battery compartment.



Figure 2.2: Rear view of the alarm clock with power input and USB charging port.

3. SETUP

3.1 Power Connection

1. Connect the provided AC adapter to the DC 5V input port on the back of the alarm clock.
2. Plug the AC adapter into a standard electrical outlet. The display will illuminate.



Figure 3.1: Connecting the alarm clock to power using the included AC adapter.

3.2 Battery Backup Installation

The clock requires 2 AAA alkaline batteries (not included) for backup. These batteries maintain time and alarm settings during a power outage, but the display will not light up when running on battery power alone.

1. Open the battery compartment cover on the back of the clock.
2. Insert 2 AAA alkaline batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover.



Figure 3.2: Battery compartment for AAA batteries.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

1. Press and hold the **TIME SET** button for 2 seconds to enter time setting mode. The hour digits will flash.
2. Press the **HOUR 12/24H** button to adjust the hour.
3. Press the **MIN AL ON/OFF** button to adjust the minute.
4. Press **TIME SET** again to confirm and exit time setting mode.



Figure 4.1: Time setting button layout.

4.2 12/24 Hour Format

To switch between 12-hour and 24-hour time formats:

- In normal time display mode, press the **HOUR 12/24H** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.



Figure 4.2: Toggling between 12-hour and 24-hour display.

4.3 Display Brightness Dimmer

The clock display has 5 brightness levels and can be turned off completely.

- Press the **LIGHT DIM** button (also the Snooze button) repeatedly to cycle through the 5 brightness levels and the 'off' state.

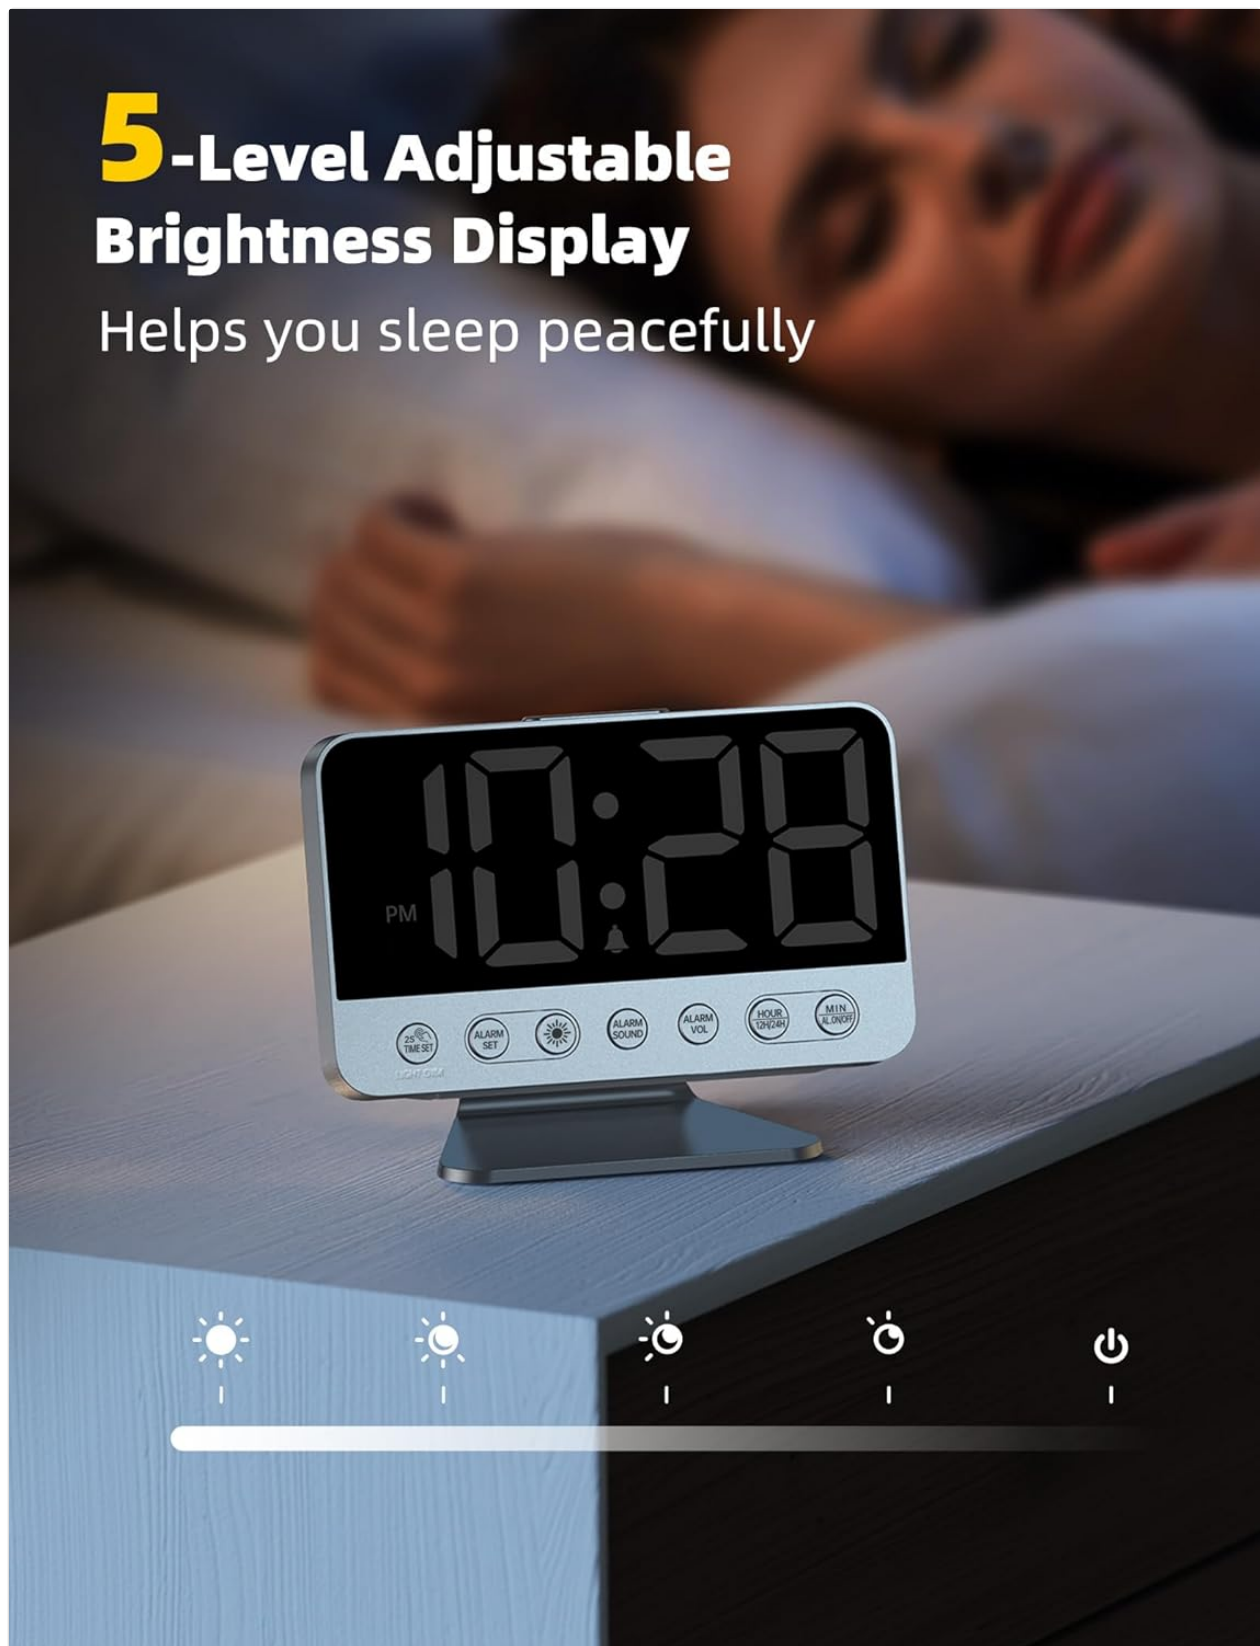


Figure 4.3: Adjusting the display brightness.

4.4 Setting the Alarm

1. Press and hold the **ALARM SET** button for 2 seconds. The alarm hour digits will flash.
2. Press the **HOUR 12/24H** button to adjust the alarm hour.

3. Press the **MIN AL ON/OFF** button to adjust the alarm minute.
4. Press **ALARM SET** again to confirm the alarm time.
5. After setting the alarm time, the alarm will be automatically activated. A bell icon will appear on the display.

4.5 Alarm Sound Selection

The clock offers 5 different alarm sounds.

- While the alarm is not sounding, press the **ALARM SOUND** button repeatedly to cycle through the 5 available sounds: Birds Chirping, Beep, Soft Music, Ode to Joy, Siren.

5 Optional
Alarm Sounds

4 Adjustable
Volume Levels

Start your wonderful day with the
customizable alarm



Figure 4.4: Available alarm sounds.

4.6 Alarm Volume Adjustment

The alarm volume can be adjusted from 30dB to 110dB.

- While the alarm is not sounding, press the **ALARM VOL** button repeatedly to cycle through the available volume levels.

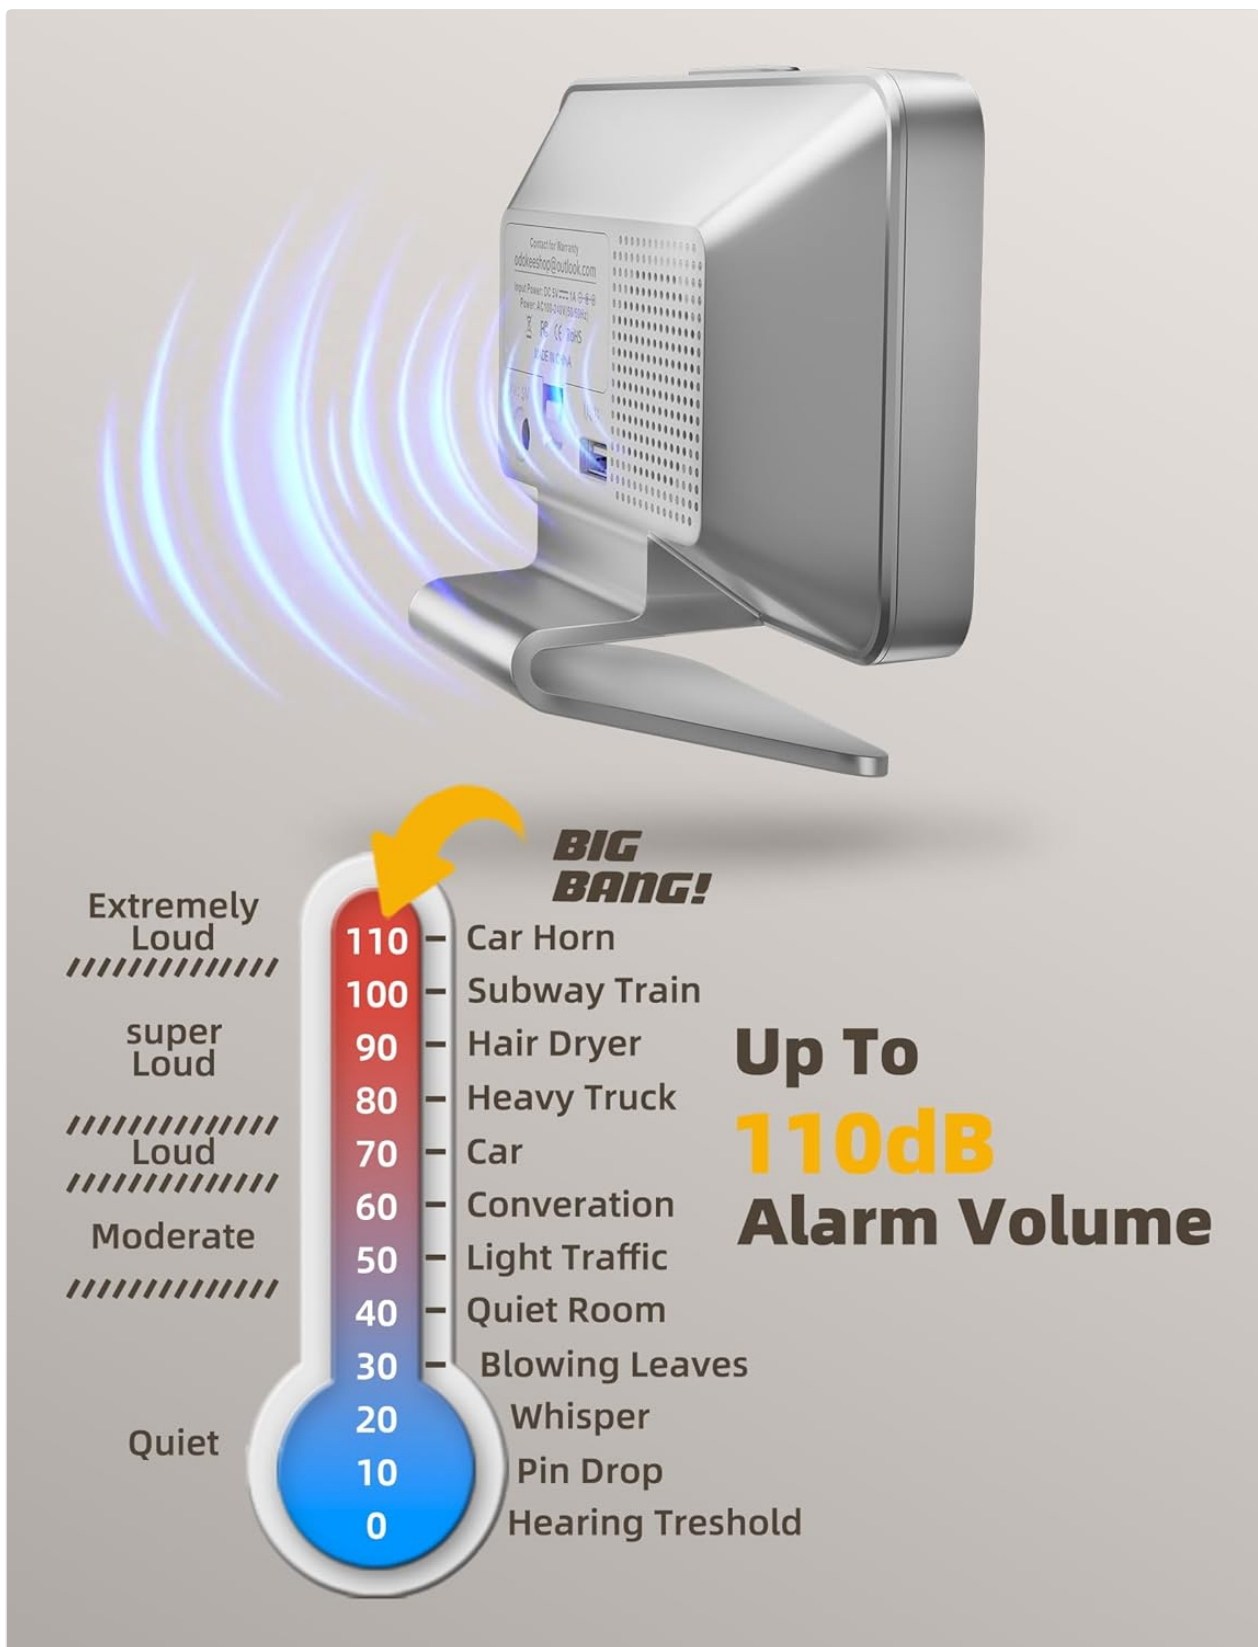


Figure 4.5: Alarm volume adjustment range.

4.7 Snooze Function

When the alarm sounds:

- Press the large **LIGHT DIM** button (Snooze button) on top of the clock to activate snooze. The alarm will pause for 9 minutes and then sound again.
- To turn off the alarm completely, press any other button on the front panel.



Figure 4.6: Location of the Snooze/Dimmer button.

4.8 Night Light Function

The clock features an 8-color night light with adjustable brightness.

- Press the **LIGHT** button (sun icon) to turn on the night light.
- Press the **LIGHT** button repeatedly to cycle through the 8 colors and adjust their brightness levels.
- To turn off the night light, continue pressing the **LIGHT** button until it switches off.

8-Color Night Light

Creat a relaxing atmosphere
in your bedroom



ON/OFF
Options



5-Levels Brightness
of Night Light



Figure 4.7: The 8-color night light feature.

4.9 USB Charging Port

A USB charging port is located on the back of the clock.

- Connect your smartphone or other USB-powered device to this port using a compatible USB cable (not included) to charge it.



Figure 4.8: Using the integrated USB charging port.

5. MAINTENANCE

5.1 Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the surface.

5.2 Battery Replacement

- If the clock experiences frequent power outages or if the backup function is unreliable, replace the 2 AAA batteries in the battery compartment.
- Ensure proper polarity when inserting new batteries.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off.	Clock is not plugged in, or brightness is set to 'off'.	Ensure AC adapter is securely plugged in. Press the LIGHT DIM button to adjust brightness.
Display is off during power outage.	This is normal. Battery backup only maintains settings, not display.	No action needed. Display will return when power is restored.
Alarm does not sound.	Alarm is not set or is turned off. Volume is too low.	Ensure alarm is set and the bell icon is visible. Adjust alarm volume using ALARM VOL button.
Time is incorrect after power outage.	Backup batteries are dead or not installed.	Install or replace 2 AAA batteries. Reset the time if necessary.
USB charging port not working.	Clock is not powered, or device cable is faulty.	Ensure clock is plugged into an outlet. Try a different USB cable or device.

7. SPECIFICATIONS

- **Model:** U2-SV-001
- **Brand:** Odokee
- **Display Type:** Digital
- **Power Source:** Corded Electric (AC adapter included)
- **Battery Backup:** 2 x AAA batteries (not included)
- **Product Dimensions:** 5.5"W x 4"H
- **Material:** Plastic
- **Special Features:** Adjustable Brightness, Adjustable Volume, USB Charging Port, Large Display, Mood Light (8 colors)
- **Item Weight:** 6 ounces (171 Grams)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Odokee Digital Alarm Clock (Model U2-SV-001) comes with an 18-month warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as described under normal use.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Odokee customer support:

- **Email:** odokeesshop@outlook.com

Please provide your model number (U2-SV-001) and purchase details when contacting support to facilitate a quicker resolution.