

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MONODEAL](#) /

› [MONODEAL Portable CD Player Instruction Manual](#)

MONODEAL CD318

MONODEAL Portable CD Player Instruction Manual

Model: CD318

1. INTRODUCTION

Thank you for choosing the MONODEAL Portable CD Player. This device offers a versatile audio experience with its ability to play CDs, connect via Bluetooth, tune into FM radio, and support USB and AUX inputs. Featuring dual stereo speakers and a long-lasting rechargeable battery, it is designed for convenient use at home, in the car, or on the go. This manual provides detailed instructions to help you get the most out of your new CD player.

2. WHAT'S IN THE Box

- CD player
- Remote Control
- Charging Cable (Type-C)
- 3.5mm Audio Cable (AUX)
- Instruction Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your MONODEAL Portable CD Player.



Figure 3.1: Front view of the CD player with its remote control, highlighting the display and main buttons.



Figure 3.2: Illustration of the internal 2x3W stereo speakers, designed for clear and balanced sound.



Figure 3.3: The included remote control, allowing convenient operation from a distance.



Figure 3.4: The CD player's ability to produce big volume and surround sound for an immersive listening experience.

Controls and Ports

- **Power Button:** Turns the device on/off.
- **Mode Button:** Cycles through playback modes (CD, Bluetooth, FM, AUX, USB).
- **Volume +/- Buttons:** Adjusts the audio output level.
- **Play/Pause Button:** Starts or pauses playback.
- **Skip/Search Buttons:** Navigates tracks or scans radio frequencies.

- **Repeat/Program Button:** Controls repeat functions or programs CD tracks.
- **Sleep Button:** Activates the sleep timer.
- **USB Port:** For playing music from USB drives.
- **AUX Input/Output:** For connecting external audio devices.
- **Headphone Jack:** For private listening.
- **Type-C Charging Port:** For charging the internal battery.

4. SETUP

4.1 Charging the Device

The MONODEAL CD Player features a built-in 4000mAh rechargeable battery, providing up to 12 hours of continuous playback on a full charge.

1. Connect the provided Type-C charging cable to the charging port on the device.
2. Plug the other end of the cable into a compatible USB power adapter (not included), car charger, or power bank. Ensure the power adapter provides 2A output for optimal charging.
3. The charging indicator will illuminate during charging and turn off when fully charged.



Figure 4.1: The 4000mAh battery capacity ensures extended playback time.

4.2 Initial Power On

Before first use, ensure the device is fully charged. Press and hold the Power button to turn on the CD player. The LCD screen will light up.

5. OPERATING INSTRUCTIONS

5.1 Selecting Playback Modes

Press the **MODE** button repeatedly to cycle through the available playback modes: CD, Bluetooth (BT), FM Radio, AUX, and USB.



Figure 5.1: The five versatile playback modes available on the device.

5.2 CD Playback

1. Open the CD compartment cover.
2. Carefully place a CD (CD, CD-R, HD-CD, MP3, WMA formats supported) onto the spindle, label side up.
3. Close the CD compartment cover firmly.
4. Ensure the device is in CD mode. Playback should begin automatically. If not, press the **Play/Pause** button.
5. Use the **Skip/Search** buttons to navigate between tracks.
6. The anti-jump design provides 40 seconds of anti-skip protection for CDs and 120 seconds for MP3s, ensuring uninterrupted playback even with movement.



Figure 5.2: The anti-jump feature ensures smooth playback in various environments, including a moving car.

5.3 Bluetooth Connectivity (RX/TX Mode)

The CD player supports Bluetooth 5.3 for both receiving and transmitting audio.

5.3.1 RX Mode (Receive)

In RX (Receiver) mode, the CD player acts as a Bluetooth speaker, allowing you to stream audio from your smartphone, tablet, or computer.

1. Switch the CD player to Bluetooth mode (BT). The display will show "BT" and the Bluetooth indicator will flash, indicating pairing mode.
2. On your external device, enable Bluetooth and search for "MONODEAL CD318".
3. Select the device to pair. Once connected, the Bluetooth indicator will stop flashing.
4. You can now play audio from your external device through the CD player's speakers.

5.3.2 TX Mode (Transmit)

In TX (Transmitter) mode, the CD player can send audio from CDs, FM radio, or USB to Bluetooth headphones or external Bluetooth speakers.

1. Ensure your Bluetooth headphones or speaker are in pairing mode.

2. Switch the CD player to Bluetooth mode (BT). It will automatically search for nearby Bluetooth receiving devices.
3. Once connected, the audio from the CD player's current source (CD, FM, USB) will be transmitted to the paired Bluetooth device.

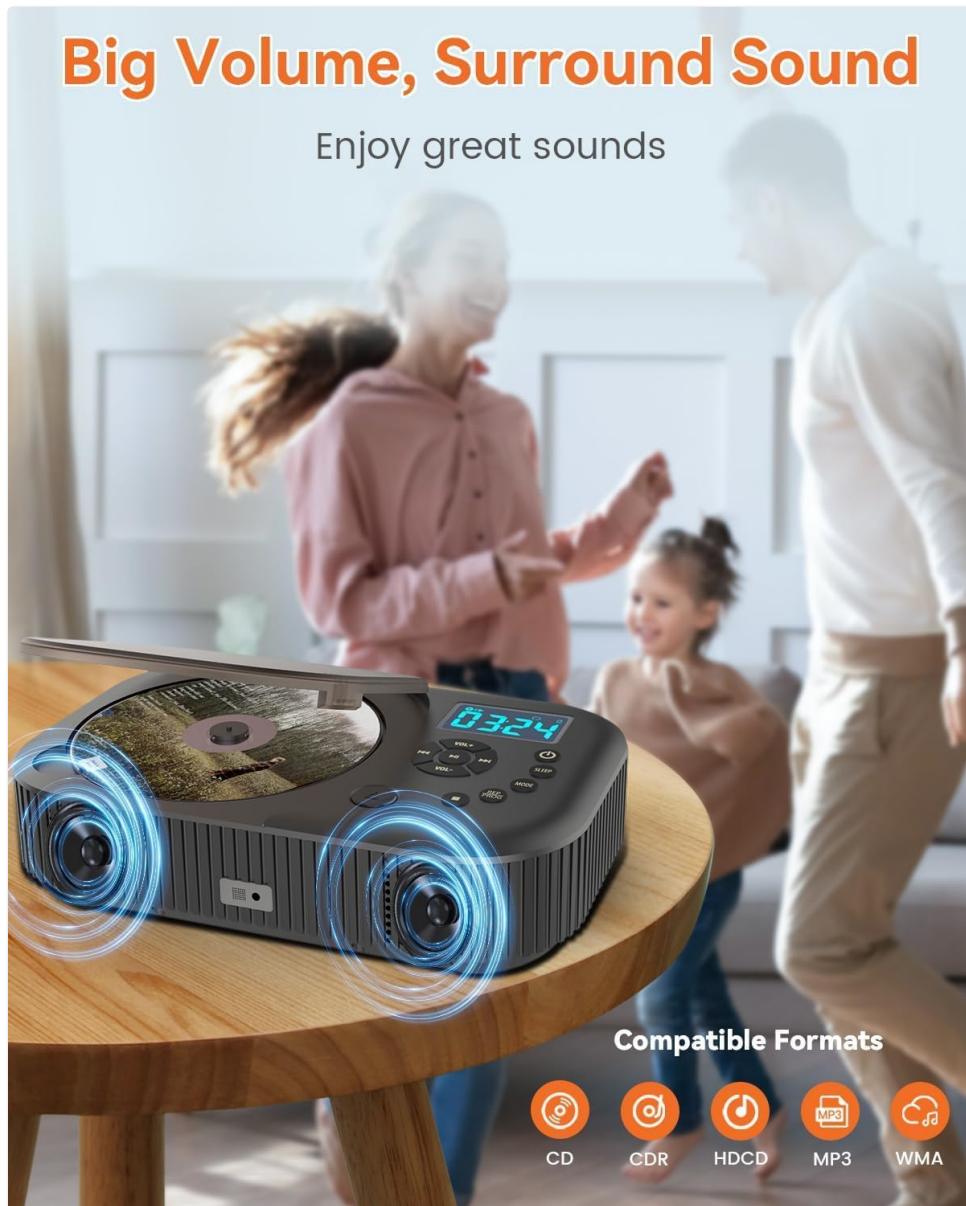


Figure 5.3: The dual wireless mode allows the CD player to act as both a Bluetooth speaker (RX) and a Bluetooth transmitter (TX).

Video 5.1: Demonstration of connecting the CD318 to Bluetooth receiver and transmitter functions.

Video 5.2: Overview of the portable CD player's Bluetooth capabilities.

5.4 FM Radio Operation

The CD player includes an FM radio tuner (87.5MHz-108MHz).

1. Switch the device to FM mode.
2. Use the **Skip/Search** buttons to manually tune to a frequency or press and hold to auto-scan for available stations.
3. The LCD display will show the current frequency.

5.5 USB Playback

Play MP3 or WMA audio files directly from a USB flash drive.

1. Insert a USB flash drive into the USB port on the device.

2. Switch the device to USB mode. Playback should begin automatically.
3. Use the **Skip/Search** buttons to navigate between tracks.

5.6 AUX Mode

Connect external audio sources like smartphones, tablets, or car speakers using the 3.5mm AUX cable.

1. Connect one end of the 3.5mm audio cable to the AUX port on the CD player.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Switch the CD player to AUX mode.
4. Control playback and volume from your external device.

5.7 Remote Control Usage

The included remote control allows for convenient operation from up to 10 meters away.

- Point the remote control directly at the sensor on the front of the CD player.
- Buttons on the remote mirror most functions available on the device itself, including mode selection, volume control, track navigation, and program functions.

5.8 Sleep Timer

The sleep timer allows you to set a duration after which the player will automatically turn off.

1. Press the **SLEEP** button (often combined with PROG).
2. Each press will cycle through preset sleep times (e.g., 10, 20, 30, 40, 50, 60, 70, 80, 90 minutes).
3. The selected time will be displayed briefly. The player will turn off after the set duration.



Figure 5.4: The sleep timer allows you to fall asleep to your favorite music.

6. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use abrasive cleaners or solvents.
- CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- Storage:** When not in use for extended periods, store the CD player in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Power cable not connected properly.	Charge the device fully; Ensure charging cable is securely connected.
CD does not play or skips.	CD is dirty or scratched; CD is inserted incorrectly; Incorrect mode selected.	Clean the CD with a soft cloth; Reinsert the CD correctly; Ensure CD mode is selected.

Problem	Possible Cause	Solution
No sound from speakers.	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume; Disconnect headphones if using speakers; Verify correct mode.
Bluetooth connection fails.	Device not in pairing mode; External device too far; Interference.	Ensure CD player is in BT mode and flashing; Move devices closer; Restart both devices.
Remote control not working.	Battery low/dead; Obstruction between remote and player; Not pointing correctly.	Replace remote battery; Remove obstructions; Point remote directly at the player's sensor.

8. SPECIFICATIONS

Feature	Detail
Model Number	CD318
Product Dimensions	8.66 x 5.12 x 2.17 inches
Item Weight	2.2 pounds
Connectivity Technology	Bluetooth 5.3, USB, AUX
Battery Capacity	4000mAh
Playback Time	Up to 12 hours (fully charged)
FM Radio Frequency	87.5MHz-108MHz
Anti-Skip Protection	40 seconds (CD), 120 seconds (MP3)
Supported Disc Formats	CD, CD-R, HDCD, MP3, WMA

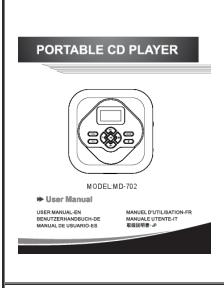
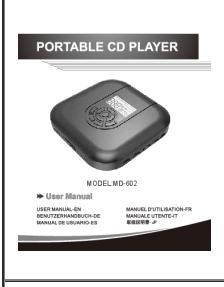
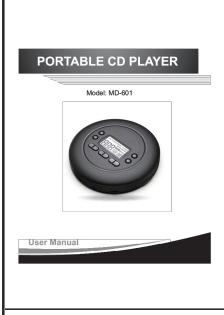
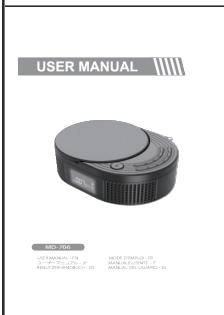
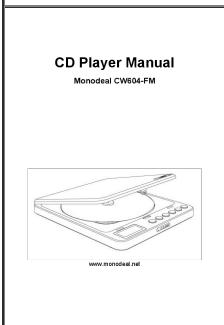
9. WARRANTY AND SUPPORT

MONODEAL provides the following support for your product:

- 12-Month Replacement:** In case of manufacturing defects or issues within 12 months of purchase, the product is eligible for replacement.
- Lifetime Support:** MONODEAL offers lifetime technical support for any questions or problems you may encounter with your CD player.

For assistance, please refer to the contact information provided in your product packaging or visit the official MONODEAL website.

Related Documents - CD318

 The image shows the front cover of the MONODEAL Portable CD Player User Manual for Model MD-702. It features a black portable CD player with a digital display and buttons. The text 'PORTABLE CD PLAYER' and 'MODEL MD-702' are at the top, and 'User Manual' with multi-language text below it.	<p><u>MONODEAL Portable CD Player User Manual - Model MD-702</u></p> <p>User manual for the MONODEAL Portable CD Player (Model MD-702), providing safety instructions, operating procedures, troubleshooting tips, and feature explanations for this consumer electronic device.</p>
 The image shows the front cover of the Portable CD Player MD-602 User Manual. It features a black portable CD player with a digital display and buttons. The text 'PORTABLE CD PLAYER' and 'MODEL MD-602' are at the top, and 'User Manual' with multi-language text below it.	<p><u>Portable CD Player MD-602 User Manual</u></p> <p>User manual for the MD-602 Portable CD Player, covering setup, operation, troubleshooting, and safety instructions in multiple languages.</p>
 The image shows the front cover of the MonoDeal MD-601 Portable CD Player User Manual. It features a black portable CD player with a digital display and buttons. The text 'PORTABLE CD PLAYER' and 'Model: MD-601' are at the top, and 'User Manual' with multi-language text below it.	<p><u>MonoDeal MD-601 Portable CD Player User Manual</u></p> <p>User manual for the MonoDeal MD-601 portable CD player, detailing safety, operation, features, and troubleshooting for this audio device.</p>
 The image shows the front cover of the Stereo Bluetooth Headset M109 User Manual. It features a red and white manual cover with a small image of the headset. Text on the cover includes 'SIZE: 85x120MM' and '手风琴折叠' (Accordion fold).	<p><u>Stereo Bluetooth Headset M109 User Manual</u></p> <p>User manual for the MONODEAL Stereo Bluetooth Headset M109, detailing basic operations, Bluetooth pairing, LED indicators, charging, specifications, and troubleshooting.</p>
 The image shows the front cover of the MONODEAL MD-706 Portable CD Player User Manual. It features a black portable CD player with a digital display and buttons. The text 'USER MANUAL' and 'MONODEAL MD-706' are at the top, and 'User Manual' with multi-language text below it.	<p><u>MONODEAL MD-706 Portable CD Player User Manual</u></p> <p>Explore the MONODEAL MD-706 portable CD player with this user manual. Learn about its features, Bluetooth connectivity, USB playback, FM radio, AUX input, BT TX function, and troubleshooting tips for a complete audio experience.</p>
 The image shows the front cover of the CD Player Manual for Monodeal CW604-FM. It features a black CD player with a digital display and buttons. The text 'CD Player Manual' and 'Monodeal CW604-FM' are at the top, and 'User Manual' with multi-language text below it.	<p><u>Monodeal CW604-FM CD Player User Manual</u></p> <p>This manual provides detailed instructions for operating the Monodeal CW604-FM CD Player, including function descriptions, FM transmitter usage, FAQs, and specifications. Learn how to play CDs, use the FM transmitter, and troubleshoot common issues.</p>