

manuals.plus /

> [maysida](#) /

> [maysida Electronic Dance Pad with Light-up 8-Button Wireless Bluetooth Instruction Manual](#)

maysida YQ813-8

maysida Electronic Dance Pad with Light-up 8-Button Wireless Bluetooth Instruction Manual

Model: YQ813-8

1. INTRODUCTION

Thank you for choosing the maysida Electronic Dance Pad. This interactive dance mat is designed to provide an engaging and active experience for children, promoting hand-foot coordination, sensory development, and physical fitness. Featuring light-up arrows, multiple game modes, and Bluetooth connectivity, this manual will guide you through the setup, operation, and maintenance of your new dance pad.

Newest Light Up Dancing Mat for Kids



Hand-foot
Coordination



Enlighten
Musical Talent



Sensory
Development



Strengthen
Physical Fitness



Memory
Training



Build up
Confidence



Image: A child enjoying the maysida Electronic Dance Pad, highlighting its role in promoting physical activity and development.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during use.
- Ensure the dance mat is placed on a flat, stable surface to prevent slipping.
- Keep away from water and moisture.
- Do not attempt to disassemble or modify the product.
- Use only the recommended battery type (4 x AA batteries).

3. PACKAGE CONTENTS

The maysida Electronic Dance Pad package includes:

- 1 x Dance Mat

4. SETUP

1. Battery Installation:

Locate the battery compartment on the underside of the control unit. Open the compartment and insert 4 x AA batteries, ensuring correct polarity. Close the compartment securely.



Image: Detailed view of the battery installation process for the dance mat's control unit.

2. Placement:

Unfold the dance mat and place it on a flat, dry, and stable surface. Ensure there is enough clear space around the mat for safe movement during play.

5. OPERATING INSTRUCTIONS

The maysida Electronic Dance Pad offers various modes for engaging play:

5.1 Power On/Off

Press the power button on the control unit to turn the dance pad on or off.

5.2 Mode Selection

The dance pad features 3 primary game modes, accessible via buttons on the control unit:



Image: Overview of the dance mat's three game modes and their functionalities.

1. Free Dance Mode:

In this mode, follow the light-up arrows on the mat and the corresponding sounds. It includes 9 challenge levels with 3 difficulty settings (Easy, Medium, Hard). This mode enhances coordination and reaction time.

Your browser does not support the video tag.

Video: Official product video demonstrating the Free Dance Mode with light-up arrows and music.

2. Memory Mode:

This mode challenges players to remember and repeat sequences of flashing dance spots. It features 50 challenge levels, designed to improve memory and cognitive skills in a fun way.

3. Bluetooth Mode:

Connect the dance mat to any Bluetooth-enabled device (e.g., smartphone, tablet) to play your favorite music. The mat offers 9 speed levels, allowing you to dance along to your own tunes at a comfortable pace.

Your browser does not support the video tag.

Video: Official product video showcasing the Bluetooth connectivity feature of the dance mat.

5.3 Volume Adjustment

Use the dedicated volume buttons on the control unit to adjust the sound level to your preference.

5.4 Light-up Arrows and Flowing Water LED Effect

The dance pad features an upgraded design with a cool flowing water LED effect and light-up arrow patterns on the screen of the battery box. These visual cues enhance the interactive experience, guiding players through the dance steps.

Your browser does not support the video tag.

Video: Official product video highlighting the new upgraded light-up features and flowing water LED effect.

6. MAINTENANCE

- **Cleaning:** The dance mat is made of premium vinyl material and can be wiped clean with a damp rag.

Do not immerse the control unit in water.

- **Storage:** The dance mat is designed to be easy to fold and carry. Fold it neatly for compact storage when not in use.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dance pad does not power on.	Batteries are low or incorrectly installed.	Check battery polarity and replace with fresh AA batteries.
No sound or low volume.	Volume is set too low or muted.	Adjust the volume using the dedicated buttons on the control unit.
Buttons/arrows not responding.	Loose connection or sensor issue.	Ensure the mat is fully unfolded and flat. Re-press the area firmly. If the issue persists, power cycle the device.
Bluetooth connection issues.	Device not in pairing mode or too far.	Ensure your device's Bluetooth is on and the dance mat is in Bluetooth mode. Keep devices within range.

8. SPECIFICATIONS

Product Dimensions: 39.37 x 34.25 x 0.2 inches

Item Weight: 2.33 pounds

Item Model Number: YQ813-8

Manufacturer Recommended Age: 3 years and up

Power Source: 4 x AA batteries (not included)

Connectivity: Wireless Bluetooth

Material: Premium Vinyl (non-toxic, harmless, non-slip)

9. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact maysida customer service through the retailer's platform or the official maysida website. Please retain your proof of purchase for warranty validation.

