

[manuals.plus](#) /

› [Ufesa](#) /

› [UFESA CFNP Ceiling Fan with Light Instruction Manual](#)

Ufesa CFNP

UFESA CFNP Ceiling Fan with Light Instruction Manual

Model: CFNP

Brand: Ufesa

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your UFESA CFNP Ceiling Fan with Light. Please read this manual thoroughly before installation and use, and keep it for future reference.



3 Aspas
3 Lâminas
3 blades
3 Lames



The UFESA CFNP Ceiling Fan with Light installed in a room, showcasing its three natural wood blades and integrated light.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

General Safety

- Ensure the ceiling fan is installed by a qualified electrician in accordance with local electrical codes.
- Disconnect power at the main circuit breaker before installation, cleaning, or any maintenance.
- Do not operate the fan with damaged blades or housing. Inspect regularly for any signs of wear or damage.
- Keep hands, hair, and clothing away from moving fan blades during operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Electrical Safety

- Verify that the voltage indicated on the fan matches your local power supply before connecting.
- All wiring must be in accordance with national and local electrical codes.
- Ensure proper grounding to prevent electric shock.
- Do not use the fan in damp or wet locations, or where it may be exposed to water.

PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present and undamaged. If any parts are missing or damaged, contact Ufesa customer service.



A close-up of the fan's motor housing and a blade, representing the main components.

The package should typically include:

- 3 Natural Wood Blades
- Motor Assembly
- Downrod (typically 15cm and 25cm options)

- Mounting Bracket + Canopy
- Integrated LED Light Kit / Lampshade
- Controller Assembly
- Yoke Cover
- Remote Control
- Mounting Hardware (screws, anchors)

SETUP AND INSTALLATION

Important: Disconnect power at the circuit breaker before beginning any installation work.

1. Step 1: Mount the Bracket

Fix the fan's mounting bracket to the ceiling. Use a pencil to mark the drilling points. Ensure the bracket is securely fastened to a structural beam or a suitable ceiling electrical box capable of supporting the fan's weight.

2. Step 2: Drill Holes

Drill holes at the marked points using an appropriate drill bit for your ceiling material.

3. Step 3: Insert Anchors

Insert the provided ceiling anchors into the drilled holes. Tap gently with a hammer if necessary to ensure they are flush with the ceiling surface.

4. Step 4: Secure Bracket

Align the mounting bracket with the anchors and secure it firmly with the provided screws. Ensure it is stable and does not wobble.

5. Step 5: Connect Light Wiring

Connect the light wires from the fan to the terminal block on the mounting bracket. Match colors (e.g., blue to blue, brown to brown, etc.) according to the wiring diagram in the full manual.

6. Step 6: Connect Controller Wiring

Connect the wiring from the light kit to the fan's controller. Ensure all connections are tight and secure.

7. Step 7: Assemble Fan Base

Assemble the fan base by attaching the chosen downrod (15cm or 25cm) to the motor assembly. Secure it with the provided pin and screw.

8. Step 8: Hang Fan Base

Carefully lift the assembled fan base and hang it onto the hook or support provided on the ceiling mounting bracket. This allows you to work on wiring with the fan temporarily supported.

9. Step 9: Connect Base Wiring to Controller

Connect the main power wiring from the ceiling to the fan's controller, and then connect the controller to the fan motor wiring. Ensure all connections are correct and secure.

10. Step 10: Position Controller and Cables

Carefully tuck the controller and all excess cables into the opening of the ceiling support bracket, ensuring no wires are pinched.

11. Step 11: Connect Ground Wire

Connect the ground wire (usually green/yellow) from the fan base to the ground terminal on the mounting bracket or ceiling wiring.

12. Step 12: Install Canopy

Slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws. Ensure it covers all wiring connections.

13. Step 13: Attach Blades

Attach the three natural wood blades to the fan motor assembly using the provided screws. Ensure they are tightened evenly to prevent wobbling.

14. Step 14: Install Light Kit

Remove the small screws from the base of the fan's light housing. Place the LED light support, screw it into place, and then attach the light cover (lampshade) by twisting or securing it as per the design.

OPERATING INSTRUCTIONS

Your UFESA CFNP ceiling fan is controlled by the included remote control. Ensure batteries are installed correctly in the remote.



The remote control allows easy access to all fan and light functions.

Power On/Off

Press the power button () on the remote control to turn the fan and light on or off.

Fan Speed Control


The fan offers 6 adjustable speeds. Use the numbered speed buttons (1-6) on the remote to select your desired airflow intensity. Speed 1 is the lowest, and Speed 6 is the highest.



The fan features 6 speeds and an 8-hour timer function.

Light Control

The integrated LED light has 3 selectable color temperatures: natural light, cold light, and warm light. Use the light button () on the remote to cycle through these settings to create the desired ambiance.

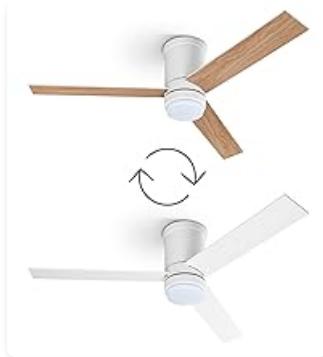

The fan light offers natural, warm, and cold light options.

Summer/Winter Function

This fan features a reversible motor for year-round comfort. Use the summer/winter button () on the remote to switch between modes.

- **Summer Mode (Downward Airflow):** Blades rotate counter-clockwise, creating a downward breeze that cools the room.
- **Winter Mode (Upward Airflow):** Blades rotate clockwise, circulating warm air trapped near the ceiling downwards without creating a direct draft, helping to distribute heat more evenly.



Timer Function

Set the fan to automatically turn off after a specified period using the timer buttons (1H, 4H, 8H) on the remote control. This is useful for energy saving or for use during sleep.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

Cleaning

- Always disconnect power before cleaning.
- Regularly clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- Ensure the fan is completely dry before restoring power and operating.

Blade Inspection

- Periodically check that all blade screws are tight. Over time, they may loosen, causing the fan to wobble or create noise.
- Ensure blades are free from cracks or damage. Replace damaged blades immediately.

TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following common problems and solutions:

Fan Does Not Start

- Check if the main power supply to the fan is connected and turned on.
- Ensure the circuit breaker for the fan is in the 'ON' position.
- Verify all electrical connections are secure and correctly wired.
- Check the remote control battery and replace if necessary.

Fan Wobbles

- Ensure all blade screws are tightened evenly. Loose screws can cause imbalance.
- Check that the mounting bracket is securely fastened to the ceiling and that the downrod is properly seated.
- Verify that the blades are not bent or damaged.

Light Does Not Work


- Check the light wiring connections within the fan housing.
- Ensure the light kit is properly installed and connected to the fan's electrical system.
- If the light is LED and not replaceable by the user, a faulty LED module may require professional service.

Remote Control Not Working

- Replace the batteries in the remote control with new ones.
- Ensure there are no obstructions between the remote control and the fan's receiver.

- Confirm the remote control is paired with the fan (refer to specific pairing instructions if available in the full manual).

SPECIFICATIONS

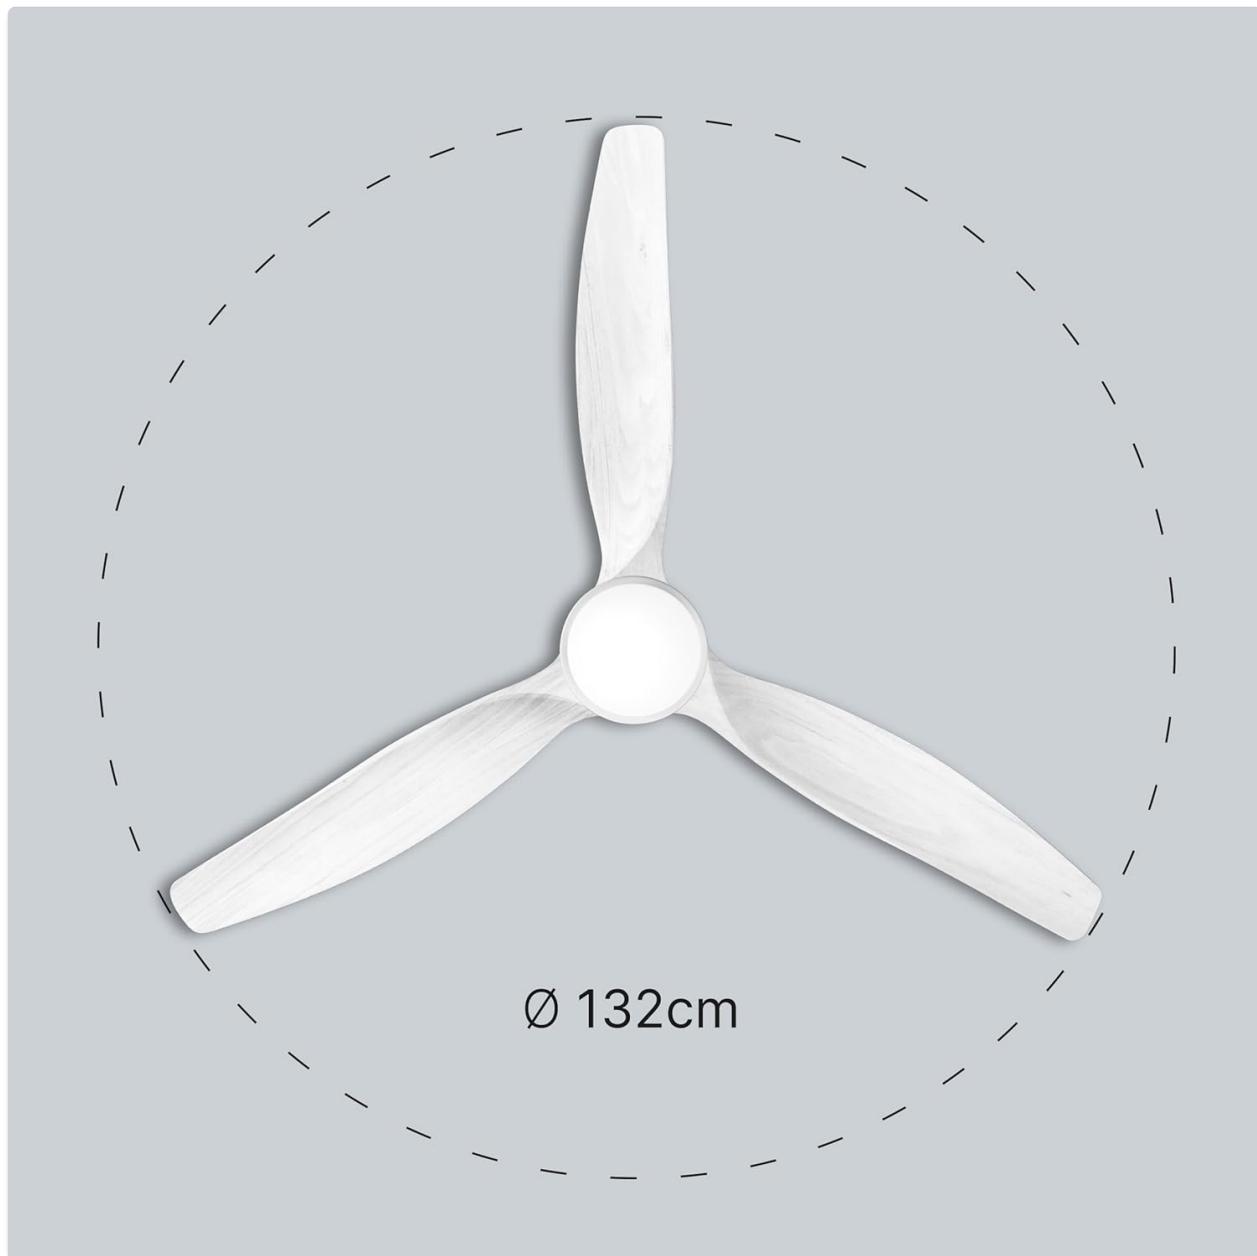

The fan has a diameter of 132 cm, suitable for various room sizes.

Feature	Specification
Model Number	CFNP
Power	40W
Speeds	6
Blade Material	Natural Wood
Fan Diameter	132 cm

Feature	Specification
Light Levels	3 (Natural, Cold, Warm)
Timer	Up to 8 hours
Special Features	Ultra-silent DC motor, Summer/Winter function, Remote control
Dimensions (L x W x H)	25.5 x 68.5 x 32.5 cm
Weight	5.63 kg
Power Source	Electric Cable
Certifications	CE, UL

WARRANTY AND SUPPORT

For detailed warranty information, including terms, conditions, and duration, please refer to the warranty card included with your product. You can also find this information on the official Ufesa website.

For customer support, technical assistance, or to inquire about replacement parts, please visit the Ufesa website or contact their customer service department directly. Have your product model number (CFNP) and purchase date ready when contacting support.

Official Ufesa Website: www.ufesa.es