

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [universal](#) /

> [Universal Turbo Elite Max Blender L62190 Instruction Manual](#)

universal L62190

Universal Turbo Elite Max Blender L62190 Instruction Manual

MODEL: L62190

Brand: Universal

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

This manual provides essential information for the safe and efficient operation of your Universal Turbo Elite Max Blender, Model L62190. Please read all instructions carefully before first use and retain this manual for future reference.

The Universal Turbo Elite Max Blender is designed for domestic use, offering powerful blending capabilities for various food preparations. It features a robust motor, durable glass pitcher, and versatile control options.

Key Features:

- **Powerful 1500W Motor:** Delivers peak power for efficient blending, ice crushing, and sauce preparation.
- **Heavy-Duty 71oz (2.1 Liter) Glass Pitcher:** Constructed from thick glass, resistant to scratches and temperature changes, ideal for both hot and cold ingredients.
- **Metal-on-Metal Drive System:** Ensures durability and reliable performance for long-term use.
- **Versatile 3-Speed Settings:** Provides precise control for various blending tasks.
- **Pre-programmed Functions:** Includes Pulse, Smoothie Program, and Reversible Technology for optimized results.
- **6-Blade Stainless Steel System:** Designed for superior blending, faster results, and ultra-smooth textures.

71OZ
9 CUP
PITCHER

UNBEATABLE BLENDING FORCE

POWERFUL AND EFFICIENT ENGINE



1500W Max Power

Image 1.1: Universal Turbo Elite Max Blender highlighting its 71oz pitcher, 6 stainless steel blades, and 1500W power.

2. Setup

Before using your blender for the first time, ensure all packaging materials are removed and components are clean. Refer to the 'Maintenance' section for initial cleaning instructions.

Assembly Instructions:

1. **Place the Motor Base:** Position the motor base on a clean, dry, and stable surface. Ensure it is unplugged from the power outlet.
2. **Assemble the Blade and Gasket:** Ensure the rubber gasket is properly seated around the blade assembly.
3. **Attach Blade Assembly to Pitcher:** Carefully place the blade assembly into the bottom opening of the glass pitcher. Secure it by twisting the base collar clockwise until it is tight.
4. **Place Pitcher on Motor Base:** Align the assembled glass pitcher onto the motor base. Turn the pitcher clockwise until you hear a click, indicating it is securely locked into place. This ensures proper adjustment and prevents leakage during operation.
5. **Secure the Lid:** Place the lid firmly onto the glass pitcher. Ensure the filler cap is also securely in

place.



Image 2.1: Exploded view of the blender components, showing the motor base, glass pitcher, blade assembly, and lid.

3. Operating Instructions

Always ensure the blender is properly assembled and the pitcher is securely locked onto the base before plugging it in and operating.

General Blending:

1. **Add Ingredients:** Place your ingredients into the glass pitcher. Do not exceed the maximum fill line (71oz / 2.1L).
2. **Secure Lid:** Ensure the lid and filler cap are firmly in place.
3. **Plug In:** Connect the blender to a 110V power outlet. The ON/OFF indicator light will illuminate.
4. **Select Speed:** Turn the central dial to select your desired speed (LOW, MEDIUM, HIGH). For quick bursts, use the PULSE button.
5. **Start Blending:** Press the START/STOP button to begin blending.
6. **Stop Blending:** Press the START/STOP button again or turn the dial to the 'OFF' position to stop.

VERSATILITY PERSONIFIED

STYLISH DESIGN - MATCH WITH YOUR
KITCHEN DECORATION



Image 3.1: Blender in use, demonstrating the 3-speed settings for various preparations.

Using Pre-programmed Functions:

- **Smoothie Program:** Press the 'SMOOTHIE' button for an optimized blending cycle to create smooth juices and fruit smoothies, even with ice.
- **Reversible Technology:** Press the 'REVERSIBLE' button to activate the dual-direction blade function, ensuring thorough blending and preventing ingredients from getting stuck.
- **Pulse Function:** Press and hold the 'PULSE' button for short bursts of high-speed blending, ideal for chopping or controlled mixing. Release to stop.

Video 3.1: Official product video demonstrating the Universal Turbo Elite Max Blender's features, including pre-programmed functions and blending capabilities.



Images 3.2, 3.3, 3.4: Icons illustrating reversible blade technology, ice crushing prowess, and velvety smooth textures.

BATCH BLENDING CHAMPION

POWER FOR ANY OCCASION AND PREPARATION:



COCKTAIL
NIGHT



PARTY
MILKSHAKES



HEART-WARMING
SOUPS

710Z - 9-CUP - LARGE CAPACITY

Image 3.5: Examples of preparations possible with the blender, including cocktails, milkshakes, and soups.

4. Maintenance

Proper cleaning and maintenance will extend the life of your blender and ensure optimal performance.

Cleaning Instructions:

1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the glass pitcher from the motor base. Disassemble the blade assembly from the pitcher.
3. **Wash Pitcher and Blade Assembly:** The glass pitcher, lid, and blade assembly are dishwasher safe. Alternatively, wash them by hand with warm, soapy water. Use a brush to clean around the blades carefully. Rinse thoroughly.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Dry Components:** Ensure all parts are completely dry before reassembling or storing the blender.

Caution: The blades are sharp. Handle with extreme care during cleaning to avoid injury.

5. Troubleshooting

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; pitcher not correctly seated; power outage.	Ensure the power cord is securely plugged into a 110V outlet. Verify the pitcher is locked onto the motor base (listen for a click). Check your household's power supply.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients stuck.	Add more liquid. Reduce the amount of ingredients. Use the 'PULSE' function or 'REVERSIBLE' technology to dislodge ingredients. Ensure ingredients are cut into smaller pieces.
Blender leaks during operation.	Blade assembly not tightened; pitcher not seated correctly; gasket missing or damaged.	Ensure the blade assembly is securely tightened to the pitcher. Verify the pitcher is locked onto the motor base. Check if the rubber gasket is properly in place and undamaged.
Burning smell or smoke from motor base.	Overheating due to prolonged use or overloading.	Immediately turn off and unplug the blender. Allow it to cool down for at least 15-20 minutes. Reduce the load or blending time. If the issue persists, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Universal customer support for assistance.

6. Specifications

Feature	Detail
Brand	Universal
Model Number	L62190
Power	1500 Peak Watt
Voltage	110V
Number of Speeds	3 (Low, Medium, High) + Pulse
Control Type	Multiple Speed and Program Control
Container Material	Glass
Capacity	71 oz (9-cup / 2.1 Liter)
Blade System	6-point Stainless Steel Blades
Special Features	Heavy Duty, Removable Blade, Removable Glass Container, Reversible Technology, Smoothie Program

Feature	Detail
Product Dimensions	10.2"D x 7.8"W x 15"H
Item Weight	10.43 pounds
Manufacturer	Universal
Date First Available	April 16, 2024

7. Warranty & Support

Warranty Information:

This Universal Turbo Elite Max Blender comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage.

Customer Support:

For any questions, technical assistance, or warranty claims, please contact Universal customer support. Contact details can typically be found on the product packaging, warranty card, or the official Universal website.