

[Manuals.plus](#) /

› [CDC DIGI](#) /

› Digital Electronic Money Safe User Manual

CDC DIGI 1710-1

Digital Electronic Money Safe User Manual

Model: 1710-1

Brand: CDC DIGI

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your CDC DIGI Digital Electronic Money Safe. Designed for high security, this 4.6L alloy steel safe features an intelligent alarm system and versatile access options, making it ideal for securing cash, jewelry, important documents, and other valuables in your home or office.



The Digital Electronic Money Safe, designed for secure storage of valuables.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Digital Electronic Money Safe
- 2 x Emergency Override Keys
- 2 x Mounting Bolts
- 1 x Anti-scratch Carpet
- 1 x Detailed User Manual (this document)

SAFETY INFORMATION

To ensure safe and proper use of your digital safe, please adhere to the following guidelines:

- Always store the emergency override keys in a secure location **outside** the safe. Never keep them inside the safe.
- Ensure the safe is securely mounted to a wall or floor using the provided mounting bolts to prevent unauthorized removal.
- Do not store flammable liquids, explosives, or other hazardous materials inside the safe.
- Avoid placing the safe in areas with extreme temperatures, high humidity, or direct sunlight.



The safe is designed with anti-drilling, anti-prying, and fireproof features for enhanced security.

SETUP

1. Installing Batteries

Locate the battery compartment on the inside of the safe door. Insert 4 x 'AA' batteries, ensuring correct polarity. Close the battery compartment cover.

2. Setting Your Personal Code

Follow these steps to set your personal access code:

1. Remove the Override Key Cover and use an Override Key to open the safe.
2. With the safe door open, locate and press the red reset button on the inside of the door, near the hinge.
3. Within 15 seconds of pressing the reset button, enter your desired new password (3-8 digits) on the keypad.
4. Press the 'E' button to confirm your new password. If a wrong digit is entered, press 'C' to clear the entry and re-enter.

5. Test your new code with the door open to ensure it works correctly before closing the safe.



Visual guide for setting your password and mounting the safe.

3. Mounting the Safe

The safe can be securely mounted to a wall or floor using the provided mounting bolts. This enhances security and prevents unauthorized removal.

1. Choose a suitable location for mounting (e.g., inside a closet, cabinet, or on a wall).
2. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe.
3. Drill holes into the wall or floor using an appropriate drill bit.
4. Insert the expansion screws (if applicable) into the drilled holes.
5. Align the safe with the holes and secure it using the provided mounting bolts.

OPERATING INSTRUCTIONS

Your safe offers two primary methods for opening:

1. Opening with Override Key

This method is primarily for initial access, battery replacement, or if you forget your code.

- Remove the override key cover located on the front panel.
- Insert the override key into the keyhole. Ensure it is fully inserted.
- Turn the key counter-clockwise while simultaneously turning the knob clockwise to open the safe door.

2. Opening with Personal/Master Code

This is the standard method for daily access.

- Enter your personal 3-8 digit code on the keypad.
- Press the 'E' button to confirm the code.
- If the code is correct, the indicator light will turn green. Within 5 seconds, turn the knob clockwise to open the safe door.
- If an incorrect code is entered, the indicator light will flash red. After three incorrect attempts, the alarm system may activate.

Open the way



Option 1

Override Keys+Turning Knob

Option 2

**Personal Code/Master Code
+Turning Knob**



The safe can be opened using either the override keys or a personal/master code.

MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your safe:

- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears or if the keypad becomes unresponsive. Always use new 'AA' alkaline batteries.
- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electronic components.
- **Keypad Care:** Keep the keypad clean and free from dust or debris. Do not press the buttons with excessive force.

TROUBLESHOOTING

If you encounter issues with your safe, refer to the following common problems and solutions:

Safe Does Not Open with Code

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient power. Replace them if necessary.
- **Incorrect Code:** Verify that you are entering the correct personal or master code. Press 'C' to clear any previous entry before re-entering the code.
- **Keypad Lockout:** If too many incorrect attempts are made, the keypad may temporarily lock. Wait a few minutes before trying again.
- **Use Override Key:** If all else fails, use the emergency override key to open the safe.

Alarm System Issues

- **Accidental Trigger:** Ensure the safe is not being moved or tampered with when the alarm is active.
- **Low Battery:** A low battery can sometimes cause erratic behavior, including false alarms. Replace batteries.

SPECIFICATIONS

Product Size



Detailed product dimensions for the safe.

Feature	Description
Brand	CDC DIGI
Model Number	1710-1

Feature	Description
Product Dimensions	9.33"D x 7.95"W x 7.08"H (23x17x17CM)
Lock Type	Electronic, Key
Color	Black
Capacity	4.6 Liters
Material	Metal (SPCC Steel)
Special Features	Alarm System, Fireproof
Mounting Type	Floor Mount, Wall Mount
Item Weight	5.61 pounds
UPC	759224174409

WARRANTY AND SUPPORT

Your CDC DIGI Digital Electronic Money Safe is designed for reliability and durability. For any questions, technical assistance, or warranty inquiries, please contact the CDC DIGI Customer Service Center. Our team is ready to provide support whenever you need it.

Please refer to your purchase documentation for specific warranty terms and contact information.