

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DDcafor](#) /

› [DDcafor Garage Door Opener Remote Control User Manual - Model 893MAXENL](#)

## DDcafor 893MAXENL

# DDcafor Garage Door Opener Remote Control User Manual

Model: 893MAXENL | Brand: DDcafor

---

## 1. INTRODUCTION

---

This manual provides instructions for the DDcafor Garage Door Opener Remote Control, Model 893MAXENL. This remote is designed for wide compatibility with various garage door openers. Please read these instructions carefully before use.

### 1.1 Key Features

- **Wide Compatibility:** Compatible with Liftmaster, Chamberlain, and Sears Craftsman garage door openers manufactured after 1993. Supports yellow learn button (Security + 2.0), purple learn button (315 MHz Security+), red/orange learn button (390 MHz Security+), and green learn button (390 MHz Billion Code) door openers.
- **Replacement Remote:** Functions as a replacement for models such as 139.53753, 53753, 139.18191, HBW2028, 371LM, 373LM, 375LM, 950CD, 953D, 956D, 53680, 139.53680, 53681, 139.53681, HBW1255, 971LM, 973LM, 139.53879, 893MAX, 891LM, 893LM.
- **Convenient Design:** Compact and lightweight, suitable for carrying in a purse, pocket, or attached to a keychain.
- **Enhanced Security:** Features rolling code technology to minimize radio wave interference. Three buttons support three channels to control up to three garage door openers.

## 2. COMPATIBILITY CHECK

---

Before programming, ensure your garage door opener meets the following criteria:

1. Your opener is a LiftMaster, Chamberlain, or Sears Craftsman brand, manufactured from 1993 to the current year.
2. Your opener has a working motor unit with a learn button whose shape and color match the examples below. The color refers to the learn button itself, not the LED color.

**Note: This remote does NOT work for vehicle HomeLink training systems.**

# Check before buying


Please take a moment to check,  
your opener **must meet BOTH** criteria 1&2 below

1

LiftMaster, Chamberlain, Sears Craftsman  
Brand, made from year 1993 -current

2

Working motor unit, with learn button's  
shape & color look like examples below

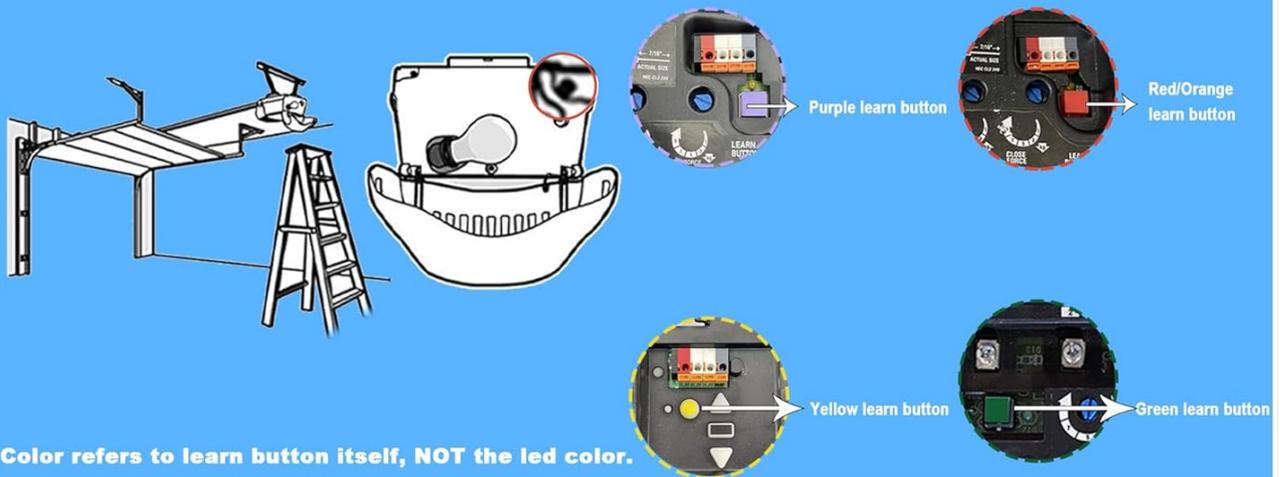

**Note: does NOT work for vehicle homelink training**


Figure 1: Compatibility overview with different learn button types.

# Easy 1-2-3

First, we get remote ready to use, by set remote's mode to match your opener unit.


# 1

Grab a ladder, check learn button's color on motor unit.

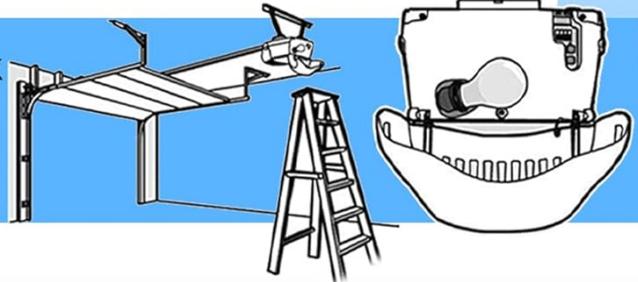

# 2

Press and hold any button (you wish to use) on our remote, observe LED status, then check table below

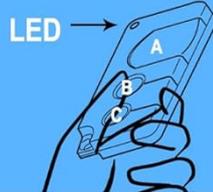

LED Color	Mode #	Compatible Opener Type
GREEN ●	Mode 1	Purple Learn Button Red/Orange Learn Button
RED ●	Mode 2	Yellow Learn Button Green Learn Button

Does LED status match learn button color?

**YES**

Proceed directly to Step 3 on next page

**NO**

Change working mode first  
See video on listing for how  
Then continue to Step 3

Figure 2: Visual guide for checking your opener's learn button.

## 2.1 Universal Compatibility Guide

Refer to the detailed table below to confirm compatibility with specific models and learn button colors.

Color of Learn Button	Yellow 2011+ (310/315/390MHz)	Purple 2005-2014 (315MHz)	Red/orange 1997-2005 (390MHz)	Green 1993-1997 (390MHz)
LiftMaster	891LM 893LM 893MAX 81LM 61LM 82LM 83LM 84LM	371LM 373LM 375LM	91LM 92LM 94LM 96LM 971LM 972LM 973LM 974LM 973W	81LM 61LM
Chamberlain	950ESTD 953EV 850CB 853CB 856CB KLIK1U	950CD 953D 956D KLIK1U	950CB 953CB 956CB KLIK1U	KLIK1U
Craftsman	139.53707 139.53870 139.53779 139.53879 139.53800 139.53637 SRTHBW1136	139.53753 139.18191	HBW1255 139.53980/B 139.53681 00953680000 009536810000	-

Figure 3: Universal Compatibility Guide for various garage door opener models.

## Quick and Easy, Program in a Snap!

**1** Locate the Learn Button and identify the color on the opener

Learn Button

**2** Press and hold any button (you wish to use) on our remote, observe LED status, then check table below

LED Color	Mode #	Compatible Opener Type
GREEN ●	Mode 1	Purple Learn Button Red/Orange Learn Button
RED ●	Mode 2	Yellow Learn Button Green Learn Button

**3** Press and release the learn button on the motor unit. The Learn LED indicator will glow steadily for 30s.

**4** Within 30 seconds, press and hold the remote control button you choose in Step 2.

**5** Release remote control button when the motor unit light blinks OR two clicks are heard.

**6 Troubleshooting**

- Try change remote's working mode Double check if working mode on remotematch your opener's learn button color. Sometimes, the learn button color is incorrect. In that case please just try change to another mode, it might work.
- Program new remote cancelled old one? Maybe your opener's memory is full. Try erase arage opener's memory according to motor unit operation manual, then program again.
- Has short range or doesn't always work? Please try change a fresh battery and see if it helps.
- Have garage door closed first Sometimes, door must be closed when programming
- Certain button doesn't work? Try program using other remote button.

Figure 4: Detailed compatibility table by brand and learn button color.

### 3. SETUP AND PROGRAMMING

Follow these steps to program your DDcafor remote control to your garage door opener.

#### 3.1 Check Remote's Working Mode

Each button on your remote has two working modes, corresponding to different opener types. The LED color indicates the current mode.

1. Press and hold any button on the remote. Observe the LED status.
2. Compare the LED color with the table below to identify the compatible opener type.

LED Color	Mode #	Compatible Opener Type
GREEN	Mode 1	Purple Learn Button, Red/Orange Learn Button
RED	Mode 2	Yellow Learn Button, Green Learn Button

If the LED status matches your opener's learn button color, proceed to step 3.3. If not, you need to change the remote's working mode first (see section 3.2).

# Easy 1-2-3


Now, we program ready to use remoteto garage door motor unit.

## 3

Press and release the learn button on the motor unit. The Learn LED indicator will glow steadily for 30s.

Within 30 seconds, press and hold the remote control button you choose in Step 2.

Release remote control button when the motor unit light blinks OR two clicks are heard.

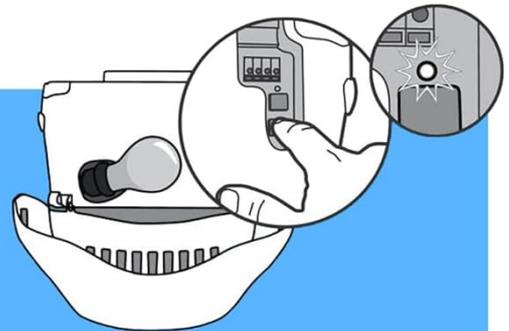

YES  
Congratulations!



NO  
Refer to troubleshooting  
steps on next page

Figure 5: Remote LED status and compatible opener types.

## 3.2 How to Change the Remote's Operating Mode

If the remote's current mode does not match your opener's learn button color, follow these steps to change it:


1. On the remote, press and hold buttons A and B simultaneously for 3 seconds until the Yellow LED blinks. Then release all buttons.
2. Press and hold the button you would like to change the operating mode for. The LED will change to either GREEN (Mode 1) or RED (Mode 2). Release the button once the desired mode is indicated.

### 3.3 Programming the Remote to Your Opener


Once the remote's working mode is correctly set, proceed with programming:

1. Locate the learn button on your garage door opener motor unit. You may need a ladder.
2. Press and release the learn button on the motor unit. The learn LED indicator will glow steadily for 30 seconds.
3. Within 30 seconds, press and hold the remote control button you wish to use.
4. Release the remote control button when the motor unit light blinks OR two clicks are heard. This indicates successful programming.

# Troubleshooting

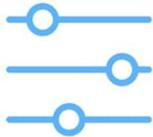

**Try change remote's working mode** Double check if working mode on remotematch your opener's learn button color. **Sometimes, the learn button color is incorrect**, in that case please just try change to another mode, it might work.

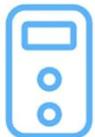

**Program new remote cancelled old one?** Maybe your opener's memory is full. Try erase arage opener's memory according to motor unit operation manual, then program again.



**Has short range or doesn't always work?** Please try change a fresh battery and see if it helps.



**Have garage door closed first** Sometimes, door must be closed when programming



**Certain button doesn't work?** Try program using other remote button.

Figure 6: Programming steps for the remote control.

# Universal Compatibility Guide



Figure 7: Quick programming guide.

## 3.4 Programming Video Guide

For a visual demonstration of the programming process, please watch the video below.

Your browser does not support the video tag.

Video 1: How to program a remote control to your opener. This video demonstrates the steps to successfully pair your DDcafor remote with your garage door opener, specifically for purple and red/orange learn buttons.

## 4. OPERATING THE REMOTE CONTROL

After successful programming, simply press the programmed button on your DDcafor remote control to open or close your garage door.



Figure 8: DDcafor Garage Door Opener Remote Control.

## 5. MAINTENANCE

---

### 5.1 Battery Replacement

The remote control uses one CR2032 battery. If the remote's range decreases or it stops responding, the battery may need to be replaced.

1. Locate the battery compartment on the remote.
2. Open the compartment and remove the old CR2032 battery.
3. Insert a new CR2032 battery, ensuring correct polarity.
4. Close the battery compartment.

## 6. TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following troubleshooting tips:

- **Remote's working mode doesn't match opener:** Double-check if the working mode on the remote matches your opener's learn button color. If the learn button color is incorrect, try changing to another mode.
- **New remote cancelled old one?** Your opener's memory might be full. Erase the garage opener's memory according to its operation manual, then program again.
- **Short range or doesn't always work?** Try changing to a fresh battery.
- **Garage door must be closed first:** Sometimes, the door must be closed when programming.
- **Certain button doesn't work?** Try programming using another remote button.



Figure 9: Troubleshooting common remote control issues.

## 6.1 Erase / Delete / Reset Remote Control

To erase all programmed remotes from your garage door opener's memory:

1. Press and hold the LEARN button on your opener for about 6 seconds.
2. Continue holding until the program indicator light goes off.
3. All remotes previously programmed to the opener have now been erased/deleted.


## 7. SPECIFICATIONS

Feature	Detail
Brand	DDcafor
Model Number	893MAXENL
Item Weight	1.13 ounces
Product Dimensions	2.56 x 1.57 x 0.59 inches

Feature	Detail
Batteries	1 CR2032 battery required (included)
Battery Cell Type	Lithium Manganese Dioxide
Item Package Quantity	1
Included Components	Remote control, Garage door opener manual
Material	Plastic
Color	Blue
Installation Type	Screw-In (refers to opener, not remote)
Recommended Uses	Residential garage doors

## Compatible with Chamberlain LiftMaster, and Craftsman garage door openers

**Please make sure your garage door opener has a Red/Orange/Purple/Yellow color learn button.  
manufactured from 1993 to the present**

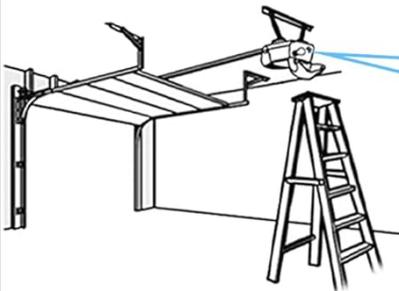

**Purple LEARN BUTTON**  
Security+ 315MHz  
Since 2005

**Red / Orange LEARN BUTTON**  
Security+ 390MHz  
Between 1997-2005

**Yellow LEARN BUTTON**  
Security+ 2.0 Since 2006

**Green LEARN BUTTON**  
Billion Code 390MHz  
Between 1993-1997

Figure 10: Product Dimensions.

## **8. WARRANTY AND SUPPORT**

---

Customer satisfaction is DDcafor's top priority. If you have any questions about your DDcafor Garage Door Opener Remote Control, please feel free to contact us. We are committed to assisting you promptly with any inquiries or support needs.