

[Manuals.plus](#) /

› [SakerPlus](#) /

› SakerPlus Portable Camping Light Model EC67392 Instruction Manual

SakerPlus EC67392

SakerPlus Portable Camping Light Model EC67392 Instruction Manual

Model: EC67392 | Brand: SakerPlus

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your SakerPlus Portable Camping Light, Model EC67392. This versatile device is designed for various outdoor and emergency lighting needs, featuring a powerful 14000mAh battery, telescopic pole, multiple lighting modes, and a durable, waterproof design.



Image 1.1: The SakerPlus Portable Camping Light shown in its compact, extended, and tripod configurations, alongside its packaging and accessories.

2. WHAT'S IN THE BOX

Please verify that all items are present upon unboxing:

- 1x SakerPlus Portable Camping Light (Model EC67392)
- 1x Type-C Charging Cable
- 1x User Manual (this document)
- 4x Fixing Pins



Image 2.1: Visual representation of the items included in the product packaging: the camping light, Type-C charging cable, user manual, and four fixing pins.

3. PRODUCT FEATURES

- **14000mAh High-Capacity Battery:** Provides 4-48 hours of continuous illumination and functions as a power bank for other devices.
- **Portable All-Terrain Design:** Folding and telescopic structure for easy storage and versatile placement.
- **Three Brightness Modes:** Adjustable warm, cold, and warm white light settings, plus an SOS emergency mode.
- **Durable and Waterproof:** Constructed from aircraft-grade aluminum and PC/ABS plastic with an IPX5 waterproof rating.
- **Multi-functional:** Can be used as a flashlight, high bay light, table lamp, backpack light, or tent lamp.

MULTI-FUNCTIONAL CAMPING LIGHT



Image 3.1: The multi-functional design of the camping light, illustrating its use as a floor lamp, table light, flashlight, backpack light, tent lamp, and in SOS mode.

Your browser does not support the video tag.

Video 3.1: An overview of the SakerPlus Camping Light, demonstrating its features and various applications in outdoor settings, including hiking and camping.

4. SETUP

1. **Unfold the Base:** Gently pull out the four support feet from the main body until they click into place, forming a stable tripod base.
2. **Extend the Telescopic Pole:** Hold the base firmly and extend the metal tube upwards. The pole has four sections and can be extended up to 110 cm (43 inches).
3. **Adjust Lamp Head:** The four-leaf lamp head can be rotated 360 degrees horizontally and 180 degrees vertically to direct light as needed.
4. **Stabilize (Optional):** For added stability on soft ground, insert the four provided fixing pins through the holes in the support feet into the ground.



Image 4.1: Visual guide illustrating the telescopic length adjustment from 11 to 43 inches, 180-degree vertical and 360-degree horizontal rotation of the lamp head, and the magnetic base for secure placement.

5. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button (usually marked with a power symbol) for 2-3 seconds to turn the light on or off.
2. **Change Lighting Mode:** Short press the 'M' button to cycle through the three lighting modes: warm light, cold light, and warm white light.
3. **Adjust Brightness:** Use the '+' and '-' buttons to increase or decrease the brightness level within the selected mode.
4. **SOS Mode:** To activate the SOS emergency mode, press the 'M' button until the SOS flashing pattern appears.
5. **Power Bank Function:** The light features a built-in Type-C charging port (input 5V/2A, output 5V/3A). Connect your electronic devices (e.g., cell phones, headphones) to the USB-A output port for charging.

ADJUSTABLE COLORTEMPERATURE



3 Levels of Lighting Brightness Adjustment



3 Levels
LIGHTING

White light



Warm light



Warm white light



Image 5.1: The camping light demonstrating its three adjustable color temperature modes: white light, warm light, and warm white light.

14000mAh / 5V-3A OUTPUT



Not only Camp Lantern, also a Power Bank



Image 5.2: The camping light being used to charge a mobile phone, highlighting its 14000mAh capacity and 5V-3A output, along with an illustration of the SOS emergency mode.

Your browser does not support the video tag.

Video 5.3: A demonstration of the 14000mAh Portable Rechargeable Outdoor Work Lamp, showcasing its various lighting functions and power bank capabilities.

6. MAINTENANCE

- **Cleaning:** Wipe the light with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the light in a cool, dry place when not in use. Ensure it is fully charged before long-term storage to preserve battery life.
- **Battery Care:** Recharge the battery regularly, even if not in use, to maintain optimal performance.

7. TROUBLESHOOTING

- **Light not turning on:** Ensure the battery is charged. If the battery is low, connect the light to a power source

using the provided Type-C cable.

- **Device not charging from power bank:** Verify that the charging cable is securely connected to both the light's output port and your device. Ensure the camping light has sufficient battery charge.
- **Unstable on uneven ground:** Extend the support feet fully and use the provided fixing pins to secure the base into the ground.

8. SPECIFICATIONS

Feature	Specification
Brand	SakerPlus
Model Number	EC67392
Battery Capacity	14000mAh Lithium Ion (4 included)
Brightness	Up to 6000 Lumens
Battery Life	4-48 Hours (depending on brightness)
Charging Input	Type-C 5V/2A
Power Bank Output	USB-A 5V/3A
Telescopic Length	11.22" (compact) to 43" (extended)
Water Resistance Level	IPX5
Material	Acrylonitrile Butadiene Styrene (ABS), Polycarbonate (PC), Aircraft-grade Aluminum
Item Weight	2.53 pounds (1.15 kg)
Product Dimensions	2.95"L x 2.95"W x 11.22"H (compact)

9. SAFETY INFORMATION

- Do not look directly into the light source when it is on, as it may cause eye strain or damage.
- Keep out of reach of children.
- Do not disassemble or modify the product.
- Avoid exposing the product to extreme temperatures or direct sunlight for prolonged periods.
- Ensure the charging port cover is securely closed when not charging to maintain water resistance.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your SakerPlus Portable Camping Light, please visit the official SakerPlus store or contact customer service through your purchase platform. You can find more products and information at the [SakerPlus Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question