

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY Electric Salt and Pepper Grinder Set (Model KYMQ-45A-AH-BS-DB) Instruction Manual

CIRCLE JOY KYMQ-45A-AH-BS-DB

CIRCLE JOY Electric Salt and Pepper Grinder Set (Model KYMQ-45A-AH-BS-DB) Instruction Manual

Brand: CIRCLE JOY

INTRODUCTION

Thank you for choosing the CIRCLE JOY Electric Salt and Pepper Grinder Set. This manual provides detailed instructions for the safe and efficient use of your new rechargeable grinders. Featuring 6-level external coarseness adjustment, a bright LED light, and a convenient storage base, these grinders are designed to enhance your culinary experience.



Image: The CIRCLE JOY Electric Salt and Pepper Grinder Set, featuring two black grinders on a clear storage base, ready for use.

PACKAGE CONTENTS

- 2 x CIRCLE JOY Electric Grinders (Salt and Pepper)
- 1 x Storage Base
- 1 x USB Charging Cable (USB-C compatible with 5V adapter)
- 1 x Cleaning Brush

- 1 x User Manual

SETUP

1. Filling the Grinders

1. Hold the grinder firmly and twist the top section counter-clockwise to unlock and separate it from the transparent container.
2. Carefully pour your desired whole spices (e.g., peppercorns, coarse salt) into the transparent container. Do not overfill; the maximum capacity is 95ml.
3. Align the top section with the container and twist clockwise to lock it securely.



UPGRADED LARGE CAPACITY



Image: The electric grinder's transparent container, highlighting its 95ml capacity for spices.

2. Charging the Grinders

The grinders are equipped with a reusable battery and a USB-C charging port. A full charge takes less than an hour.

- Connect the provided USB charging cable to the charging port located on the top of each grinder.
- Connect the other end of the USB cable to a 5V adapter (not included) or a compatible USB port.
- The indicator light will show charging status (red for charging, white for fully charged).

3. Assembling the Storage Base

The clear storage base helps keep your grinders organized and your countertop tidy.

- Place the two grinders into the designated slots on the storage base.
- Ensure they are seated firmly to prevent tipping.

Neat and beautiful



Water-proof



Dust-proof



**FASHION
KITCHEN APPLIANCE**

Image: The two electric grinders neatly placed on their clear storage base, showcasing a tidy kitchen setup.

OPERATING INSTRUCTIONS

1. One-Handed Operation

To operate the grinder, simply press and hold the button located on the side of the unit. The grinder will activate, dispensing freshly ground spices.



Image: A hand holding and operating the electric grinder over a dish, demonstrating its one-handed use.

2. Adjusting Coarseness

The grinder features an external 6-level coarseness adjustment mechanism. To change the grind size:

- Locate the adjustment ring at the bottom of the grinder.
- Rotate the ring to select your desired coarseness, from fine to coarse. There are distinct clicks for each level.



Image: A visual guide demonstrating the external coarseness adjustment feature on the grinder, showing the range from fine to coarse.

3. Bright LED Light

A built-in LED light illuminates the area where spices are dispensed, allowing for precise seasoning even in low-light

conditions.



LED Light

SUITABLE FOR VARIOUS TYPES OF SPICES



Image: The electric grinder in action, with its LED light clearly illuminating the spices as they are dispensed onto a dish.

MAINTENANCE

1. Cleaning

- To clean the grinding mechanism, use the provided cleaning brush to remove any residual spice particles.

- Wipe the exterior of the grinders with a damp cloth.
- **DO NOT** immerse the grinders in water or place them in a dishwasher. The product is **NOT** dishwasher safe.
- Ensure the grinders are completely dry before refilling or storing.

2. Storage

Store the grinders on their clear storage base in a dry place to prevent moisture accumulation and maintain hygiene.

TROUBLESHOOTING

- **Grinder not operating:** Ensure the grinder is fully charged. Check that the top section is securely locked onto the container.
- **Inconsistent grinding:** Verify that the coarseness adjustment ring is set correctly and not stuck between settings. Clean the grinding mechanism to remove any blockages.
- **Grinder not charging:** Ensure the USB cable is properly connected to both the grinder and a functional 5V power adapter. Check the charging indicator light.
- **Rusting of internal metal parts:** This can occur if moisture or salt residue accumulates on internal components. Always ensure spices are dry before filling and avoid exposing the grinder to excessive humidity. Clean regularly with the provided brush and avoid washing with water.

SPECIFICATIONS

Model Number	KYMQ-45A-AH-BS-DB
Material	Acrylonitrile Butadiene Styrene, Ceramic
Product Dimensions	29.92"W x 75.98"H
Item Weight	1.47 Pounds
Operation Mode	Automatic
Capacity	95 Milliliters
Dishwasher Safe	No
Battery Type	Rechargeable (USB-C)

FASHION KITCHEN APPLIANCE



Image: A visual representation of the electric grinder's dimensions.

WARRANTY AND SUPPORT

CIRCLE JOY offers a 12-month satisfaction service for this product. For any inquiries or support needs, please refer to the contact information provided with your purchase or visit the official CIRCLE JOY website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question