

[Manuals.plus](#) /

› [TECTINTER](#) /

› TECTINTER Wireless Adapter (Model T001) Instruction Manual for Xbox One Controllers to PC

TECTINTER T001

TECTINTER Wireless Adapter (Model T001) Instruction Manual

For Xbox One, Xbox Series X|S, and Xbox Elite Controllers on PC (Windows 11/10/8/7)

1. INTRODUCTION

The TECTINTER Wireless Adapter (Model T001) allows you to connect your Xbox One, Xbox Series X|S, or Xbox Elite controllers wirelessly to your Windows PC. This adapter provides a stable and low-latency connection, enhancing your PC gaming experience with the comfort and familiarity of your Xbox controller.

Key Features:

- **Broad Compatibility:** Supports Xbox One, Xbox Series X|S, and Xbox Elite controllers.
- **Wide Operating System Support:** Compatible with Windows 11, Windows 10, Windows 8.1, Windows 8, and Windows 7.
- **Stable Wireless Connection:** Utilizes 2.4GHz broadband technology for a signal transmission range of up to 6 meters (approximately 20 feet) with minimal disconnection or delay.
- **Multi-Controller Support:** Connect up to eight controllers simultaneously.
- **Audio Support:** Includes in-game chat and high-quality stereo audio capabilities.

POWERFUL & BROAD COMPATIBILITY

Use it with Pc games, and Xbox One games streamed to Windows 10, to elevate your game wherever you want to play



Image 1.1: The TECTINTER Wireless Adapter demonstrating compatibility with various Xbox controllers.

2. SETUP INSTRUCTIONS

Follow these steps to connect your Xbox wireless controller to your PC using the TECTINTER Wireless Adapter.

2.1 Initial Connection

1. **Plug in the Adapter:** Insert the TECTINTER Wireless Adapter into an available USB port on your PC.
2. **Driver Installation:**
 - **Windows 10/11:** The driver should install automatically within approximately 10 seconds.
 - **Windows 7/8/8.1:** You may need to install the driver manually. Refer to section 2.2 for manual driver installation instructions.
3. **Pairing the Adapter:** Press the pairing button on the Wireless Adapter for 3 seconds until its light begins to flash.
4. **Pairing the Controller:** Press the pairing button on the top of your Xbox controller (the small, raised button) until the Xbox button on the controller starts to flash.

5. **Confirmation:** Wait for the light on the adapter and the Xbox button on the controller to become solid, indicating a successful pairing.



Image 2.1: Visual guide for connecting the Xbox wireless controller to a PC.

2.2 Manual Driver Installation (Windows 7/8/8.1)

If the driver does not install automatically on Windows 7, 8, or 8.1, you will need to download and install it manually from the Microsoft Update Catalog.

1. **Access Microsoft Update Catalog:** Open your web browser and search for "Microsoft Update Catalog" or navigate directly to catalog.update.microsoft.com.
2. **Search for Driver:** In the search bar, type "xbox wireless adapter" and press Enter.
3. **Download Correct Driver:** Locate the driver package appropriate for your Windows version (e.g., "Windows 7/8.1 Drivers"). Download the file.
4. **Install Driver:** Follow the on-screen instructions to install the downloaded driver. You may need to restart your PC after installation.

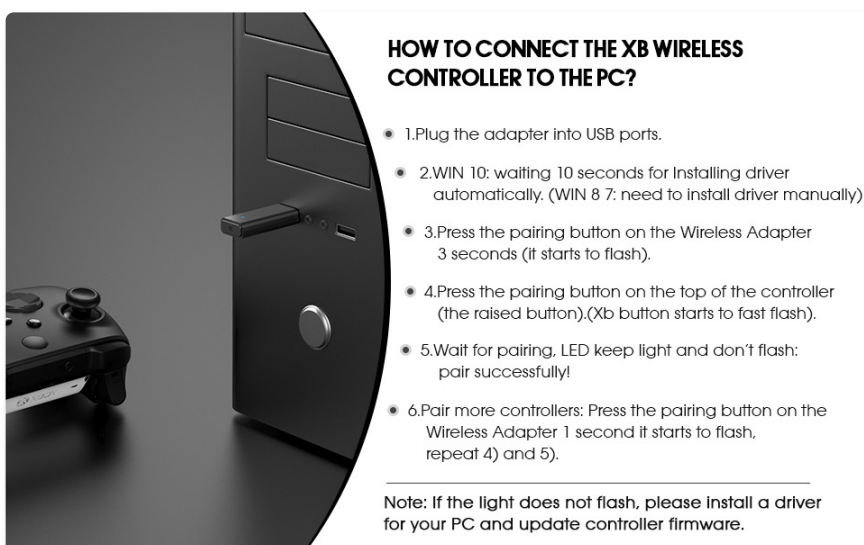


Image 2.2: Guide for finding and downloading the correct drivers from the Microsoft Update Catalog.

3. OPERATING INSTRUCTIONS

3.1 Connecting Multiple Controllers

The TECTINTER Wireless Adapter supports connecting up to eight Xbox controllers simultaneously. To connect additional controllers after the first one:

1. Press the pairing button on the Wireless Adapter for 1 second (it will start to flash).
2. Press the pairing button on the additional Xbox controller.
3. Wait for both the adapter light and the controller's Xbox button to become solid.



Image 3.1: The adapter supports connecting up to eight wireless controllers to your PC.

3.2 Audio Functionality

The adapter supports in-game chat and high-quality stereo audio through a headset connected to your Xbox controller. Ensure your headset is properly connected to your controller and that your PC's audio settings are configured to use the controller's audio output.

3.3 Optimal Performance

For optimal performance, ensure the adapter is placed in an area free from obstructions and away from other

wireless devices that may cause interference. The effective range is up to 6 meters (20 feet).



Image 3.2: The adapter provides a strong and stable signal for an uninterrupted gaming experience.

4. MAINTENANCE

- **Keep Clean:** Regularly wipe the adapter with a dry, soft cloth to remove dust and debris.
- **Avoid Obstructions:** Ensure the adapter is not covered or obstructed, which could affect signal strength and potentially lead to overheating.
- **Controller Firmware:** Periodically update your Xbox controllers' firmware using the Xbox Accessories app on your PC or Xbox console. Outdated firmware can sometimes cause connectivity issues.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

5.1 Controller Not Connecting or Disconnecting Frequently

- **Re-pair Devices:** Follow the pairing steps in Section 2.1 to re-establish the connection between the adapter and the controller.
- **Check Drivers:** Ensure the correct drivers are installed for your Windows version. For Windows 7/8/8.1, refer to Section 2.2. For Windows 10/11, check Device Manager to ensure the adapter is recognized and drivers are up to date.
- **USB Port:** Try plugging the adapter into a different USB port on your PC. Sometimes, certain USB ports may have power or compatibility issues.
- **Interference:** Move the adapter away from other wireless devices (e.g., Wi-Fi routers, Bluetooth devices) or large metal objects that might cause signal interference.
- **Controller Firmware:** Update your Xbox controller's firmware using the Xbox Accessories app.
- **Restart PC:** A simple PC restart can often resolve connectivity glitches.

5.2 Adapter Gets Warm

It is normal for the adapter to become slightly warm during extended use. If it becomes excessively hot, ensure it has adequate ventilation and is not covered. If the issue persists or causes performance problems, discontinue use and contact support.

5.3 No Audio Through Headset

- **Headset Connection:** Verify your headset is securely plugged into your Xbox controller.
- **PC Audio Settings:** Check your PC's sound settings (Control Panel > Sound or Settings > System > Sound) to ensure the Xbox controller's audio output is selected as the default playback and recording device.
- **Volume Levels:** Adjust volume levels on both your PC and the controller/headset.

6. SPECIFICATIONS

Brand	TECTINTER
Model Number	T001
Compatible Devices	Xbox One Controller, Xbox Series X S Controller, Xbox Elite Controller
Specific Uses For Product	PC Gaming
Operating System Compatibility	Windows 11, Windows 10, Windows 8.1, Windows 8, Windows 7
Connector Type	USB Controller Adapter
Wireless Technology	2.4GHz Broadband
Signal Transmission Range	Up to 6 meters (approx. 20 feet)
Maximum Controllers	8
Item Dimensions (L x W x H)	3.94 x 3.94 x 0.59 inches
Item Weight	0.03 Kilograms

7. WARRANTY AND SUPPORT

7.1 Product Warranty

This TECTINTER Wireless Adapter comes with a 30-day replacement warranty. This warranty covers manufacturing defects and ensures you receive a functional product.

7.2 Customer Support

If you encounter any issues or have questions regarding your TECTINTER Wireless Adapter, please contact our customer support team. We are committed to assisting you within 24 hours and can provide free replacement or refund options as applicable.

For support, please refer to the contact information provided with your purchase or visit the official TECTINTER store page on Amazon.

© 2024 TECTINTER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D1XW8292>

More documents and user manuals: <https://manuals.plus/>