

## ALLIMITY MM-65DS9A62A-NP

# ALLIMITY Replacement Remote Control User Manual for METZ BLUE TVs

Model: MM-65DS9A62A-NP

## INTRODUCTION

This manual provides instructions for the ALLIMITY replacement remote control, compatible with various METZ BLUE TV models. It covers setup, operation, and maintenance to ensure optimal performance. Verify compatibility by matching the remote's appearance and supported model numbers with your television.

This remote control is designed to be fully functional, replicating all features of your original remote without requiring complex programming or setup.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





**Image:** Back view of the remote control. The textured black surface covers the battery compartment, which is typically accessed by sliding a cover.

## 2. Initial Use

No programming or pairing is required. Once batteries are installed, the remote control is ready for immediate use with compatible METZ BLUE TV models.

## OPERATING INSTRUCTIONS

This remote control features an ergonomic design, making it lightweight and comfortable to hold. It provides stable performance and a longer transmission distance for reliable operation.





**Image:** Front view of the ALLIMITY remote control, displaying its full button layout. Key buttons include Power, Number Pad, Navigation (OK, directional arrows), Volume, Channel, and dedicated buttons for Netflix and Prime Video.

## Button Functions Overview

- **Power Button ( ):** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **LIST:** Accesses the channel list.
- **INFO:** Displays program information.
- **HOME:** Navigates to the TV's home screen or smart TV interface.
- **MENU:** Opens the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **NETFLIX:** Direct access to the Netflix application.
- **Prime Video:** Direct access to the Prime Video application.
- **VOL (+/-):** Adjusts the volume level.
- **GUIDE:** Opens the electronic program guide.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **CH (P Up/Down):** Changes channels.
- **REVEAL / INDEX / HOLD:** Specific functions depending on TV model or context.
- **SUBTITLE:** Toggles subtitles on/off.
- **Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Access specific functions within menus or applications.
- **TEXT:** Opens teletext.
- **FAV:** Accesses favorite channels.
- **AD:** Audio Description toggle.
- **I/II:** Audio language selection.

---

## Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

## Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

## Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote control.

---

## TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are correctly inserted with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- **Limited range:**
  - Ensure the remote is pointed directly at the TV.
  - Replace batteries if they are low.
  - Verify no strong light sources (like direct sunlight) are interfering with the IR signal.
- **Specific buttons not working:**
  - Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris.
  - If only certain smart TV app buttons (e.g., Netflix) are not working, ensure your TV is connected to the internet and the apps are updated.

---

## SPECIFICATIONS



**Image:** The remote control shown with its dimensions: approximately 20.8 cm (8.19 in) in length, 4.5 cm (1.77 in) in width,

and 2.2 cm (0.87 in) in thickness.

Feature	Detail
Brand	ALLIMITY
Model Number	MM-65DS9A62A-NP
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic Design
Number of Buttons	20
Controller Type	Button Control
Maximum Range	10 Meters
Item Weight	59 Grams
Compatible Devices	METZ BLUE TV models including 65DS9A63A, 55DS9A62A, 65MUB7000, 40MTB7000, 50MUB7000, 55G2A52B, 55DS9A663A, 32MTB7000, 55MUB7011, 65MUB8000, 65S9A62A, 55MUB7000, 43MUB8000, HY-2017001-2, 55S9A63A, 65DS9A62A, 55DS9A63A, 43MUB7000, 55MUB8000, 50MUB8000, 58G2A52B, 50MOC9010Z, 50G2A52B, 50MUB7011

## WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided product data. Please refer to the seller's or manufacturer's website for details on warranty coverage and support options.