

Krüger&Matz KM0232-T5

Krüger&Matz 32-inch HD DVB-T2 Television KM0232-T5 User Manual

Model: KM0232-T5

[Introduction](#)

[Safety Information](#)

[Package
Contents](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. INTRODUCTION

Thank you for purchasing the Krüger&Matz 32-inch HD DVB-T2 Television, model KM0232-T5. This manual provides essential information for the safe and efficient use of your new television. Please read it thoroughly before operating the device and retain it for future reference.

This television is designed to provide high-quality digital terrestrial television reception with DVB-T2 and H.265 HEVC codec support. It features a slim design, multiple connectivity options including HDMI and USB, and a built-in speaker system for an immersive viewing experience.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or damage to the television.

- **Power Source:** Connect the television only to an AC 220-240V, 50/60Hz power supply.
- **Ventilation:** Ensure adequate ventilation around the television. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the television to rain or moisture. Do not place objects filled with liquids, such as vases, on the television.
- **Heat Sources:** Keep the television away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the television from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners

or aerosol cleaners.

- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Children:** Supervise children to ensure they do not play with the television.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Krüger&Matz 32-inch HD DVB-T2 Television (KM0232-T5)
- Remote control
- User manual (this document)
- TV Stand (2 pieces)
- Power cable
- AV adapter cable

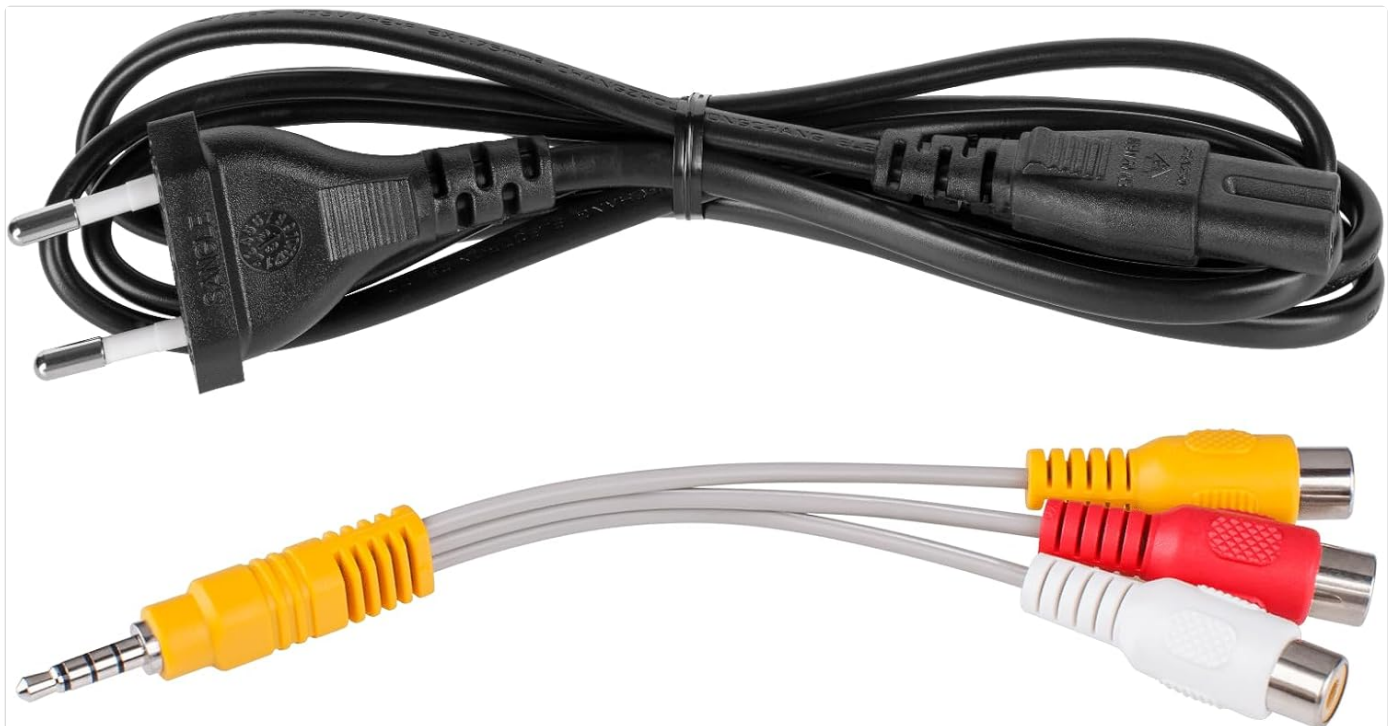


Figure 3.1: Included accessories: power cable and AV adapter.





Figure 3.2: Remote control.

4. SETUP

4.1 Unpacking and Placement

1. Carefully remove the television from its packaging.
2. Place the television on a stable, flat surface or mount it on a wall. Ensure proper ventilation.

4.2 Attaching the Stand

If you are not wall-mounting the television, attach the included stand:

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align the stand pieces with the corresponding slots on the bottom of the television.
3. Secure the stand with the provided screws.



Figure 4.1: Attaching the TV stand.

4.3 Wall Mounting

The television supports VESA mount standard 100 x 100 mm. Use a compatible wall mount bracket (not included) and follow its instructions carefully. Ensure the wall can support the weight of the television.

4.4 Connecting Devices

Connect your external devices to the appropriate ports on the back of the television.

- **Antenna/Cable:** Connect your DVB-T2 antenna or cable TV signal to the ANT IN port.
- **HDMI Devices:** Use HDMI cables to connect devices like Blu-ray players, game consoles, or set-top boxes to the HDMI ports. This TV has 2 HDMI ports.
- **USB Devices:** Insert USB storage devices (e.g., flash drives) into the USB 2.0 ports for media playback. This TV has 2 USB ports.
- **Audio Devices:** Connect external audio systems or headphones to the 3.5mm audio input/output.



Figure 4.2: Rear connectivity ports.



Figure 4.3: Detailed view of the input/output panel.

4.5 Power Connection

After all connections are made, plug the power cable into the television's power input and then into a wall outlet.

5. OPERATING INSTRUCTIONS

5.1 First-Time Setup

When you power on the television for the first time, a setup wizard will guide you through initial settings:

1. **Language Selection:** Choose your preferred language.
2. **Country Selection:** Select your country.
3. **Channel Scan:** The TV will automatically scan for available DVB-T2 digital channels. This process may take several minutes.

5.2 Basic Functions

- **Power On/Off:** Press the **Power** button on the remote control or the TV.
- **Volume Control:** Use the **VOL +/-** buttons to adjust the volume.
- **Channel Selection:** Use the **CH +/-** buttons or the number buttons to change channels.
- **Source Selection:** Press the **Source** button to switch between input sources (DTV, HDMI1, HDMI2, USB, AV).
- **Menu:** Press the **Menu** button to access the TV's settings menu.

5.3 Using the Remote Control

The remote control allows you to access all functions of your television. Refer to Figure 3.2 for button layout.

- **Navigation:** Use the arrow buttons (**Up, Down, Left, Right**) and **OK** button to navigate menus.
- **EPG (Electronic Program Guide):** Press the **EPG** button to view program information.
- **USB Media Playback:** Insert a USB drive into a USB port. The TV should prompt you to open the media browser. If not, select USB as the source.

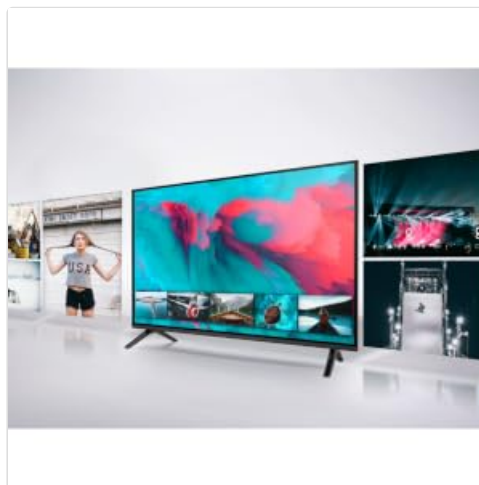


Figure 5.1: Television displaying various content sources.



Figure 5.2: DVB-T2 H.265 HEVC compatibility.

6. MAINTENANCE

6.1 Cleaning the Television

1. Always unplug the television from the power outlet before cleaning.
2. Use a soft, dry, lint-free cloth to gently wipe the screen and casing.
3. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (ensure it's safe for LED screens) and wipe gently. Do not spray liquid directly onto the screen or casing.
4. Avoid using abrasive cleaners, waxes, or solvents as they can damage the surface.

6.2 Storage

If you need to store the television for an extended period, unplug it, disconnect all cables, and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

7. TROUBLESHOOTING

Before contacting support, try the following solutions for common issues:

Problem	Possible Solution
No power	Ensure the power cable is securely plugged into both the TV and the wall outlet. Check if the wall outlet is working.
No picture, but sound is present	Check the input source. Ensure the connected device is powered on and functioning correctly. Try a different HDMI cable.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Check audio settings and external audio connections.
Poor picture quality (digital channels)	Check antenna connection. Adjust antenna position. Perform a new channel scan. Ensure your antenna is suitable for DVB-T2 reception.
Remote control not working	Check the batteries and replace them if necessary. Ensure there are no obstructions between the remote and the TV's IR sensor.

Problem	Possible Solution
USB media not playing	Ensure the USB device is formatted correctly (FAT32 is commonly supported). Check if the media file format is supported by the TV.

8. SPECIFICATIONS

Feature	Specification
Model Name	KM0232-T5
Screen Size	32 Inches
Display Technology	LED (D-LED Backlight)
Resolution	1366x768 (768p)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Image Contrast Ratio	3000:1
Maximum Display Brightness	220 cd/m²
Image Quality Enhancement	3D Comb Filter, Digital Noise Reduction (DNR)
Speaker Description	Two built-in speakers, 2 x 5 W output power, stereo system, graphic equalizer
Connectivity Technology	HDMI, USB 2.0, 3.5mm Audio
Total HDMI Ports	2
Total USB Ports	2
Audio Input	3.5mm audio
Signal Format	Digital (DVB-T2)
Video Codecs	HEVC (H.265)
Mounting Type	Wall mount
VESA Mount Standard	100 x 100 mm
Control Method	Remote
Product Dimensions (D x W x H)	20 x 71.5 x 48 cm
Item Weight	3.6 Kilograms
Voltage	240 Volts
Wattage	55 W
Efficiency Class	F
Color	Black

Feature	Specification
Manufacturer	Krüger&Matz
Country of Origin	China

9. WARRANTY & SUPPORT

9.1 Warranty Information

This Krüger&Matz television comes with a**2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty type is Full.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Krüger&Matz customer support. Refer to the contact information provided on the manufacturer's official website or in the product packaging.

© 2025 Krüger&Matz. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

