

Scheppach C-BL700-X

Scheppach C-BL700-X 20V Cordless Axial Leaf Blower

USER MANUAL

1. Introduction

Thank you for choosing the Scheppach C-BL700-X 20V Cordless Axial Leaf Blower. This powerful and lightweight tool is designed for efficient clearing of leaves, grass clippings, and other debris from various surfaces. Please read this manual carefully before operating the device to ensure safe and optimal performance. Keep this manual for future reference.



Image 1.1: The Scheppach C-BL700-X 20V Cordless Axial Leaf Blower, shown with its compatible battery and charger.

2. Safety Instructions

Always observe the following safety precautions to prevent injury and damage to the device:

- Read all instructions before use.
- Wear appropriate personal protective equipment (PPE) such as safety glasses, hearing protection, and sturdy footwear.
- Keep bystanders, children, and pets at a safe distance (at least 15 meters) from the operating area.
- Do not operate the leaf blower in wet conditions or rain.
- Ensure the battery is fully charged before use and only use batteries and chargers from the Scheppach IXES 20V series.
- Never point the blower nozzle at people or animals.
- Inspect the blower for any damage before each use. Do not operate if damaged.
- Disconnect the battery before cleaning, maintenance, or storage.
- Store the device in a dry, secure place out of reach of children.

3. Components and Parts

The Scheppach C-BL700-X leaf blower typically includes the following components:

- Main Blower Unit
- Blower Tube (detachable)
- 20V Battery (2Ah or 4Ah, depending on package)
- Battery Charger
- User Manual

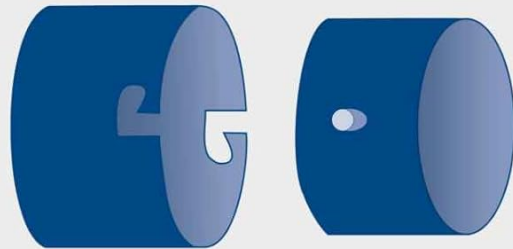 


Image 3.1: Overview of the main components included with the leaf blower.

Axiales Gebläse



Schnellverschluss



VORTEILE AXIAL-GEBLÄSE

- ✓ Höherer Luftvolumenstrom
- ✓ Einfacher und langlebiger Aufbau
- ✓ Kompakte Bauform



Image 3.2: The Scheppach IXES 20V series, highlighting the compatibility of batteries and chargers across multiple tools.

4. Setup

Follow these steps to prepare your leaf blower for first use:

1. **Charge the Battery:** Insert the 20V battery into the charger and plug the charger into a power outlet. Allow the battery to fully charge before first use. Refer to the battery and charger manual for specific charging indicators.
2. **Attach the Blower Tube:** Align the blower tube with the main unit's outlet. Push and twist until it clicks securely into place. The quick-release mechanism ensures easy attachment and detachment for storage.

Rohraufsatz mit Schnellverschluss für eine einfache Montage sowie zur platzsparenden Lagerung.



Image 4.1: Attaching the blower tube using the quick-release fastener for easy assembly and compact storage.

3. **Insert the Battery:** Once charged, slide the battery into the battery slot on the main blower unit until it locks securely.

5. Operating Instructions

Operating your Scheppach C-BL700-X leaf blower is straightforward:

1. **Starting the Blower:** Ensure the battery is securely inserted. Press the power trigger to start the blower.
2. **Adjusting Air Speed:** The blower features two air speed settings for versatile use:
 - **Level 1:** Approximately 115 km/h (32 m/s) – Suitable for lighter debris and general clearing.
 - **Level 2:** Approximately 155 km/h (43 m/s) – Provides maximum power for stubborn debris and larger areas.

Use the speed selector switch (if present) or the pressure-sensitive trigger to switch between these modes.

Die beiden Luftgeschwindigkeitsstufen 115 (1. Stufe) und 155 km/h (2. Stufe) sorgen für saubere Ergebnisse.



Image 5.1: The two air speed levels (115 km/h and 155 km/h) ensure clean results, controlled via the trigger.

3. **Blowing Technique:** Sweep the blower from side to side, directing debris into piles. For optimal results, work with the wind direction.


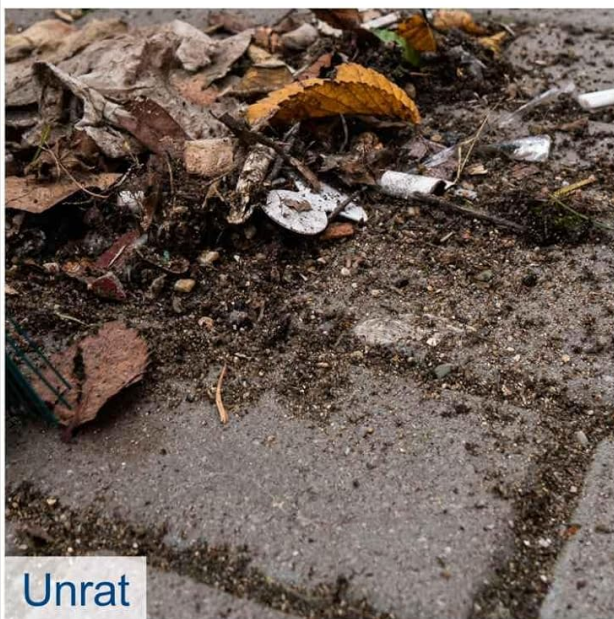


Image 5.2: The axial fan design ensures a higher air volume flow for effective clearing.

4. **Applications:** The C-BL700-X is ideal for various outdoor cleaning tasks, including:

- Clearing leaves from gardens and lawns.
- Removing grass clippings from paths and driveways.
- Blowing away light debris like sand or small litter from patios and yards.

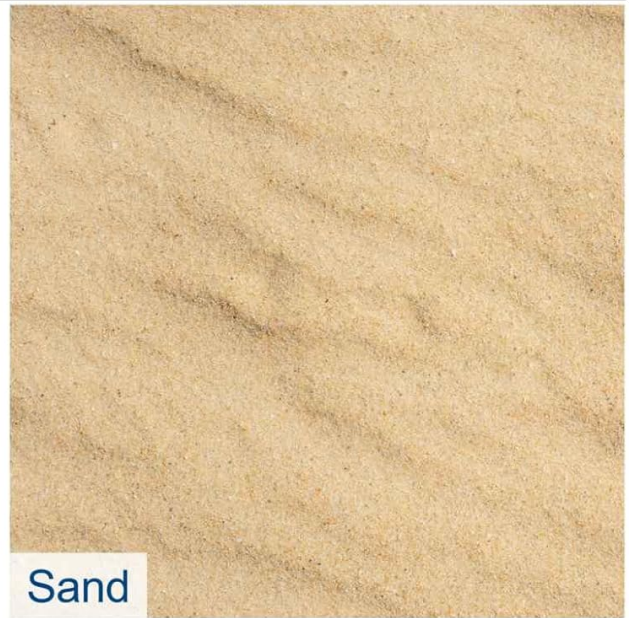

ANWENDUNGSBEISPIELE

GEEIGNET FÜR

Garten



Hof



Terrasse




Image 5.3: Application examples for the leaf blower, suitable for gardens, yards, and terraces.

Hohe Luftgeschwindigkeit



1. 115 km/h
2. 155 km/h

 Luftvolumenstrom

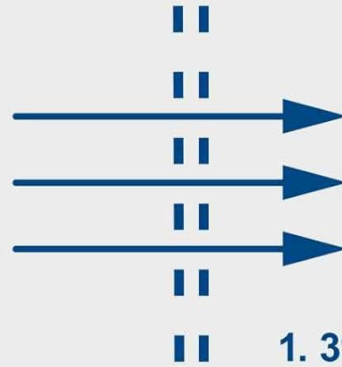

1. 390 m³/h
2. 516 m³/h

20 V



Ultra Leichtgewicht



Image 5.4: Benefits of the axial blower include higher air volume, simple and durable construction, and compact design.

Axiales Gebläse sorgt für einen höheren Luftvolumenstrom.



Image 5.5: Key performance indicators: High air speed (115 km/h and 155 km/h) and air volume flow (up to 516 m³/h).

5. **Stopping the Blower:** Release the power trigger to turn off the blower. Remove the battery when finished or before performing any maintenance.

6. Maintenance

Regular maintenance ensures the longevity and performance of your leaf blower:

- **Cleaning:** After each use, wipe down the exterior of the blower with a damp cloth. Remove any debris from the air intake vents and blower tube. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the leaf blower in a dry, well-ventilated area, away from direct sunlight and extreme temperatures. Detach the blower tube for more compact storage. Ensure the battery is removed before storing for extended periods.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for long periods. Recharge them periodically if not in use.

7. Troubleshooting

If you encounter issues with your leaf blower, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Blower does not start	Battery not inserted correctly or discharged.	Ensure battery is fully seated. Charge the battery.
Reduced air flow	Air intake or blower tube obstructed.	Clear any debris from the air intake and blower tube.
Blower stops during operation	Battery is low or overheated.	Recharge the battery. Allow the blower and battery to cool down before resuming use.
Unusual noise or vibration	Loose components or internal damage.	Stop operation immediately. Remove battery and inspect. If problem persists, contact customer support.

8. Specifications

Key technical specifications for the Scheppach C-BL700-X 20V Cordless Axial Leaf Blower:

Feature	Value
Model Name	C-BL700-X
Model Number	5912104900
Brand	Scheppach
Voltage	20 Volts (DC)
Max. Air Speed	155 km/h (Level 2)
Min. Air Speed	115 km/h (Level 1)
Max. Air Volume Flow	516 m³/h
Product Dimensions (L x W x H)	126 x 55 x 37 cm
Item Weight	3.3 Kilograms
Power Source	Battery Powered
Form Factor	Handheld

9. Warranty and Support

Scheppach products are manufactured with high quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Scheppach website.

For technical support, spare parts, or service inquiries, please contact Scheppach customer service. You can find

more information and contact details on the official Scheppach store page:

[Visit the Scheppach Store on Amazon](#)

© 2024 Scheppach. All rights reserved.

Related Documents - C-BL700-X

	Scheppach Akku-Rasenmäher BC-MP320-X: Originalbetriebsanleitung Die Originalbetriebsanleitung für den Scheppach Akku-Rasenmäher BC-MP320-X bietet umfassende Informationen zur sicheren Bedienung, Montage und Wartung dieses leistungsstarken Gartengeräts für den privaten Gebrauch.
	Scheppach C-LT300-X Akku-Rasentrimmer Bedienungsanleitung Offizielle Bedienungsanleitung für den Scheppach C-LT300-X Akku-Rasentrimmer. Finden Sie Informationen zur sicheren Verwendung, Montage und Wartung dieses Gartengeräts.
	Scheppach BC-PS150-X Akku-Gehölzschneider Bedienungsanleitung Umfassende Bedienungsanleitung und Sicherheitshinweise für die Scheppach BC-PS150-X Akku-Gehölzschneider. Erfahren Sie mehr über korrekte Anwendung, Wartung und Sicherheit.
	Scheppach BC-MFH400-X Akku-Multifunktionsgerät Bedienungsanleitung Umfassende Bedienungsanleitung für das Scheppach BC-MFH400-X Akku-Multifunktionsgerät. Enthält Anleitungen zur Montage, sicheren Bedienung, Wartung und technische Spezifikationen für Rasentrimmer, Motorsense, Heckenschere und Hochentaster.
	Scheppach LB5200BP Benzin-Laubbläser Bedienungsanleitung Umfassende Bedienungsanleitung für den Scheppach LB5200BP Benzin-Laubbläser. Erfahren Sie mehr über sichere Bedienung, Montage, Wartung und technische Daten für die Gartenpflege mit diesem leistungsstarken Gerät von Scheppach.



[Scheppach BC-MP430-X Akku-Rasenmäher Bedienungsanleitung](#)

Die offizielle Bedienungsanleitung für den Scheppach BC-MP430-X Akku-Rasenmäher. Enthält wichtige Informationen zur sicheren Handhabung, Montage, Wartung und Bedienung dieses leistungsstarken und umweltfreundlichen Rasenmähers.