

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Beyblade X Talon Ptera 3-80B Instruction Manual

Hasbro G0195

Hasbro Beyblade X Talon Ptera 3-80B Instruction Manual

Model: G0195

1. PRODUCT OVERVIEW

The Hasbro Beyblade X Talon Ptera 3-80B is a clockwise-spinning endurance-type battling top designed for use with the Beyblade X system. This manual provides essential information for safe assembly, operation, and maintenance of your new Beyblade X spinning top.

1.1 Package Contents

- 1x Beyblade X Talon Ptera 3-80B Spinning Top (Blade, Ratchet, Bit components)

Note: Beyblade X Beystadium Arena and Starter are required for play and are sold separately.



Image: The Beyblade X Talon Ptera 3-80B spinning top, shown both in its retail packaging and as an assembled unit.

2. IMPORTANT SAFETY INFORMATION

Please read all safety warnings carefully before using this product to ensure a safe play experience.

- Suitable for ages 8 and up.
- **WARNING: CHOKING HAZARD** - Small parts. Not suitable for children under 3 years.
- Use Beyblade X spinning tops **ONLY** in a Beyblade X Beystadium arena.
- Do not lean over the Beystadium arena during play.
- Do not use the arena on tables or other raised surfaces. Spinning tops could skyrocket and potentially cause injury to eyes or face.
- Parents: Information regarding app availability, operating systems, device compatibility, and update schedules can be found at apps.hasbro.com. Fees may apply.

3. SETUP: ASSEMBLY INSTRUCTIONS

The Beyblade X Talon Ptera 3-80B spinning top consists of three interchangeable parts: the Blade, the Ratchet, and the Bit. Follow these steps to assemble your spinning top.

1. **Step 1: Align Components.** Take the Blade, Ratchet, and Bit components. Align them carefully, ensuring the grooves and tabs match.
2. **Step 2: Secure Assembly.** With a quick twist and two audible clicks, the parts will lock together, forming the complete spinning top. Verify that all components are firmly attached before use.



Image: A close-up view of the assembled Beyblade X Talon Ptera 3-80B spinning top, ready for battle.

4. OPERATING: HOW TO PLAY

To engage in a Beyblade X battle, you will need an official Beyblade X Beystadium Arena and a Beyblade X Starter (both sold separately).

1. **Step 1: Load the Spinning Top.** Attach your assembled Talon Ptera 3-80B spinning top securely to the Beyblade X Starter.
2. **Step 2: Launch.** Hold the starter over the Beyblade X Beystadium Arena. Pull the rip cord with a swift motion to launch your spinning top into the arena.
3. **Step 3: Utilize the X-Celerator System.** The Beyblade X system features an X-Celerator acceleration rail integrated within the Beystadium Arena. When the gear of your spinning top's Bit makes contact with this rail, it

triggers a Super Acceleration (Xtreme Dash), propelling the top at extreme speeds for dynamic crashes and bursting moments.

The Talon Ptera 3-80B is an endurance-type top, designed to outlast opponents by maintaining its spin velocity. Its downward blades are engineered to reduce the opponent's rotational speed, contributing to its endurance strategy.

5. CARE AND MAINTENANCE

Proper care will extend the lifespan of your Beyblade X spinning top.

- Keep your Beyblade X spinning top clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Store components in a dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- Avoid dropping the spinning top or subjecting it to excessive force, as this may damage the components.
- Regularly inspect the Blade, Ratchet, and Bit for any signs of wear, cracks, or damage. Replace damaged parts if necessary (replacement parts sold separately, if available).

6. TROUBLESHOOTING

If you encounter issues with your Beyblade X Talon Ptera 3-80B, consider the following common solutions:

- **Spinning top not spinning correctly:** Ensure all three components (Blade, Ratchet, Bit) are securely assembled with two audible clicks. Check the starter for proper function and ensure the rip cord is pulled smoothly and completely.
- **Spinning top not engaging X-Celerator rail:** Verify that the Beystadium Arena is clean and free of obstructions. Ensure the spinning top is launched with sufficient force and at the correct angle to interact with the rail.
- **Spinning top frequently bursts:** Bursting is a normal and intended part of Beyblade X battles, indicating a powerful impact. Ensure you are using an official Beyblade X Beystadium Arena, as unofficial arenas may not provide the intended play experience.

7. PRODUCT SPECIFICATIONS

- **Model Number:** G0195
- **Type:** Clockwise Spinning Top (Endurance Type)
- **Components:** Blade, Ratchet, Bit (interchangeable)
- **Material:** Plastic, Metal parts
- **Recommended Age:** 8 years and up
- **Product Dimensions:** Approximately 3 x 3 x 3 cm
- **Item Weight:** Approximately 50 g
- **Color:** Green (core), Silver (blade)
- **Educational Objective:** Skill, imagination, role play, interactive play

8. WARRANTY AND CUSTOMER SUPPORT

For information regarding product warranty, replacement parts, or customer support, please visit the official Hasbro website or contact Hasbro customer service directly. Please retain your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question