

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Fleek Quartz Multifunction Watch - Instruction Manual

Fastrack 3303KM02

Fastrack Fleek Quartz Multifunction Watch

Model: 3303KM02

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Fastrack Fleek Quartz Multifunction Watch. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

Your Fastrack Fleek watch is designed with a multifunction display, offering timekeeping, day, and date functionalities. It features a durable stainless steel strap and a robust quartz movement for accurate timekeeping.

PRODUCT OVERVIEW



Figure 1: Front view of the Fastrack Fleek Quartz Multifunction Watch. This image displays the black dial with rose gold accents and the stainless steel strap.



Figure 2: Side view of the watch, highlighting the crown and pushers used for setting time and functions.



Figure 3: Rear view of the watch, showing the stainless steel case back with engraved product information and water resistance rating.

SETUP AND INITIAL USE

1. Setting the Time

1. Pull the crown (located on the right side of the watch case) out to the first click position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position.

2. Setting the Date and Day

Your multifunction watch features sub-dials for date and day indication. The specific method for setting these may vary slightly by movement, but generally involves the crown or dedicated pushers.

- For date adjustment: Gently pull the crown out to the first click (if applicable, or second click if time setting is first). Rotate the crown to advance the date.
- For day adjustment: Use the dedicated pusher (if present, often a small recessed button on the side of the case) or

rotate the crown in the opposite direction to advance the day.

- After setting, ensure the crown is fully pushed back in to maintain water resistance.

Note: Avoid setting the date or day between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism and potentially damage the movement.

OPERATING YOUR WATCH

Timekeeping

The watch operates on a precise quartz movement, providing accurate time. The hour, minute, and second hands indicate the current time.

Multifunction Sub-dials

This watch is equipped with multifunction sub-dials that typically display:

- **Day Indicator:** Shows the current day of the week.
- **Date Indicator:** Displays the current date of the month.
- **24-Hour Indicator:** Some models may include a 24-hour sub-dial synchronized with the main time, useful for distinguishing AM/PM.

These functions operate automatically once set. If the date or day needs correction (e.g., after a month with fewer than 31 days), refer to the "Setting the Date and Day" section.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** Your Fastrack watch has a specific water resistance rating of 5 ATM / 50 meters. This rating indicates suitability for splashes, rain, and brief immersion, but not for swimming, diving, or hot showers. Always ensure the crown is fully pushed in to maintain water resistance.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect the movement and battery life.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) as they can affect the accuracy of the quartz movement.
- **Battery Replacement:** When the watch stops or the second hand starts skipping (indicating low battery), have the battery replaced by an authorized Fastrack service center or a qualified watch technician. Using incorrect battery types or improper installation can damage the movement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery at an authorized service center.
Time is inaccurate.	Exposure to strong magnetic fields; incorrect time setting.	Demagnetize the watch (professional service recommended); reset the time correctly.

Problem	Possible Cause	Solution
Date/Day does not change or is incorrect.	Set during restricted hours (9 PM - 3 AM); incorrect setting.	Reset the date/day outside of restricted hours; ensure proper setting as per "Setup" section.
Condensation under crystal.	Exposure to extreme temperature changes; compromised water resistance.	Seek professional service immediately to prevent internal damage.

SPECIFICATIONS

- Brand:** Fastrack
- Model Number:** 3303KM02
- Display Type:** Analog
- Movement:** Quartz
- Case Material:** Stainless Steel
- Strap Material:** Stainless Steel
- Product Dimensions:** 13 x 7 x 9 cm
- Item Weight:** 300 g
- Batteries:** 1 Lithium Polymer battery (included)
- Country of Origin:** India
- Water Resistance:** 5 ATM / 50 Meters (Splash and rain resistant, suitable for brief immersion. Not for swimming or diving.)

WARRANTY AND SUPPORT

Fastrack watches typically come with a manufacturer's warranty covering defects in materials and workmanship. The specific warranty period and terms may vary by region and purchase date. Please refer to the warranty card provided with your watch or visit the official Fastrack website for detailed warranty information.

For technical support, service, or warranty claims, please contact an authorized Fastrack service center. You can find contact details and service center locations on the official Fastrack website or through your point of purchase.

Important: Any unauthorized repair or alteration to the watch may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question