

[Manuals.plus](#) /

› [BoxWave](#) /

› BoxWave AccuPoint Active Stylus User Manual for Xiaomi Redmi Pad Pro

BoxWave AccuPoint Active Stylus

BoxWave AccuPoint Active Stylus User Manual

For Xiaomi Redmi Pad Pro

INTRODUCTION

The BoxWave AccuPoint Active Stylus is an electronic stylus designed to provide a precise and natural writing experience on your Xiaomi Redmi Pad Pro. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your stylus.



The BoxWave AccuPoint Active Stylus shown alongside the Xiaomi Redmi Pad Pro, highlighting its compatibility.

SETUP


1. Charging the Stylus

Before first use, fully charge your AccuPoint Active Stylus. Use the included MicroUSB cable to connect the stylus to any standard USB power source (e.g., computer USB port, wall adapter). The indicator light will show the charging status.

- **Red Light:** Indicates the stylus is currently charging.
- **Green Light:** Indicates the stylus is fully charged.



Fast Charging

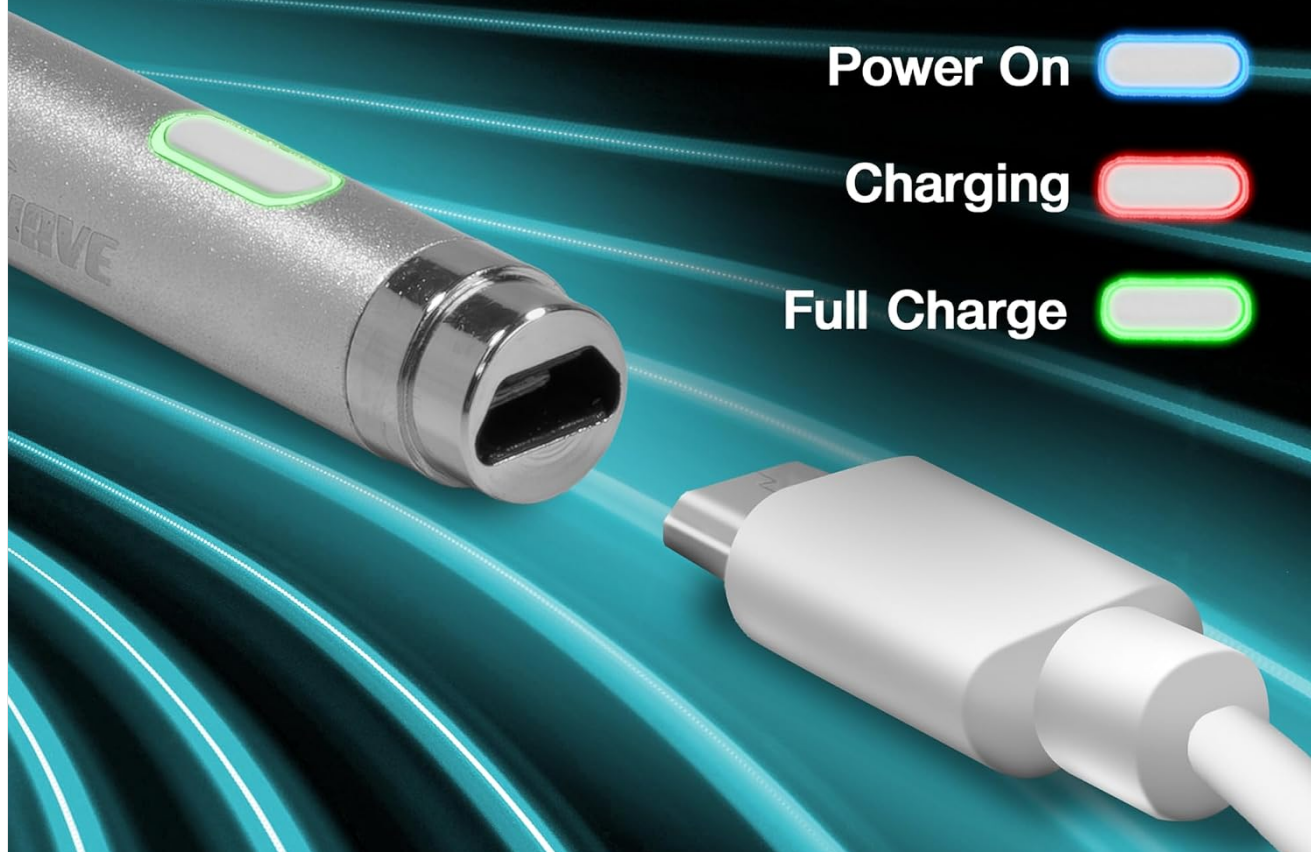

A close-up of the stylus connected to a charging cable, showing the indicator light states: blue for power on, red for charging, and green for full charge.

2. Powering On/Off

To turn on the stylus, press the power button located on the barrel. The indicator light will turn blue. To turn off the stylus, press the power button again.

3. No Pairing Required

The AccuPoint Active Stylus does not require Bluetooth pairing with your Xiaomi Redmi Pad Pro. Simply turn it on, and it will emit electronic pulses to interact with your screen.

OPERATING INSTRUCTIONS

The AccuPoint Active Stylus is designed for intuitive use, mimicking a traditional pen. It features an ultra-fine tip for precision and a FiberMesh tip for broader interactions.

- **Writing and Drawing:** Use the 1.9mm extra fine tip for detailed tasks such as writing notes, drawing, or

precise selections.

- **Navigation:** Both the fine tip and the FiberMesh tip can be used for tapping, swiping, and navigating your device's interface.
- **Natural Interaction:** The stylus allows for a natural writing position and pressure, enhancing your interaction with the screen.

Important Note:

- The AccuPoint Active Stylus does not support palm rejection. Avoid resting your palm on the screen while using the stylus to prevent unintended input.
- The stylus does not support pressure sensitivity.



Tap, Swipe, or Write Naturally With the AccuPoint Active Stylus

No pairing required! The AccuPoint Active Stylus emits quick electronic pulses to interact with your device's screen.

(Please note: the AccuPoint Active Stylus does not support palm rejection)

BoxWave AccuPoint Active Stylus

A hand demonstrating the natural writing experience with the AccuPoint Active Stylus on a tablet screen. The stylus interacts with the screen using electronic pulses without requiring pairing.

MAINTENANCE

Cleaning

To clean your stylus, gently wipe the barrel with a soft, dry cloth. For the tips, use a slightly damp cloth if necessary, ensuring no moisture enters the charging port or internal components.

Tip Care

The FiberMesh tip is removable. Ensure both tips are free from debris to maintain optimal performance. Avoid applying excessive force to the tips.

Battery Care

To prolong battery life, avoid fully discharging the stylus frequently. Charge it when the indicator light suggests low power. Store the stylus in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

- **Stylus not responding:** Ensure the stylus is powered on (blue indicator light). If not, charge the stylus. Verify that the tips are clean and undamaged.
- **Indicator light not working:** If the stylus is not charging or turning on, ensure the MicroUSB cable is securely connected to both the stylus and the power source. Try a different charging cable or power source.

- **Inaccurate input:** Clean the stylus tip and your device's screen. Ensure there are no obstructions or debris.

SPECIFICATIONS

Model	AccuPoint Active Stylus
Brand	BoxWave
Compatible Devices	Xiaomi Redmi Pad Pro (Tablets)
Material	Brushed Aluminum
Color	Metallic Silver
Tip Size	1.9mm / 2mm (Ultra Fine Tip)
Battery Type	Product Specific (Included)
Battery Life (Active Use)	Up to 12 hours
Weight	1.3 ounces

Features and Specifications

The diagram shows a silver stylus with several callout boxes pointing to specific features: 'Protected Charging Port' at the base, 'Removable FiberMesh Tip' at the tip, '9mm Fingerprint Proof Brushed Aluminum' along the body, 'Easy-On LED Button and Power Indicator' on the side, '1.9mm Tip' at the tip, and 'No Pairing Required' in a separate box. A note at the bottom states: '(Please note: Palm Rejection and Pressure Sensitivity is not supported)'.

BoxWave AccuPoint Active Stylus

A visual summary of the stylus's features and specifications, including its protected charging port, 9mm fingerprint-proof brushed aluminum body, 1.9mm tip, removable FiberMesh tip, easy-on LED button with power indicator, and the absence of pairing requirements. It also reiterates that palm rejection and pressure sensitivity are not supported.

SUPPORT

For technical assistance or inquiries regarding your BoxWave AccuPoint Active Stylus, limited 3rd party technical support is available. Please refer to the product packaging or purchase platform for contact details regarding this support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question