

[Manuals.plus](#) /

› [MCombo](#) /

› MCombo Fabric Electric Power Recliner Chair Model 8015 User Manual

MCombo 8015

MCombo Fabric Electric Power Recliner Chair Model 8015 User Manual

Model: 8015



1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Ensure all components are securely fastened before use.
- Keep children and pets away from the chair's moving parts.
- Do not allow children to operate the recliner mechanism.
- Avoid placing hands or feet near the reclining mechanism to prevent injury.
- Only use the provided power adapter.
- Do not overload the USB ports; they are designed for low-power devices like mobile phones.
- If any part is damaged or missing, contact MCombo customer support immediately.
- This chair is not a lift chair. It does not assist in standing up.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly.



Image: Diagram illustrating the main components included in the package: the chair base, backrest, a box containing smaller parts, and two armrests.

- 1 x Chair Base
- 1 x Backrest
- 2 x Armrests (Left and Right)
- 1 x Parts Box (containing power adapter, remote controls, and cables)
- 1 x User Manual (this document)

3. ASSEMBLY INSTRUCTIONS

Assembly typically takes about 15 minutes for a novice and requires no additional tools.

Step 1: Attach Armrests to the Base



Image: Illustration demonstrating how to slide the armrests onto the designated slots on the chair base until they click into place securely.

Align the metal brackets on the armrests with the receivers on the chair base. Slide the armrests down firmly until they lock into position.

Step 2: Attach the Backrest



Image: Illustration showing the backrest being lowered onto the chair base, aligning its brackets with the corresponding slots.

Align the metal brackets on the backrest with the receivers on the chair base. Push the backrest down firmly until it locks into position.

Step 3: Connect the Wires



Image: Diagram detailing the electrical connections under the chair, including connecting the power adapter, remote controls, and internal wiring.

Locate the electrical cables extending from the backrest and the base. Connect them according to the color-coded or shape-matched connectors. Plug the power adapter into the designated port and then into a wall outlet.

4. OPERATING INSTRUCTIONS

4.1 Electric Reclining Function



Image: The reclining remote control with two large buttons, one for extending the footrest and reclining the backrest, and another for returning to the upright position. Illustrations show the chair in 'Sit', 'TV', and 'Reclined' positions.

The chair features an electric power reclining mechanism. Use the two-button remote control located on the side of the chair:

- Press the **Up arrow button** to recline the backrest and extend the footrest. The chair can adjust from 110° (upright) to 154° (fully reclined).
- Press the **Down arrow button** to return the chair to its upright sitting position.

Note: This is not a lift chair and does not assist in standing.

4.2 Heat and Massage Functions



Image: The massage and heat remote control, displaying buttons for power, heat, massage modes, intensity, and timer. A diagram of the chair highlights the six vibrating points and the lumbar heating area.

The chair is equipped with a full-body vibration massage system and a lumbar heating function, controlled by a separate remote.

- **Power:** Press the power button to turn the massage and heat functions on/off.
- **Heat:** Press the 'HEAT' button to activate the lumbar heating. This function can operate independently of the massage.
- **Massage Points:** The chair has 6 built-in vibrating points targeting the back, lumbar, and thighs. Use the 'BACK', 'LUMBAR', and 'THIGH' buttons to select specific massage zones.
- **Mode:** Cycle through different massage modes using the 'MODE' button.
- **Intensity:** Adjust the massage intensity (Low, Medium, High) with the 'L', 'M', 'H' buttons or '+' and '-' buttons.
- **Timer:** Set a massage duration (e.g., 10, 20, 30 minutes) using the 'TIMER' button.

4.3 USB A/C Charging Ports



Image: A detailed view of the USB-A and USB-C charging ports integrated into the side of the recliner, designed for convenient device charging.

Two USB A/C charging ports are located on the side of the chair for convenient charging of low-power electronic devices such as mobile phones. Simply plug your device's charging cable into the appropriate port.

Caution: These ports are not designed for high-power devices like laptops or tablets, which may draw too much current and damage the ports or the chair's electrical system.

5. FEATURES

- **Extended Footrest:** The footrest extends an additional 3.5 inches, allowing for full leg extension and enhanced comfort.
- **Cup Holders:** Two integrated cup holders are located in the armrests for beverages.
- **Side Pockets:** Convenient side pockets provide storage for magazines, remote controls, or other small items.
- **Overstuffed Armrests:** Designed for maximum comfort and support.
- **Quality Materials:** The chair features an FSC-Certified wood frame and OEKO-TEX certified fabric, ensuring durability and safety.

6. MAINTENANCE

6.1 Fabric Care

The fabric is OEKO-TEX certified, indicating it is free from harmful substances.



Image: A close-up view of the grey fabric texture, featuring the OEKO-TEX Standard 100 certification label, indicating its safety and quality.

- **Regular Cleaning:** Vacuum the fabric regularly using a soft brush attachment to remove dust and loose debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner following the product instructions. Test on an inconspicuous area first.
- **Avoid Harsh Chemicals:** Do not use bleach, abrasive cleaners, or solvents, as these can damage the fabric.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading.

6.2 General Maintenance

- **Check Connections:** Periodically check all electrical connections and ensure they are secure.
- **Inspect Mechanism:** Occasionally inspect the reclining mechanism for any loose bolts or obstructions.
- **Weight Limit:** Adhere to the recommended weight limit to prevent damage to the chair's frame and mechanism.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline or return to upright position.	Power cord unplugged; loose electrical connection; remote control malfunction.	Ensure power cord is securely plugged into outlet and chair. Check all internal electrical connections. Try a different outlet. If issue persists, contact support.
Massage or heat function not working.	Massage/heat remote not powered; loose connection; function not activated.	Ensure the main power is connected. Press the power button on the massage remote. Check connections for the massage/heat unit.
USB ports not charging devices.	Device requires too much power; loose connection; port malfunction.	Ensure the device is low-power (e.g., mobile phone). Check USB cable connection. Verify main power to the chair.
Unusual noises during operation.	Loose components; obstruction in mechanism.	Inspect the chair for any loose bolts or foreign objects. Tighten any loose fasteners. If noise persists, discontinue use and contact support.

8. SPECIFICATIONS

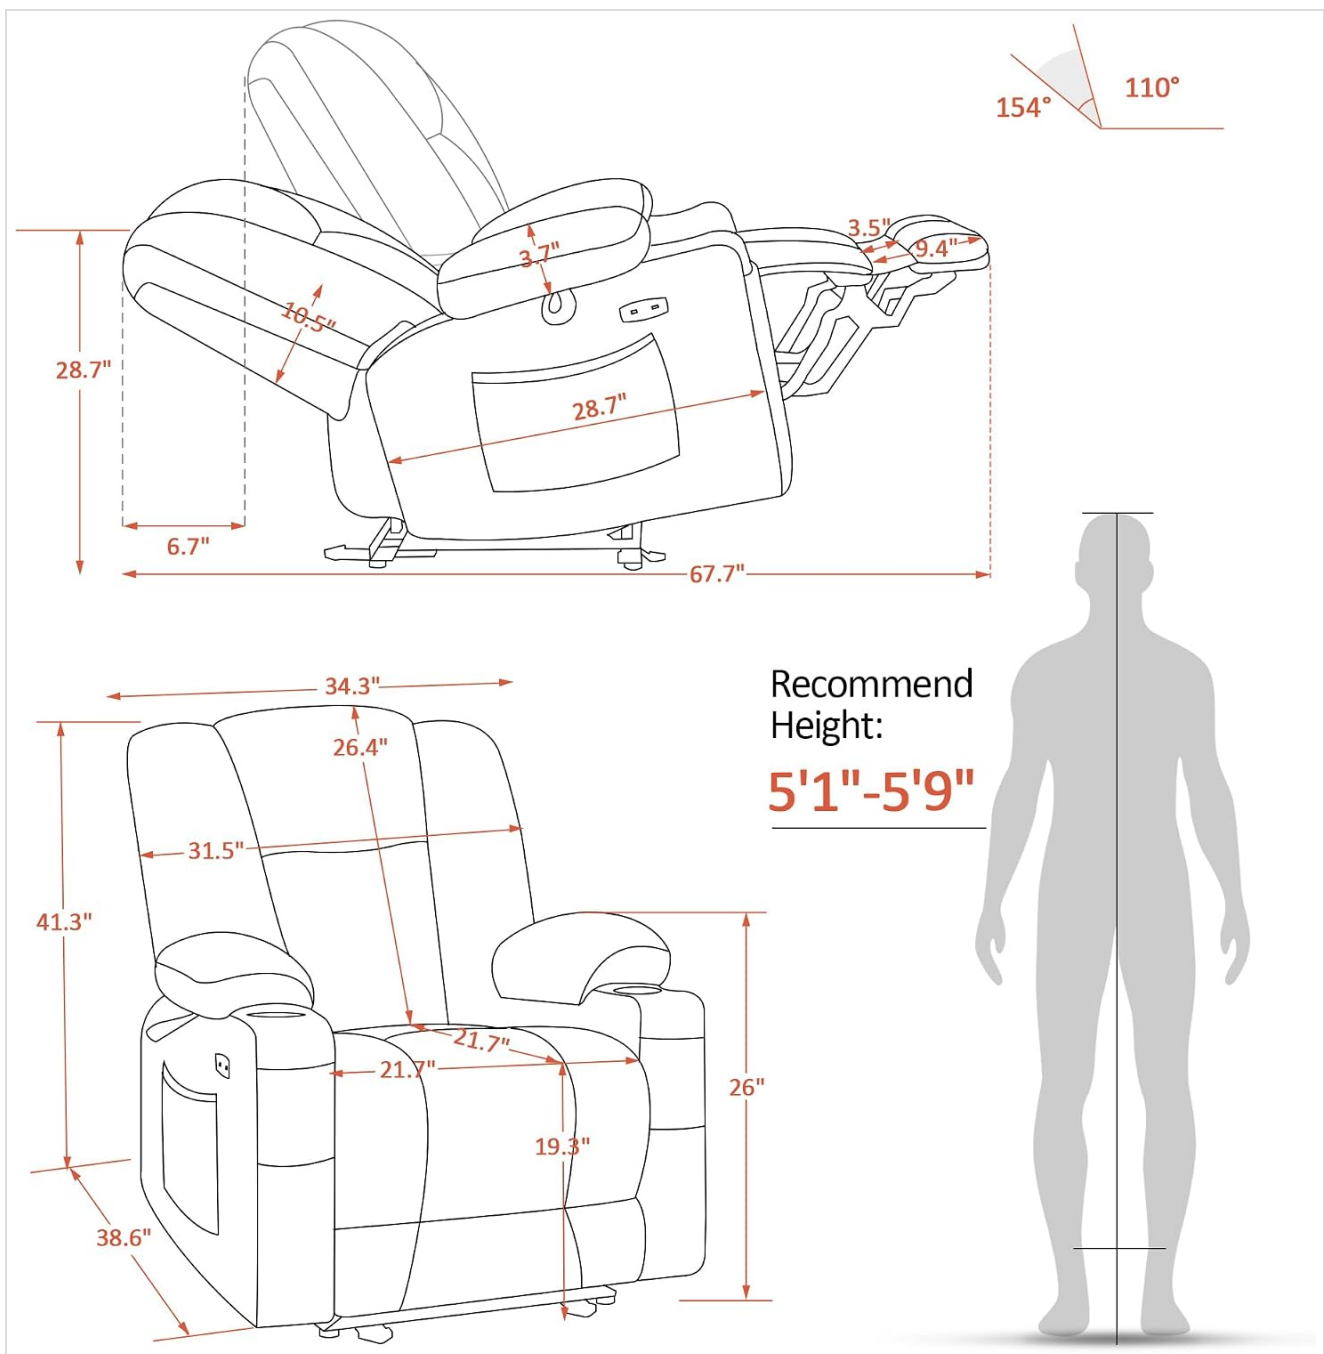


Image: A technical diagram illustrating the various dimensions of the recliner chair in both upright and reclined positions, along with a recommended user height range of 5'1" to 5'9".

- **Brand:** MCombo
- **Model Number:** CA-6160-8015
- **Color:** Grey (for this variant)
- **Material:** Textile
- **Product Dimensions (Upright):** 98D x 87W x 105H Centimetres (approximately 38.6D x 34.3W x 41.3H inches)
- **Item Weight:** 55.5 kg (approximately 122.4 lbs)
- **Reclining Angle:** 110° (upright) to 154° (max recline)
- **Recommended User Height:** 5'1" - 5'9"
- **Special Features:** Electric Reclining, Lumbar Heat, 6-Point Vibration Massage, USB A/C Ports, Cup Holders, Side Pockets, Extended Footrest.
- **Certifications:** FSC-Certified Wood, OEKO-TEX Standard 100 Fabric.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact MCombo customer service directly. Refer to your purchase documentation for specific warranty terms and contact details.

You can typically find support information on the MCombo official website or through the retailer where the product was purchased.

