

manuals.plus /

- › [BoxWave](#) /
- › [BoxWave AccuPoint Active Stylus User Manual for Doogee T30 Max](#)

## BoxWave AccuPoint Active Stylus

# BoxWave AccuPoint Active Stylus User Manual

For Doogee T30 Max



## INTRODUCTION

---

The BoxWave AccuPoint Active Stylus is an electronic stylus designed to provide precise and natural interaction with your Doogee T30 Max device. It features an ultra-fine tip for accurate input and does not require Bluetooth pairing.

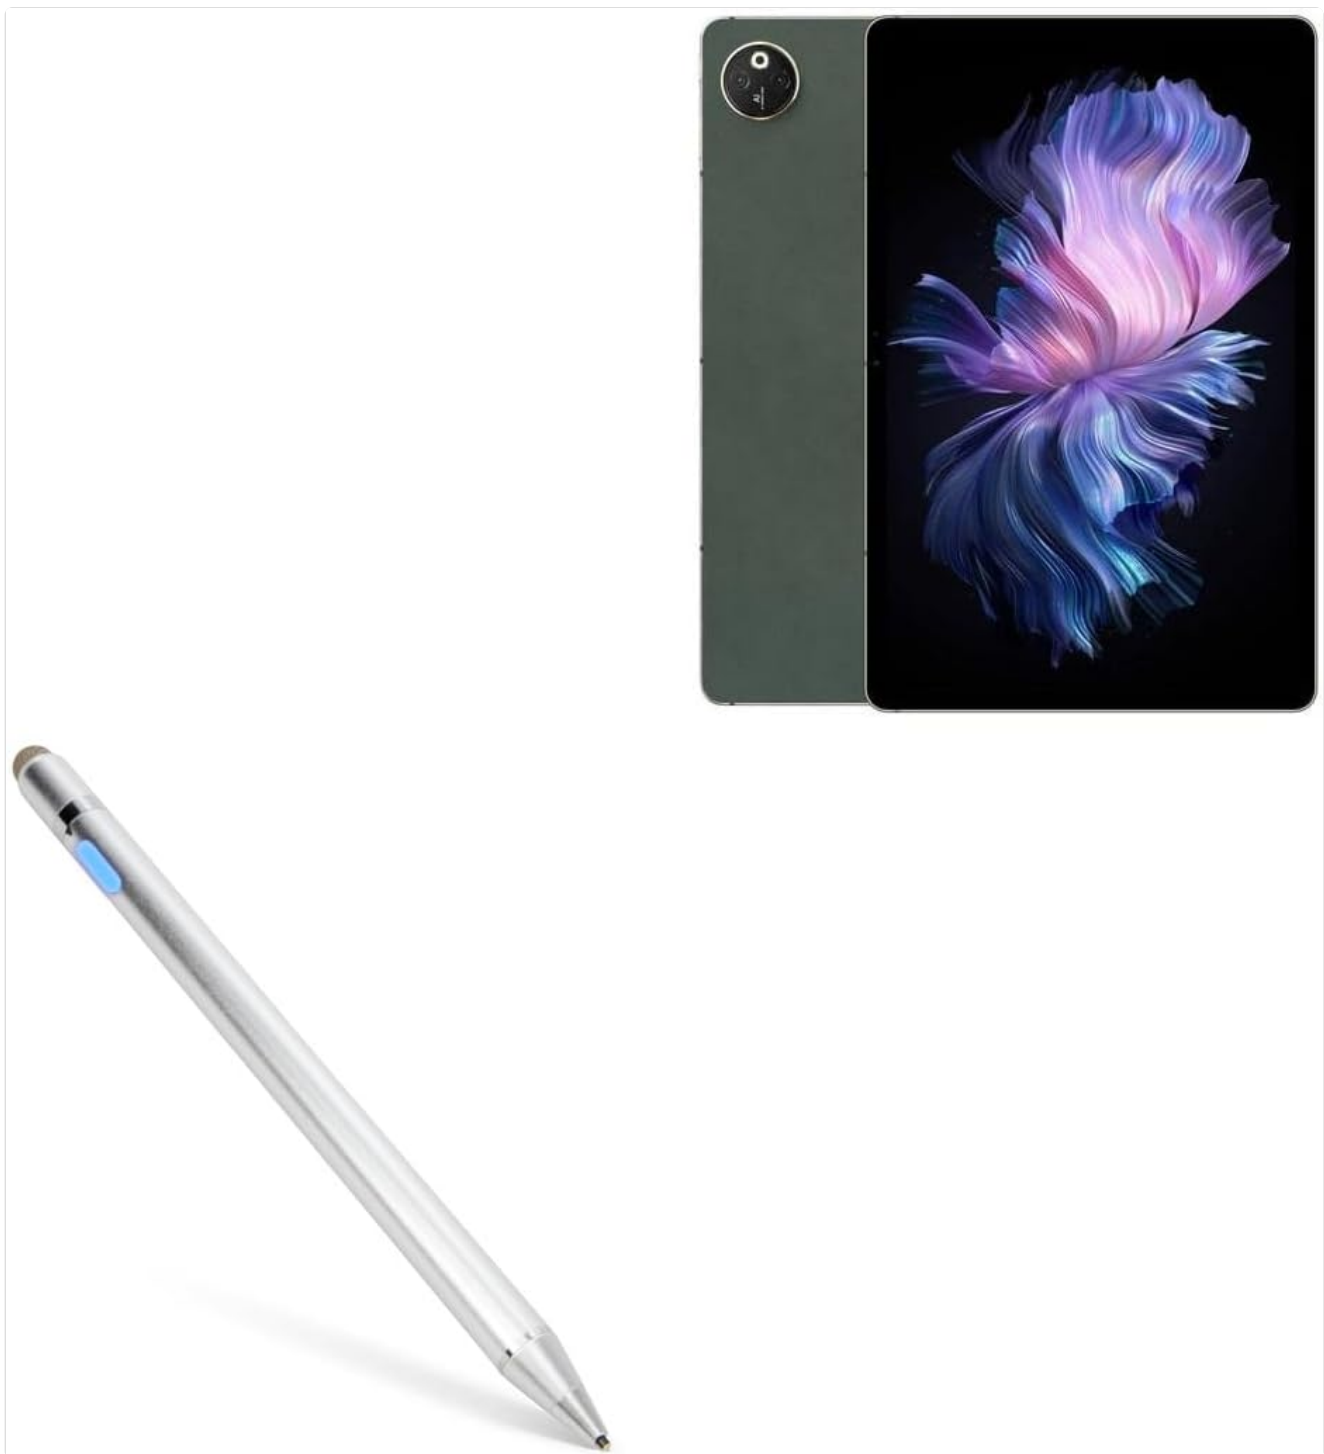


Image: The BoxWave AccuPoint Active Stylus shown alongside a Doogee T30 Max tablet, illustrating its compatibility and design.

#### Key Features:

- **No Pairing Required:** Operates by emitting electronic pulses to interact with the screen.
- **Ultra-Fine Tip:** A 1.9mm tip allows for precise tapping, swiping, and drawing.
- **Long Battery Life:** Provides up to 12 hours of continuous use on a single charge.
- **Durable Construction:** Made with a solid brushed aluminum barrel.
- **Rechargeable:** Includes a MicroUSB cable for convenient charging.

**Note: The AccuPoint Active Stylus does not support Palm Rejection or Pressure Sensitivity.**

## SETUP

Follow these steps to prepare your AccuPoint Active Stylus for use:

### 1. Charge the Stylus:

- Connect the included MicroUSB cable to the charging port on the stylus.
- Plug the other end of the cable into any standard USB power source (e.g., computer, wall adapter).
- The indicator light will show the charging status.



Image: The stylus is shown connected via its MicroUSB port to a laptop, demonstrating the charging process.



Image: A close-up view of the stylus's indicator light, showing different colors for 'Power On' (blue), 'Charging' (red), and 'Full Charge' (green).

2. **Power On:** Press the button located on the stylus barrel to turn it on. The indicator light will illuminate.
3. **No Pairing:** The stylus does not require Bluetooth pairing. It is ready for use once powered on.

## OPERATING INSTRUCTIONS

---

Using your AccuPoint Active Stylus is straightforward:

1. **Hold the Stylus:** Hold the stylus as you would a traditional pen for comfortable and natural writing or drawing.
2. **Interact with Screen:** Gently tap, swipe, or draw on your Doogee T30 Max screen with the fine tip. The stylus will interact with the display to register your input.
3. **Power Off:** Press the button again to turn off the stylus when not in use to conserve battery life.





Image: A hand is shown using the AccuPoint Active Stylus to interact with icons on a tablet screen, demonstrating its use for navigation and selection.



Image: The stylus tip is shown precisely touching a tablet screen, emphasizing its high accuracy and sensitivity for detailed work.

## MAINTENANCE

---

Proper care will extend the life and performance of your stylus:

- **Cleaning:** Use a soft, dry cloth to wipe the stylus barrel and tip. Avoid abrasive cleaners or solvents.
- **Battery Care:** Charge the stylus regularly, especially if it has not been used for an extended period. Avoid fully depleting the battery frequently.
- **Storage:** Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures.
- **Tip Protection:** Avoid applying excessive force to the tip, as this may damage it.

## TROUBLESHOOTING

---

If you encounter issues with your AccuPoint Active Stylus, refer to the following common solutions:

- **Stylus Not Responding:**

- Ensure the stylus is powered on. Press the power button.
- Check the battery level. If the indicator light is off or red, charge the stylus.
- **Inaccurate Input:**
  - Gently clean the stylus tip and your device's screen to remove any dust or smudges.
  - Ensure the tip is securely attached.
- **Stylus Not Connecting:**
  - The AccuPoint Active Stylus does not require Bluetooth pairing. If you are attempting to pair it, this is not necessary for its operation.

## SPECIFICATIONS

Detailed specifications for the BoxWave AccuPoint Active Stylus:

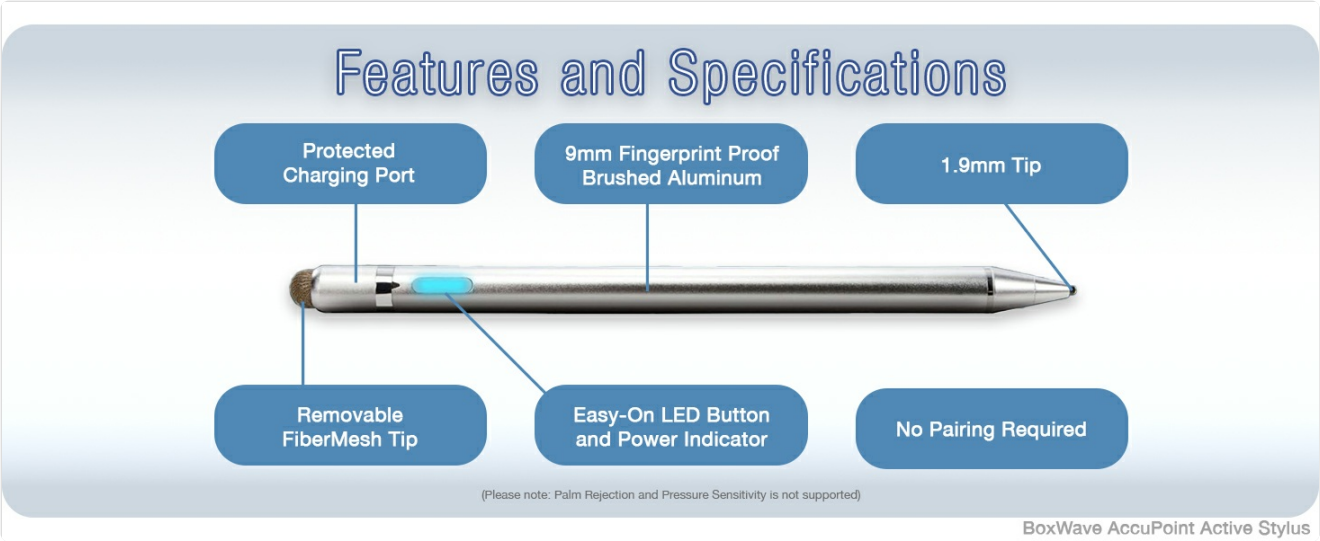


Image: A visual breakdown of the stylus, highlighting its protected charging port, 9mm fingerprint-proof brushed aluminum body, 1.9mm tip, removable FiberMesh tip, easy-on LED button, power indicator, and the 'no pairing required' feature.

Model Name	AccuPoint Active Stylus
Brand	BoxWave
Compatible Devices	Doogee T30 Max (and other compatible smartphones/tablets)
Tip Size	1.9mm (Ultra Fine Tip)
Battery Type	Lithium-Ion (1 included)
Battery Life (Standby)	Up to 12 Hours
Charging Port	MicroUSB
Material	Aluminum, Metal, Plastic
Color	Metallic Silver
Item Weight	1.3 ounces

## WARRANTY AND SUPPORT




For warranty information and technical support, please refer to the official BoxWave website or contact their customer service directly. This manual does not contain specific warranty details.



Related Documents - AccuPoint Active Stylus

	<p><a href="#">DOUXE S3 Active Stylus Pen Instruction Manual</a></p> <p>Comprehensive instruction manual for the DOUXE S3 Active Stylus Pen, detailing features, technical specifications, operating instructions, safety warnings, and warranty information for touchscreen device users.</p>
	<p><a href="#">Penyeah Stylus Pen User Manual - DIY Combinations and Usage Guide</a></p> <p>Comprehensive user manual for the Penyeah P1 stylus pen, detailing DIY combinations of tips, usage instructions, and replacement procedures. Learn how to maximize your stylus experience for various devices and applications.</p>
	<p><a href="#">Powerology NÉOTEC Active Stylus Pen - User Manual and Specifications</a></p> <p>Comprehensive guide to the Powerology NÉOTEC Active Stylus Pen (SKU: PGBSTPN), covering operation, features, specifications, compatible iPad models, and warranty information.</p>
	<p><a href="#">ASUS Pen SA300 Quick Start Guide</a></p> <p>This guide provides instructions on how to use and maintain the ASUS Pen SA300 Active Stylus, including package contents, inserting and replacing the battery, and replacing the pen tip and holder.</p>
	<p><a href="#">ASUS Pen 2.0 (SA203H) Active Stylus: Quick Start Guide</a></p> <p>Get started with your ASUS Pen 2.0 (SA203H) Active Stylus. This guide covers package contents, LED indicators, hardware interface, charging, and Bluetooth pairing instructions.</p>



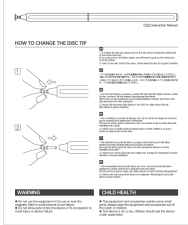

## How to Use and Change the Disc Tip for Universal Capacitive Stylus Pen

Detailed instructions and safety information for the universal capacitive stylus pen, covering tip replacement and usage on touch screen devices like iPad, iPhone, and Samsung.