

## HAUSHOF HH24023A

# HAUSHOF Cordless 8V Electric Bread Knife

Model: HH24023A | User Manual

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your HAUSHOF Electric Knife. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- **Keep out of reach of children:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Sharp Blades:** The blades are extremely sharp. Handle with extreme care. Always hold blades by the plastic guard.
- **Unplug Before Cleaning/Assembly:** Always ensure the knife is turned off and blades are removed before cleaning or assembling/disassembling.
- **Avoid Contact with Moving Parts:** Keep hands, hair, clothing, and other utensils away from blades during operation to prevent injury.
- **Do Not Immerse Handle:** The knife handle contains electrical components and should not be immersed in water or other liquids.
- **Use Only as Intended:** Use the knife only for its intended purpose of slicing food. Do not attempt to cut frozen foods, bones, or other hard materials.
- **Charging Safety:** Use only the provided Type-C charging cable. Do not charge near water or in damp conditions.
- **Inspect Before Use:** Before each use, inspect the knife and blades for any damage. Do not use if damaged.

## PACKAGE CONTENTS

Your HAUSHOF Electric Knife package includes the following items:

- 1 x HAUSHOF Electric Knife Handle (Grey)
- 1 x 178mm Stainless Steel Blade
- 1 x 203mm Stainless Steel Blade
- 1 x Carving Fork
- 1 x Type-C Charging Cable
- 1 x Storage Box



The HAUSHOF Electric Knife set, including the handle, two blade sizes, carving fork, charging cable, and a convenient storage box.

## SETUP AND CHARGING

---

### Charging the Battery

The HAUSHOF Electric Knife is cordless and rechargeable, offering flexibility in your kitchen. Before first use, fully charge the battery.

1. Locate the Type-C charging port on the knife handle.
2. Connect the provided Type-C charging cable to the knife and a suitable 5V DC power adapter (not included).
3. The power indicator on the handle will illuminate to show charging status. A full charge takes approximately 2.5 to 6 hours.
4. Once fully charged, disconnect the charging cable.

# SANS FIL & COMPACTE



The cordless knife handle features a 2000mAh battery, power indicator, LED work light, and a Type-C charging port for convenience.

## Attaching and Detaching Blades

Always handle blades by their plastic guard. Ensure the knife is turned off before attaching or detaching blades.

1. **To Attach:** Hold the blade by its plastic guard. Align the blade's rivets with the slots on the knife handle. Insert the blade firmly until you hear a "click," ensuring it is securely fixed.
2. **To Detach:** Press the blade release button (usually located near the blade insertion point) and carefully pull the blade straight out.

# FACILE À UTILISER



Insérez la lame dans les fentes jusqu'à ce que vous entendiez un « clic »  
(Assurez-vous qu'ils sont sur la piste du rivet et qu'ils sont fixés dans les fentes en toute sécurité)



Appuyez sur l'interrupteur pendant 2,5 secondes pour démarrer la machine  
(La machine s'éteint automatiquement après 3 minutes d'inactivité)



Appuyez sur la gâchette et la maintenez enfoncée pour commencer la découpe



Veuillez éteindre la machine avant de relâcher la lame

Step 1 of the visual guide demonstrates how to correctly insert the blade into the knife handle until it clicks securely into place.

## OPERATING INSTRUCTIONS

The HAUSHOF Electric Knife is designed for efficient and uniform slicing of various foods.

### Powering On and Off

- **To Power On:** Press and hold the power button on the handle for 2.5 seconds. The knife will activate.
- **Automatic Shut-off:** For safety and battery conservation, the knife will automatically turn off after 3 minutes of inactivity.
- **To Power Off:** Release the power button.



# FACILE À UTILISER



Insérez la lame dans les fentes jusqu'à ce que vous entendiez un « clic »  
(Assurez-vous qu'ils sont sur la piste du rivet et qu'ils sont fixés dans les fentes en toute sécurité)



Appuyez sur l'interrupteur pendant 2,5 secondes pour démarrer la machine  
(La machine s'éteint automatiquement après 3 minutes d'inactivité)



Appuyez sur la gâchette et la maintenez enfoncée pour commencer la découpe



Veuillez éteindre la machine avant de relâcher la lame

Step 2 illustrates pressing the power button to activate the knife. The knife automatically shuts off after 3 minutes of inactivity.

## Slicing Technique

For best results and safety, follow these guidelines:

1. Place the food item on a stable cutting surface.
2. Hold the knife handle firmly. For larger items, use the carving fork to stabilize the food.
3. Press and hold the trigger to start the blades. Guide the knife through the food with gentle, even pressure. Let the blades do the work.
4. Avoid forcing the knife or applying excessive pressure, as this can damage the blades or motor.
5. For optimal performance and to prevent overheating, it is recommended to take a break after 10 minutes of continuous cutting.

# TRANCHER RAPIDEMENT & UNIFORMÉMENT

**Le couteau électrique** est plus efficace et demande moins de travail que les couteaux et fourchettes manuels, et il permet des coupes plus lisses



**Conseils:** Il est nécessaire de faire une pause après 10 minutes de coupe

The electric knife provides smooth and uniform cuts, making slicing bread effortless. Remember to take a break after 10 minutes of continuous use.





The electric knife is ideal for slicing various meats, ensuring even portions for your meals.



Using the carving fork in conjunction with the electric knife helps stabilize meat for easier and safer slicing.





Beyond bread and meat, the electric knife is also suitable for slicing cheese, offering versatile kitchen utility.

## Recommended Uses

This electric knife is perfect for:

- Slicing various types of bread, including crusty loaves.
- Carving roasted meats such as turkey, ham, and roasts.
- Cutting soft cheeses.
- Chopping and preparing other soft food items.

## MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and hygiene of your HAUSHOF Electric Knife.

### Cleaning

- **Blades and Fork:** The stainless steel blades and carving fork are dishwasher safe. Ensure they are completely dry before storing or re-attaching.
- **Knife Handle:** The handle is NOT dishwasher safe. Wipe the handle clean with a damp cloth. Do not immerse the handle in water.
- **Before Cleaning:** Always ensure the knife is turned off and blades are removed before cleaning.



The high-quality stainless steel blades and carving fork are dishwasher safe for easy cleaning. Always ensure they are completely dry before next use.

## Storage

Store the electric knife and its components safely when not in use.

- Use the provided compact storage box to keep the knife handle, blades, and fork organized and protected.
- Ensure all components are clean and dry before placing them in the storage box.
- Store the box in a dry place, out of reach of children.



# RANGEMENT FACILE

Les lames et les poignées se rangent proprement pour gagner l'espace



The compact storage box (31 cm long, 5 cm high) allows for neat and space-saving storage of all knife components.

## TROUBLESHOOTING

If you encounter any issues with your HAUSHOF Electric Knife, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Knife does not turn on.	Battery is low or depleted. Power button not held long enough.	Charge the battery fully. Press and hold the power button for 2.5 seconds.
Blades are not cutting effectively.	Blades are not properly inserted. Blades are dull or damaged. Attempting to cut overly hard food.	Ensure blades are securely clicked into place. Replace blades if dull or damaged. Do not use on frozen items or bones.



Problem	Possible Cause	Solution
Knife stops during operation.	Automatic shut-off activated (after 3 mins inactivity). Battery is low. Overheating from continuous use.	Restart the knife by holding the power button. Charge the battery. Allow the knife to cool down for a few minutes. Take breaks after 10 minutes of use.
Blades are difficult to remove.	Blade release button not fully pressed.	Ensure the blade release button is fully depressed while pulling the blade straight out.

If the problem persists after trying these solutions, please contact HAUSHOF customer support.

## SPECIFICATIONS

Feature	Detail
Brand	HAUSHOF
Model Number	HH24023A
Color	Grey
Power Source	Battery Powered (Cordless)
Battery Type	1 Lithium-ion (included), 2000 mAh capacity
Voltage	8V
Charging Input	5V DC, Type-C port
Charging Time	2.5 to 6 hours
Blade Material	High-Quality Stainless Steel
Blade Lengths	178mm and 203mm
Handle Material	Plastic
Motor Speed	2800 rpm
Blade Stroke	4.5 mm
Special Features	Rebounding blades, LED work indicator, Charge indicator
Included Components	Electric knife handle, 2 blades, carving fork, storage box
Item Weight	1.22 Kilograms
Package Dimensions	34.4 x 14.9 x 5.5 cm
Manufacturer	Hang Zhou Great Star Industrial Co.,LTD
Country of Origin	China

# WARRANTY AND SUPPORT










Specific warranty information for the HAUSHOF Cordless 8V Electric Bread Knife (Model HH24023A) is not provided in the product data. For warranty details, product support, or to inquire about replacement parts, please contact the manufacturer or your retailer directly.

Manufacturer: Hang Zhou Great Star Industrial Co.,LTD

For further assistance, please refer to the contact information provided with your purchase or visit the official HAUSHOF website.

© 2025 HAUSHOF. All rights reserved. This manual is for informational purposes only.


## Related Documents

<div><div>HH24053A</div><div>HAUSHOF</div><div><div><div>ORIGINAL OPERATING INSTRUCTIONS COFFEE GRINDER</div><div>RETHRIERSANLEITUNGEN KAFFEEMÜHLE</div><div>INSTRUCTIONS D'UTILISATION ORIGINALES MOULIN À CAFÉ</div><div>ISTRUZIONI D'USO ORIGINALI MOLINO DEL CAFFÈ</div><div>INSTRUCCIONES DE USO ORIGINALES MOLINILLO DE CAFÉ</div></div></div><div></div><div><div>Model: HH24053A</div><div><div>  </div><div><div>Manufactured by Hangzhou Great Star Industrial Co., Ltd.</div><div>Hangzhou Great Star Industrial Co., Ltd.</div><div>Hangzhou, China</div><div>www.greatstar.com</div><div>Model: HH24053A</div></div></div></div></div>	<p><a href="#">HAUSHOF HH24053A Coffee Grinder: Operating Instructions and Safety Guide</a></p> <p>Comprehensive operating instructions and safety warnings for the HAUSHOF HH24053A coffee grinder (Model CG648B). Learn how to use, clean, and maintain your appliance for optimal performance, including technical specifications and useful tips.</p>
<div><div>HH23104A</div><div>HAUSHOF</div><div><div><div>ORIGINAL OPERATING INSTRUCTIONS ELECTRIC WINE OPENER SET</div></div></div><div></div><div><div>Read user for help for HAUSHOF Electric Wine Opener Set &amp; has been registered and trademarked by HAUSHOF. It is a high quality product, made of stainless steel, and is easy to use. It is a high quality product, made of stainless steel, and is easy to use. It is a high quality product, made of stainless steel, and is easy to use.</div><div><div> <b>WARNING:</b> To avoid the risk of injury, please read the user manual and understand the operation of the product before using it.</div></div><div><div>Model: HH23104A</div><div><div>  </div><div><div>Manufactured by Hangzhou Great Star Industrial Co., Ltd.</div><div>Hangzhou Great Star Industrial Co., Ltd.</div><div>Hangzhou, China</div><div>www.greatstar.com</div><div>Model: HH23104A</div></div></div></div></div></div>	<p><a href="#">HAUSHOF Electric Wine Opener Set KP1125 - Operating Instructions and Manual</a></p> <p>Official operating instructions and safety manual for the HAUSHOF Electric Wine Opener Set, Model KP1125. Learn how to charge, operate, clean, and maintain your electric corkscrew.</p>



[HAUSHOF High Pressure Cleaner Operator's Manual HH20007AU](#)

The HAUSHOF High Pressure Cleaner Operator's Manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of the HH20007AU and ABW-VCL-90P(C) models. Learn about proper use, safety precautions, technical specifications, installation, and storage to ensure years of rugged, trouble-free performance from your HAUSHOF pressure washer.

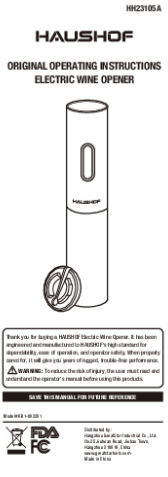

[HAUSHOF Electric Wine Opener: Original Operating Instructions and Safety Guide](#)

Comprehensive operating instructions for the HAUSHOF Electric Wine Opener (Model KB1-602201). Includes essential safety warnings, step-by-step guides for battery installation and cork removal, cleaning, maintenance, troubleshooting, storage, and disposal information. Distributed by Hangzhou GreatStar Industrial Co., Ltd.