

## HAUSHOF HH24020

# HAUSHOF Electric Knife Set HH24020 User Manual

Model: HH24020

## 1. INTRODUCTION

Thank you for choosing the HAUSHOF Electric Knife Set. This cordless 8V electric knife is designed to provide precise and effortless cutting for various foods such as bread, meat, and cheese. This manual provides essential information for the safe and efficient operation, maintenance, and care of your electric knife set. Please read it thoroughly before first use and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

To prevent injury or damage, always observe basic safety precautions when using electrical appliances, especially those with sharp blades.

- **Blade Safety:** The blades are extremely sharp. Handle them with extreme care. Always hold blades by the non-cutting edge.
- **Keep Away from Children:** This appliance is not intended for use by children. Store the knife and all accessories out of reach of children.
- **Proper Use:** Use the electric knife only for its intended purpose of cutting food. Do not use it for non-food items or frozen foods.
- **Avoid Contact:** Keep fingers, hair, clothing, and other utensils away from the blades during operation.
- **Power Source:** Only charge the device using the provided Type-C cable and a compatible power adapter (not included).
- **Water and Moisture:** Do not immerse the motor unit in water or other liquids. Blades are dishwasher-safe, but the handle unit is not.
- **Inspection:** Before each use, inspect the blades and handle for any damage. Do not operate if damaged.
- **Unplug When Not in Use:** Always ensure the knife is turned off and blades are removed before cleaning, assembling, or disassembling.

## 3. PACKAGE CONTENTS

Please check the package contents upon unpacking:

- 1 x HAUSHOF Cordless Electric Knife Handle (8V)

- 2 x Stainless Steel Blades (different types for various foods)
- 1 x Carving Fork
- 1 x Storage Box
- 1 x Type-C Charging Cable

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your HAUSHOF Electric Knife Set.



This image displays the complete HAUSHOF Electric Knife Set. It includes the white cordless electric knife handle, two different stainless steel serrated blades, a white-handled carving fork, a black transparent storage case, and a USB-C charging cable.

- **Electric Knife Handle:** Contains the motor, battery, control button, charging indicator, and LED work light.
- **Blades:** Two interchangeable stainless steel blades for various cutting tasks.
- **Carving Fork:** Used to stabilize food during cutting.
- **Storage Box:** Provides convenient and safe storage for all components.
- **Type-C Charging Port:** Located on the handle for battery recharging.

## 5. SETUP

### 5.1. Charging the Battery

1. Before first use, fully charge the electric knife.
2. Locate the Type-C charging port on the handle.
3. Connect the provided Type-C charging cable to the port and plug the other end into a compatible USB power adapter (not supplied).
4. The charging indicator lights on the handle will illuminate to show charging status. Allow sufficient time for a full charge.

## 5.2. Blade Installation

1. Ensure the electric knife is turned off and the charging cable is disconnected.
2. Carefully hold the desired blade set by the plastic guard.
3. Align the blade tangs with the slots in the knife handle.
4. Insert the blades firmly until they click into place. Ensure they are securely locked before use.
5. To remove blades, press the blade release button (if present, otherwise pull firmly while holding the plastic guard) and carefully pull the blades straight out.

## 6. OPERATING INSTRUCTIONS

---

Follow these steps for effective and safe operation:

1. **Prepare Food:** Place the food item (e.g., roasted meat, bread loaf) on a stable cutting surface. Use the carving fork to secure the food if necessary.
2. **Activate Knife:** With blades securely installed, press and hold the power button on the handle to activate the knife. The LED work light will illuminate.
3. **Cutting Technique:** Guide the vibrating blades through the food with gentle pressure. Allow the knife to do the work; do not force it. For best results, use a sawing motion for tougher items.
4. **Even Slices:** The design of the knife helps achieve even and precise slices. Maintain a consistent angle for uniform thickness.
5. **Deactivate Knife:** Release the power button to turn off the knife.
6. **Cool Down:** For extended cutting tasks, allow the knife to cool down periodically to prevent overheating.

## 7. CLEANING AND MAINTENANCE

---

Regular cleaning ensures hygiene and extends the life of your appliance.

- **Before Cleaning:** Always ensure the knife is turned off, blades are removed, and the charging cable is disconnected.
- **Blades:** The stainless steel blades are dishwasher-safe. Alternatively, wash them by hand with warm, soapy water and dry thoroughly immediately to prevent rust.
- **Knife Handle:** Wipe the electric knife handle with a damp cloth. Do not immerse the handle in water or place it in a dishwasher.
- **Carving Fork:** The carving fork can be washed by hand or in a dishwasher.
- **Storage Box:** Wipe clean with a damp cloth as needed.
- **Drying:** Ensure all parts are completely dry before reassembling or storing.

## 8. STORAGE

---

Store your electric knife set properly to maintain its condition and for safety.

- Always store the blades in the provided storage box when not in use.
- Place the knife handle, blades, and carving fork neatly into the storage box.
- Store the entire set in a cool, dry place, out of reach of children.

## 9. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Knife does not turn on.	Battery is depleted. Blades not properly installed.	Charge the battery fully. Ensure blades are securely clicked into place.
Poor cutting performance.	Blades are dull or dirty. Incorrect blade type for food.	Clean the blades thoroughly. Ensure the correct blade type is used for the food being cut.
Knife stops during operation.	Battery is low. Overheating.	Recharge the battery. Allow the knife to cool down before resuming use.

If the problem persists after trying these solutions, please contact customer support.

## 10. SPECIFICATIONS

- **Brand:** HAUSHOF
- **Model:** HH24020
- **Power:** 8V Cordless
- **Battery:** 2000 mAh Lithium Ion (included)
- **Charging Port:** Type-C
- **Blade Material:** Stainless Steel
- **Dimensions (Knife Handle):** Approximately 20.8 cm (length) x 3.8 cm (width)
- **Weight (Knife Handle):** Approximately 350g
- **Dishwasher-Safe:** Blades and carving fork only.
- **UPC:** 820909606185

## 11. WARRANTY AND SUPPORT

HAUSHOF products are manufactured to high-quality standards. For any questions, technical support, or warranty claims, please contact the retailer or HAUSHOF customer service directly. Please retain your proof of purchase for warranty purposes.

	<p><a href="#">HAUSHOF HH25001A Portable Dehumidifier User Manual</a></p> <p>Official user manual for the HAUSHOF HH25001A portable dehumidifier. Includes safety instructions, technical specifications, operation guide, cleaning, maintenance, and troubleshooting tips.</p>
	<p><a href="#">HausHof Carpet Spot Cleaner Operation Manual</a></p> <p>This operation manual provides detailed instructions for the HausHof Carpet Spot Cleaner, including safety precautions, parts identification, preparation, operating instructions, cleaning and maintenance, troubleshooting, and disposal information.</p>
	<p><a href="#">HAUSHOF Carpet Spot Cleaner HH22050A Operation Manual</a></p> <p>This manual provides instructions for the HAUSHOF Carpet Spot Cleaner HH22050A, covering safety precautions, parts identification, preparation, operation, cleaning, maintenance, troubleshooting, and disposal.</p>
	<p><a href="#">HAUSHOF Carpet Spot Cleaner Original Operation Manual</a></p> <p>This operation manual provides detailed instructions for the HAUSHOF Carpet Spot Cleaner, Model YLW6336. It covers important safety precautions, parts identification, preparation, operating instructions, handling stubborn dirt, cleaning and maintenance, consumables, fault diagnosis, and environmentally friendly disposal.</p>
	<p><a href="#">HausHof 4.2QT Air Fryer Operation Manual   Model DH-601A</a></p> <p>User manual for the HausHof 4.2QT Air Fryer (Model DH-601A). Learn about safe operation, features, cooking tips, and troubleshooting for your HausHof air fryer.</p>
	<p><a href="#">HAUSHOF HH24079A Pump Sprayer: Operating and Safety Manual</a></p> <p>This manual provides comprehensive instructions for operating, cleaning, and troubleshooting the HAUSHOF HH24079A pump sprayer. It includes detailed safety guidelines, parts layout, and operational modes for foaming and spraying applications.</p>



[pdf] User Manual

HH24020 manu OL haushof ManoManoGUARDE ESTE MANUAL DE INSTRUCCIONES DISEÑO 1

Indicador de la capacidad batería 2 Botón liberación las cuchillas 3 Ranuras para  
cuchillasB1sPrWmklmLm media amazon images I B1sPrWmklmL ref dp product quick view |||

...

lang: score:19 filesize: 2.82 M page\_count: 23 document date: 2024-06-24



[pdf]

HH24020 manu OL haushof ManoMano 28 Feb 2025 — CE Distributed by Vertrieben von Distribué par

Distribuito da Distribución por Hangzhou GreatStar Industrial Co Ltd No 35 Jiuhuan Road  
8c796456dbd39e7d061ec3ac80e7da39c905263a cdn manomano pim dam img 6146 108988824 |||

...

lang: score:13 filesize: 2.82 M page\_count: 23 document date: 2024-06-24