

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Portable Bluetooth Speaker (Model ASHATAu9z3gibkyn-12) User Manual

ASHATA ASHATAu9z3gibkyn-12

ASHATA Portable Bluetooth Speaker User Manual

Model: ASHATAu9z3gibkyn-12

1. INTRODUCTION

Thank you for choosing the ASHATA Portable Bluetooth Speaker. This device is designed for outdoor use, featuring a waterproof construction, dual pairing capabilities, FM radio, and memory card support. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your speaker.

2. PRODUCT FEATURES

- **Waterproof Design:** Engineered to withstand various weather conditions, suitable for outdoor activities.
- **Dual Pairing Technology:** Allows connection of two speakers for enhanced stereo sound.
- **Multiple Playback Modes:** Supports Bluetooth, FM radio, and memory card playback.
- **Portable and Lightweight:** Compact design for easy transport and storage.
- **Durable Construction:** Made from ABS and fabric materials for extended use.

3. PACKAGE CONTENTS

Please check the package for the following items:

- ASHATA Portable Bluetooth Speaker
- USB Charging Cable
- Handlebar Mounting Bracket
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 4.1: Front view of the ASHATA Portable Bluetooth Speaker, showing the speaker grille and control buttons (+, M, -).



Figure 4.2: Close-up of the speaker's control panel, featuring the volume up (+), mode (M), and volume down (-) buttons.



Figure 4.3: The ASHATA speaker shown alongside its detachable handlebar mounting bracket, illustrating how the two components connect.

Control Buttons:

- **'+' Button:** Short press for Volume Up; Long press for Next Track (in Bluetooth/Memory Card mode) or Next Station (in FM mode).
- **'-' Button:** Short press for Volume Down; Long press for Previous Track (in Bluetooth/Memory Card mode) or Previous Station (in FM mode).
- **'M' Button (Mode):** Short press to switch between Bluetooth, FM Radio, and Memory Card modes. Long press to initiate Dual Pairing.
- **Power Button (usually integrated with 'M' or separate):** Long press to Power On/Off. Short press to Play/Pause (in Bluetooth/Memory Card mode) or Answer/End Call.

5. SETUP

5.1 Charging the Speaker

1. Locate the charging port on the speaker (typically covered by a waterproof flap).
2. Connect the provided USB charging cable to the speaker's charging port.
3. Connect the other end of the USB cable to a standard USB power adapter (5V/1A recommended) or a computer's USB port.
4. The charging indicator light will illuminate (e.g., red) during charging and turn off or change color (e.g., blue) when fully charged.
5. Ensure the charging port cover is securely closed after charging to maintain waterproofing.

5.2 Mounting the Speaker

The speaker comes with a handlebar mounting bracket for secure attachment to bikes or other suitable bars.

1. Attach the speaker to the mounting bracket by sliding it into place until it clicks securely.
2. Open the clamp of the mounting bracket.
3. Position the bracket on your bicycle handlebar or other desired bar.
4. Tighten the screw on the bracket until it is firmly secured to the handlebar. Do not overtighten.
5. Ensure the speaker is stable and does not obstruct your view or controls.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **To Power On:** Long press the Power button (or 'M' button if combined) until you hear an audible prompt or see an indicator light.
- **To Power Off:** Long press the Power button (or 'M' button if combined) until you hear an audible prompt or the indicator light turns off.

6.2 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED or audible prompt). If not, short press the 'M' button to switch modes.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "ASHATA Speaker" (or similar name) from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the LED indicator will typically stop flashing and remain solid blue.
5. You can now play audio from your device through the speaker.

6.3 Dual Pairing (TWS Function)

To achieve stereo sound, you can pair two ASHATA Portable Bluetooth Speakers together.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the 'M' button until you hear a specific pairing tone, indicating it's searching for another speaker.
3. The two speakers will automatically connect to each other. You will hear a confirmation tone once connected.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in Section 6.2.
5. Audio will now play in stereo through both speakers.

6.4 FM Radio Mode

1. Power on the speaker.

- 2. Short press the 'M' button repeatedly until you enter FM Radio mode (audible prompt or specific indicator).
- 3. To auto-scan and save FM stations, long press the Play/Pause button (often the Power button or 'M' button). The speaker will scan and store available stations.
- 4. Short press the '+' or '-' buttons to switch between saved FM stations.
- 5. Adjust volume using short presses of the '+' or '-' buttons.

6.5 Memory Card Playback

- 1. Insert a compatible memory card (e.g., microSD card) with audio files into the speaker's card slot.
- 2. Power on the speaker. It should automatically switch to Memory Card mode or you can short press the 'M' button to select it.
- 3. The speaker will begin playing audio files from the card.
- 4. Use the '+' and '-' buttons for track navigation (long press) and volume control (short press).

6.6 Answering Calls

When connected via Bluetooth to a smartphone:

- **To Answer a Call:** Short press the Play/Pause button (or Power button) when a call comes in.
- **To End a Call:** Short press the Play/Pause button (or Power button) during a call.
- **To Reject a Call:** Long press the Play/Pause button (or Power button) when a call comes in.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. For stubborn dirt, a slightly damp cloth can be used. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** While waterproof, avoid submerging the speaker for extended periods. Ensure all port covers are sealed tightly before exposure to water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not used for a long time.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker fully. Long press the Power button for 3-5 seconds.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Device Bluetooth off; Too far from device.	Ensure speaker is in Bluetooth pairing mode (flashing LED). Turn Bluetooth off/on on your device. Move speaker closer to device (within 10 meters).
No sound.	Volume too low; Paused playback; Incorrect mode.	Increase speaker and device volume. Press Play/Pause. Ensure correct mode (Bluetooth, FM, SD card).
FM radio reception is poor.	Weak signal; Environmental interference.	Move to an open area. Try auto-scanning again.

Problem	Possible Cause	Solution
Dual Pairing fails.	Speakers already connected to other devices; Too far apart.	Disconnect both speakers from any Bluetooth devices. Ensure they are close to each other (within 5 meters). Try dual pairing process again.

9. SPECIFICATIONS

Feature	Detail
Model Name	ASHATAu9z3gibkyn-12
Material	ABS, Fabric
Speaker Type	Portable Bluetooth Speaker
Connectivity Technology	Bluetooth, USB
Wireless Communication	Bluetooth
Bluetooth Range	Up to 32.8 Feet (10 meters)
Power Source	Battery Powered
Battery Capacity	500 Milliamp Hours
Input Voltage	3.7 Volts
Water Resistance Level	Waterproof
Product Dimensions	6.29"D x 3.93"W x 2.75"H
Item Weight	10.3 ounces
Control Method	Voice, Button
Audio Output Mode	Stereo
Recommended Uses	Indoor/Outdoor

10. WARRANTY AND SUPPORT

This ASHATA product comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact ASHATA customer support. If you encounter any issues or have questions regarding your speaker, please reach out to the retailer or manufacturer for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D21YVGR8>

More documents and user manuals: <https://manuals.plus/>