



Manuals.plus /

› Dryhsip /

› Dryhsip 8-in-1 Multi-Functional Hair Styler & Dryer Brush Set (Model WT-633) - User Manual

Dryhsip WT-633

Dryhsip 8-in-1 Multi-Functional Hair Styler & Dryer Brush Set (Model WT-633)

User Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance. Keep this manual for future reference.

- Do not use this appliance near water.
- Always unplug the appliance immediately after use.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.

For detailed safety warnings and legal disclaimers, please refer to the product's original packaging and documentation.

PRODUCT OVERVIEW

The Dryhsip 8-in-1 Multi-Functional Hair Styler & Dryer Brush Set (Model WT-633) is a versatile hair styling tool designed for fast drying, curling, volumizing, and straightening. It features high-speed negative ionic technology to reduce frizz and enhance shine, providing salon-quality results at home.

Included Attachments:

- Collecting Nozzle
- Smoothing Comb
- Double-Sided Mirror Comb
- Inner Buckle Combs (Round Brush)
- Curling Comb (Round Brush)
- Left Automatic Hair Suction Wand (Curling Barrel)
- Right Automatic Hair Suction Wand (Curling Barrel)
- Main Styler Unit (Hair Dryer)



Figure 1: The Dryhsip 8-in-1 Hair Styler with its main unit and all included attachments.

SETUP

Attaching and Detaching Accessories:

1. Ensure the main styler unit is unplugged and cool before attaching or detaching accessories.
2. To attach an accessory: Align the accessory with the main unit's connection point. Push the accessory firmly onto the unit until you hear a click, indicating it is securely locked in place.
3. To detach an accessory: Locate the release button on the main unit (often near the connection point). Press and hold the release button, then gently pull the accessory away from the main unit.



Figure 2: Visual guide for attaching/detaching accessories and other usage tips.

Your browser does not support the video tag.

Video 1: Demonstration of attaching and detaching various styling heads from the main unit.

OPERATING INSTRUCTIONS

Control Panel:


Adjust with ease


Customized for you.

 One click cold air

4 Temperature Levels


 Ordinary temperature (26°C)

 Low temperature(60°C)

 Middle temperature(80°C)

 High temperature(105°C)

3 Airflow Speed Settings

 High-Speed Airflow

 Medium-Speed Airflow

 Low-Speed Airflow


 On/Off



Figure 3: The control panel with power, fan speed, and temperature settings.

- **Power Button:** Located at the bottom of the control panel. Press to turn the device on or off.
- **Airflow Speed Settings:** Three levels (Low, Medium, High) indicated by LED lights. Press the fan icon button to cycle through speeds.
- **Temperature Settings:** Four levels (Ordinary, Low, Middle, High) indicated by LED lights. Press the thermometer icon button to cycle through temperatures.
- **Cool Air Button:** Press the snowflake icon button for a burst of cool air to set your style.

Using the Attachments:

Always ensure hair is towel-dried before styling with brushes or curling wands for optimal results and to prevent damage.

1. Hair Dryer (Main Unit with Collecting Nozzle)

Use the main unit with the Collecting Nozzle for focused, fast drying. This helps to prepare hair for styling or to quickly dry without additional shaping.

2X Faster Rapid Hair Drying

Fast Drying, For any hair type, anywhere.



40 s*
Short Hair



2 min*
Shoulder length



4 min*
Long hair

Figure 4: Fast drying with the main unit.

2. Smoothing Comb & Double-Sided Mirror Comb

These combs are designed to straighten and smooth hair while drying. The Double-Sided Mirror Comb offers different bristle types for varied smoothing effects. Use on damp hair, gliding the comb through sections from root to tip.



Figure 5: Smoothing Comb (left) and Double-Sided Mirror Comb (right).

Your browser does not support the video tag.

3. Inner Buckle Combs & Curling Comb (Round Brushes)

These round brushes are ideal for adding volume, waves, or soft curls. Use on damp hair, wrapping sections around the brush and directing airflow. The different sizes allow for varied curl tightness and volume.



Figure 6: Examples of round brush attachments for volumizing and curling.

4. Left & Right Automatic Hair Suction Wands (Curling Barrels)

These wands utilize Coanda technology to automatically wrap hair around the barrel, creating effortless curls. Use on damp hair. Hold a section of hair near the barrel, and the airflow will gently wrap it. Use the Left wand for curls on the left side of your head and the Right wand for curls on the right side, ensuring curls face away from your face.



Figure 7: Automatic curling wands in action.

Your browser does not support the video tag.

Video 3: Demonstration of the automatic curling function.

MAINTENANCE

Cleaning the Filter:

Regular cleaning of the air inlet filter is crucial for maintaining optimal performance and prolonging the life of your hair styler. A clogged filter can reduce airflow and cause overheating.

1. Ensure the appliance is unplugged and completely cool.
2. Locate the air inlet filter at the bottom of the main unit.
3. Gently twist or pull to remove the filter cover (refer to Figure 2 for visual guidance).
4. Use a soft brush or cloth to remove any accumulated dust, lint, or hair from the filter mesh.
5. Reattach the filter cover by aligning it and twisting or pushing until it clicks into place.

General Care:

- Wipe the exterior of the styler and attachments with a soft, damp cloth. Do not use abrasive cleaners.
- Store the styler and its attachments in a dry, safe place, preferably in its original packaging or a protective case, to prevent damage.
- Avoid wrapping the power cord tightly around the appliance, as this can cause damage over time. The 360° swivel cord is designed to prevent entanglement during use.

TROUBLESHOOTING

- **Appliance not turning on:**
 - Ensure the power cord is securely plugged into a functional electrical outlet.
 - Check if the power button is fully pressed.
 - Verify that the air inlet filter is not completely blocked, which can trigger a safety shutdown.
- **Attachments not working effectively (e.g., curling wands not gripping hair):**
 - Ensure the attachment is correctly and securely fastened to the main unit.
 - Make sure your hair is damp, not soaking wet or completely dry, for optimal performance with curling wands and brushes.
 - Check that the air inlet filter is clean and not obstructing airflow.
 - Ensure you are using the correct Left/Right curling wand for the respective side of your head.
- **Appliance overheating or emitting unusual odors:**
 - Immediately turn off and unplug the appliance.
 - Allow it to cool down completely.
 - Clean the air inlet filter thoroughly.
 - If the issue persists, discontinue use and contact customer support.

SPECIFICATIONS

Brand	Dryhsip
Model Number	WT-633
Product Dimensions	10.24 x 9.45 x 2.76 inches
Item Weight	4.41 Pounds
Material	Metal, Plastic
Wattage	1400 watts
Power Source	Corded Electric
First Available	June 27, 2024

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the warranty card included in your product packaging or contact Dryhsip customer service directly. Contact details can typically be found on the product packaging or the official Dryhsip website.

