

[Manuals.plus](#) /

› [HASBRO](#) /

› HASBRO Furby Tie-Dye Interactive Toy F8900 User Manual

HASBRO F8900

HASBRO Furby Tie-Dye Interactive Toy F8900 User Manual

Model: F8900 | Brand: HASBRO

1. INTRODUCTION

The HASBRO Furby Tie-Dye Interactive Toy (Model F8900) is a cheerful, colorful plush companion designed for children aged 6 and up. This animatronic toy responds to your voice and touch, offering over 600 different phrases, songs, and interactive play modes. Furby speaks both Japanese and Furbish, making it a unique and engaging friend. The more you interact with your Furby, the more its personality and abilities will develop.



Image: Furby Tie-Dye in its vibrant packaging, highlighting its interactive nature.

2. PACKAGE CONTENTS

Your Furby Tie-Dye Interactive Toy package includes:

- 1 x Furby Tie-Dye Interactive Toy
- 1 x Accessory String
- 1 x Brush
- 1 x Pizza Charm
- 12 x Bead Clips

Note: 4 AA alkaline batteries are required and sold separately.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of your Furby.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3.2 Initial Activation

To wake up your Furby and begin interaction:

- Press the heart button located on Furby's forehead.
- Say "Hey Furby!" when its ears glow green and it makes a sound.
- Furby will respond, indicating it's ready to play.



Image: Furby with glowing ears, ready for interaction.

4. OPERATING INSTRUCTIONS

Furby offers a variety of interactive modes and responses. Experiment with different interactions to discover all its features.

4.1 Voice Commands and Phrases

Speak these phrases to Furby to activate specific modes:

- **"Let's Dance"**: Furby will play music and dance.
- **"Mimic Me"**: Furby will repeat what you say in a funny voice.
- **"Tell My Fortune"**: Ask Furby a question, and it will give you a fun answer.
- **"Let's Relax"**: Furby will guide you through breathing exercises and offer encouraging words.
- **"Light Show"**: Furby's ears will light up in various colors, reacting to touch.

4.2 Physical Interactions

Furby responds to various physical touches:

- **Touching its Belly**: Furby will react with giggles or other sounds.
- **Patting its Head**: Furby will make happy sounds.
- **Shaking Furby**: It may react with playful sounds or movements.
- **Feeding the Pizza Charm**: Place the pizza charm near its mouth, and Furby will make eating sounds.



Image: A child playing with Furby, demonstrating its interactive nature.

4.3 Sleep Mode

To put Furby to sleep, lay it on its back. You will hear snoring and yawning sounds, indicating it has entered sleep mode.



Image: Furby in sleep mode, with 'Zzz' graphic.

4.4 Customization with Accessories

Use the included accessories to personalize your Furby. Brush its fur with the comb and attach the bead clips and pizza charm to its fur or ears for a unique look.



Image: Furby with accessories, demonstrating customization.

5. CARE AND MAINTENANCE

- Wipe the surface of your Furby gently with a soft, dry cloth.
- Do not immerse Furby in water or any other liquids.
- Avoid exposing Furby to extreme temperatures or direct sunlight for prolonged periods.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

6.1 Furby is not responding or turning on.

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AA alkaline batteries.
- Ensure the heart button has been pressed and you've said "Hey Furby!" clearly.

6.2 Furby's movements or sounds are erratic.

- Replace the batteries with fresh ones. Low battery power can affect performance.
- Ensure Furby is on a flat, stable surface if it's meant to move.

6.3 Furby is not connecting to the internet or other devices.

Note: Furby is designed as a standalone interactive toy and cannot connect to the internet or external devices.

7. SPECIFICATIONS

Feature	Detail
Brand	HASBRO
Model Number	F8900
GTIN (UPC)	195166273051
Product Category	Interactive Plush Toy
Color	Tie-Dye
Minimum Age	6 years (72 months)
Maximum Age	100 years (1200 months)
Dimensions (L x W x H)	22.8 cm x 12.7 cm x 22.8 cm
Material	Plastic
Batteries Required	Yes
Number of Batteries	4 AAA batteries (sold separately)

8. SAFETY WARNINGS

- **Choking Hazard:** Small parts. Not for children under 3 years.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove exhausted batteries from the toy. Do not short-circuit the supply terminals.
- **Product Variation:** The product's appearance and specifications may vary slightly from the images and illustrations on the packaging.
- **No Internet/Device Connection:** This Furby model cannot connect to the internet or other electronic devices.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official HASBRO website. Keep your purchase receipt as proof of purchase.

10. OFFICIAL PRODUCT VIDEO

Watch this video for a demonstration of Furby's interactive features and play modes.

Your browser does not support the video tag.

Video: A demonstration of the Furby's interactive features and play modes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question