

- Manuals.plus /
- > [Arofa](#) /
 - > Arofa Touchless Kitchen Faucet with Pull Down Sprayer - Model A200-08-03BN User Manual

Arofa A200-08-03BN

Arofa Touchless Kitchen Faucet with Pull Down Sprayer

MODEL: A200-08-03BN USER MANUAL

Introduction	Setup	Operating	Maintenance Warranty & Support	Troubleshooting	Specifications
--------------	-------	-----------	--------------------------------------	-----------------	----------------

1. Introduction

The Arofa Touchless Kitchen Faucet with Pull Down Sprayer (Model A200-08-03BN) combines modern design with advanced functionality for a hygienic and efficient kitchen experience. Featuring motion sensor technology, a versatile pull-down sprayer with multiple modes, and durable construction, this faucet is designed for ease of use and long-lasting performance. This manual provides detailed instructions for installation, operation, maintenance, and troubleshooting to ensure optimal performance of your new faucet.



Image: Arofa Touchless Kitchen Faucet installed in a modern kitchen setting.

2. Setup

Before beginning installation, ensure all necessary parts are present and accounted for. The package should include the Arofa Kitchen Faucet, Deck Plate, Handle, Installation Hardware, and this Instruction Manual.

2.1 Pre-Installation Check

- Verify all components listed in the packing list are included.
- Ensure you have the necessary tools for installation (e.g., adjustable wrench, screwdriver, plumber's putty).


2.2 Hole Configuration

This faucet is suitable for both single-hole and three-hole sinks. For three-hole installations, use the included deck plate to cover the unused holes.

2.3 Connections and Power

- Utilize the one-click easy connect system for quick and secure hose connections, eliminating the need for complex tools.
- The touchless function is powered by 4 AA batteries (not included). Ensure batteries are correctly installed for optimal performance. These batteries provide long-lasting power, supporting approximately 100,000 sensing cycles (about 2 years).

Effortless Installation in 10 Minutes

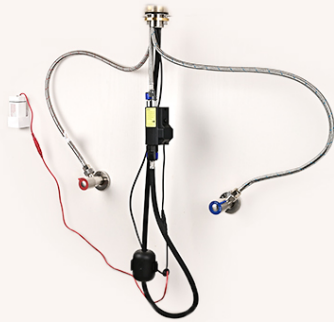

1



2



3



4



5



6



7



8

Image: Visual guide for effortless installation in 10 minutes.

One-Click Easy Connect

Featuring parts that can be quickly and securely connected with just one click, eliminating the need for complex tools or professional assistance.



Image: One-click easy connect system for quick hose attachment.

Safer & long battery life

No need to plug in, more safer to use. Only 4 AA batteries are required to support 100,000 sensing (About 2 years).



Image: Battery compartment for long-lasting touchless operation.

3. Operating Instructions

3.1 Touchless Operation

- To activate the water flow, simply wave your hand near the side-mounted motion sensor. The water will turn on or off within 0.5 seconds.
- The faucet is designed to automatically turn off after 2.5 minutes of inactivity to prevent water waste.
- A low battery reminder feature is integrated to alert you when batteries need replacement.



Hygienic Touchless Operation

Enjoy a cleaner and healthier kitchen with a faucet that activates with a simple wave of your hand.

Image: Activating the touchless faucet with a simple hand wave.



Hygienic Touchless Operation

- 0.5s Quick Respond Sensor
- 2.5 Mins Auto Pause Water
- 9.8" Wider Sensing Area
- Low Battery Reminder

Image: Features of the hygienic touchless operation.

3.2 Manual Operation

Use the single lever handle to manually control water flow and temperature. Push the handle back for cold water and forward for hot water. Adjust the height of the handle to control flow intensity.

3.3 Multifunctional Sprayer

The pull-down sprayer offers three distinct modes to suit various tasks:

- **Stream Mode:** Provides a steady, aerated flow, ideal for quickly filling pots and containers.
- **Spray Mode:** Delivers a powerful, wide spray pattern, perfect for rinsing dishes, fruits, and vegetables efficiently.
- **Pause Mode:** Temporarily stops water flow, useful for preventing splashing when moving the sprayer between tasks or outside the sink.



Stream Mode

For filling containers



Spray Mode

For quick rinsing

Image: Demonstrating stream and spray modes of the multifunctional sprayer.



Stream Mode
For filling containers



Spray Mode
For quick rinsing

Image: Versatility of stream and spray modes for various kitchen tasks.

3.4 Extended Reach and Retraction

The pull-out hose and 360° swivel design provide unmatched flexibility, allowing you to reach all corners of your sink and beyond. The integrated gravity ball system ensures the spray head retracts quickly and smoothly back into place after each use.

Extended pull-out hose Wider using range



Image: Faucet with extended pull-out hose for wider cleaning range.



Extended pull-out hose

Meet your needs to wash every
corner

Image: Extended pull-out hose for comprehensive cleaning.

3.5 Normal Mode Switch

A dedicated button allows you to switch off the touchless mode, enabling manual operation even if the batteries are depleted. This ensures continuous functionality.



Image: Switch to normal mode for manual operation.

4. Maintenance

Proper care and maintenance will ensure the longevity and optimal performance of your Arofa kitchen faucet.

4.1 Cleaning

- The brushed nickel finish is spot-resistant and corrosion-resistant. To clean, wipe with a soft, damp cloth and mild soap.
- Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- The removable water-saving aerator can be easily detached and cleaned to prevent mineral buildup and maintain consistent water flow.



Image: Advanced drip-free technology ensures no leaks and drips.

4.2 Durability and Materials

- Constructed from premium food-grade materials, including PEX inner hoses that are odorless and prevent leaks.
- Metal connectors and ceramic valves are rigorously tested to ensure durability for up to 10 years without leaks.
- The faucet is Lead-Free Certified, meeting NSF/ANSI 61 & 372 standards, ensuring safe water for drinking and cooking.

5. Troubleshooting

If you encounter any issues with your Arofa Touchless Kitchen Faucet, please refer to the following common solutions:

Problem	Possible Cause	Solution
No water flow	Water supply valves closed; depleted batteries for motion sensor.	Ensure hot and cold water supply valves are fully open. Check and replace batteries if necessary. Try switching to manual mode.
Low water pressure	Kinked water lines; clogged aerator.	Inspect water lines under the sink for kinks or obstructions. Remove and clean the aerator to clear any debris or mineral buildup.
Faucet is leaking	Loose connections; worn ceramic valve.	Check and tighten all hose connections. If leaks persist, contact customer support for assistance with ceramic valve inspection or replacement.
Motion sensor unresponsive or overly sensitive	Sensor obstructed or dirty; low battery; environmental interference.	Clean the sensor area. Replace batteries. Ensure no objects are constantly in the sensor's detection range. Switch to normal mode if issues persist.

6. Specifications

Feature	Detail
---------	--------

Feature	Detail
Brand	Arofa
Model Name	A200
Model Number	A200-08-03BN
Color	Touchless Brushed Nickel
Material	Stainless Steel
Mounting Type	Deck Mount (1-Hole or 3-Hole with Deck Plate Covering)
Number of Handles	1 (Lever)
Flow Rate	1.8 Gallons Per Minute
Spout Design	Pulldown
Spout Height	8.5 Inches
Spout Reach	8.5 Inches
Item Dimensions (D x W x H)	8.5"D x 10"W x 15.7"H
Special Features	360° Swivel, Easy to Install, Lead Free, Leak Resistant, Water Saving System, Advanced Motion Sensor

PRODUCT DIMENSIONS



Hole Installation



Deck Plate



Image: Product dimensions and installation options.

7. Warranty & Support

7.1 Warranty Information

The Arofa Touchless Kitchen Faucet comes with a limited warranty. Our products are built with reliable quality, featuring metal connectors and ceramic valves tested to last up to 10 years without leaks. Additionally, a 5-year warranty is provided for peace of mind.



Image: Arofa quality and warranty details.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact our customer service team. We offer 24-hour customer support to assist you.

- **24-Hour Customer Service:** Available for all your inquiries.
- **30-Day Return Policy:** For hassle-free returns.



Image: Arofa customer service and support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D226LJ95>

More documents and user manuals: <https://manuals.plus/>