

[Manuals.plus](#) /

> [EASYERA](#) /

> EASYERA IM-BS261G Portable Countertop Ice Maker Instruction Manual

EASYERA IM-BS261G

EASYERA IM-BS261G Portable Countertop Ice Maker Instruction Manual

Model: IM-BS261G | Brand: EASYERA

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, explosion, electric shock, or injury when using your ice maker, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not use mechanical devices to defrost ice maker. Do not puncture refrigerant tubing.
- This appliance must be properly grounded.
- Do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not use for other than intended purpose.
- Unplug the ice maker from the outlet before cleaning or making any repairs.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use water that is microbiologically unsafe or of unknown quality.
- Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

PRODUCT OVERVIEW

The EASYERA IM-BS261G is a portable countertop ice maker designed for convenience and efficiency. It produces bullet-shaped ice cubes in two sizes.

Key Features:

- **Fast Ice Production:** Produces 9 ice cubes in approximately 6 minutes, up to 26 lbs in 24 hours.

- **Two Ice Cube Sizes:** Offers small and large bullet-shaped ice cubes for various beverage needs.
- **Self-Cleaning Function:** Easy to activate self-cleaning mode for hassle-free maintenance.
- **Portable Design:** Compact size with a sturdy handle for easy transport. Ideal for kitchens, parties, RVs, and bars.
- **Quiet Operation:** Operates at a low noise level (below 35 dB).
- **Indicator Lights:** Features "Add Water" and "Ice Full" indicators for user convenience.

Components:

- Ice Maker Unit
- Ice Scoop
- Ice Basket
- Ice Bags (for storage)



Image: The EASYERA IM-BS261G Portable Countertop Ice Maker with its transparent lid, showcasing the ice-making process.

SETUP

1. **Unpack:** Carefully remove the ice maker from its packaging. Remove all packaging materials, including any tape or labels.
2. **Placement:** Place the ice maker on a flat, stable surface away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
3. **Clean:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance" section for detailed cleaning instructions.

4. **Power Connection:** Plug the ice maker into a grounded electrical outlet.
5. **Initial Water Fill:** Open the lid and fill the water reservoir with potable water up to the MAX fill line. Do not overfill.

OPERATING INSTRUCTIONS

Making Ice:

1. Ensure the water reservoir is filled to the MAX line.
2. Press the **ON/OFF** button to start the ice-making cycle. The Power indicator light will illuminate.
3. Press the **SELECT** button to choose your desired ice cube size: 'S' for small or 'L' for large. The corresponding indicator light will illuminate.
4. The ice maker will begin producing ice. The first few cycles may produce smaller or irregularly shaped ice cubes. This is normal.
5. When the ice basket is full, the "Ice Full" indicator light will illuminate, and the ice maker will pause operation. Remove ice from the basket to resume.
6. When the water level is low, the "Add Water" indicator light will illuminate. Add more water to the reservoir to continue ice production.



EASYERA PORTABLE ICE MAKER

Image: Visual representation of the ice maker's rapid production, yielding 9 ice cubes in just 6 minutes.

Self-Cleaning Function:

The ice maker features a convenient self-cleaning function to maintain hygiene.

1. Ensure the ice maker is empty of ice and water.
2. Fill the water reservoir with clean water up to the MAX line.
3. Press and hold the **ON/OFF** button for 5 seconds to activate the self-cleaning cycle. The "Clean" indicator light will illuminate.
4. The cleaning cycle will run for approximately 30 minutes.
5. Once the cycle is complete, drain the water from the unit by removing the drain plug located at the bottom.
6. Rinse the interior with clean water and drain again.



Image: The ice maker undergoing its efficient 30-minute self-cleaning process, indicated by the internal water circulation.

Storing Ice:

The ice maker is not a freezer. Ice cubes will melt if left in the basket for an extended period. Use the provided ice bags and scoop to transfer ice cubes to your freezer for long-term storage.

MAINTENANCE

Regular Cleaning:

- Clean the interior of the ice maker regularly, especially if it is not used frequently.
- Use a soft cloth and mild detergent to wipe down surfaces.
- Rinse thoroughly with clean water.
- Ensure the unit is completely dry before storing or reusing.

Draining Water:

Always drain any remaining water from the reservoir when the ice maker is not in use or before moving it. The drain plug is located at the bottom of the unit.

Storage:

When storing the ice maker for an extended period, ensure it is clean and dry. Store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not working.	No power.	Check if the power cord is properly plugged in. Ensure the outlet is functional.
"Add Water" indicator is on.	Water reservoir is empty or low.	Fill the water reservoir with potable water up to the MAX line.
"Ice Full" indicator is on.	Ice basket is full.	Remove ice from the basket.
Ice cubes are too small or thin.	First few cycles, or water temperature is too high.	Discard the first few batches. Use colder water for faster and thicker ice.
Unusual noise during operation.	Normal operation sounds (water pump, ice dropping).	This is usually normal. If the noise is excessive or unusual, contact customer support.

SPECIFICATIONS

- **Model Name:** IM-BS261G
- **Product Dimensions:** 8.7"D x 11.6"W x 11.4"H
- **Capacity:** 12 Liters (Ice production up to 26 lbs/24 hrs)
- **Wattage:** 150 watts
- **Voltage:** 220 Volts
- **Refrigerant:** R600a
- **Material:** Plastic
- **Item Weight:** 14.42 pounds
- **UPC:** 810089906090



Image: Diagram showing the dimensions of the EASYERA IM-BS261G Portable Countertop Ice Maker: 8.7"D x 11.6"W x 11.4"H.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official overview of the EASYERA Portable Ice Maker, highlighting its features and ease of use.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided in your product packaging or visit the official EASYERA website. Keep your purchase receipt for warranty claims.

© 2024 EASYERA. All rights reserved.