

- Manuals.plus /
- > [ECONTROLLY](#) /
 - > ECONTROLLY RC40A18S-SM Replacement Remote Control User Manual

ECONTROLLY RC40A18S

User Manual

ECONTROLLY RC40A18S-SM REPLACEMENT REMOTE CONTROL

Compatible with RCA Smart TV Models: RC32S19T2-SM, RC40A16S-SM, RC40A18S-SM

Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your ECONTROLLY RC40A18S-SM Replacement Remote Control. Designed to function as a direct replacement for various RCA Smart TV models, this remote offers a seamless user experience without the need for complex programming.





Figure 1: Front view of the RC40A18S-SM Replacement Remote Control, showing all buttons and their layout.

Setup

Battery Installation

The RC40A18S-SM remote control requires two AAA 1.5V alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Battery compartment with two AAA batteries installed. Ensure correct polarity.

Initial Use

This replacement remote control is designed to work immediately with compatible RCA Smart TV models without the need for programming. Once batteries are installed, point the remote towards your television and begin operation.

Operating Instructions

The RC40A18S-SM remote control features a standard layout for intuitive navigation and control of your RCA Smart TV. Below is a guide to common button functions:

- **POWER** (): Turns the television on or off.
- **MUTE** (): Mutes or unmutes the television audio.
- **0-9 (Number Buttons)**: Directly input channel numbers or other numerical selections.
- **VOL +/-**: Increases or decreases the volume level.
- **CH +/-**: Changes the television channel up or down.
- **MENU**: Accesses the main menu of the television.
- **SOURCE**: Selects the input source (e.g., HDMI 1, AV, TV).
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **ENTER**: Confirms a selection or action.
- **EXIT**: Exits the current menu or screen.
- **INFO**: Displays information about the current program or input.
- **MEDIA**: Accesses media playback functions.
- **HOME**: Returns to the television's home screen or smart TV portal.
- **NETFLIX**: Direct access button for the Netflix application.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next)**: Controls media playback.
- **REC (Record)**: Initiates recording if supported by the television and connected device.



Figure 3: Angled view of the remote control, showing the button layout from a different perspective.

Maintenance

Cleaning

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning agents, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases. Always use new, high-quality

alkaline AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

Troubleshooting

If you experience issues with your RC40A18S-SM remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is unresponsive or intermittent.	Low or dead batteries. Incorrect battery polarity. Obstruction between remote and TV. Remote sensor on TV is blocked.	Replace batteries with new, brand-new alkaline AAA batteries. Ensure batteries are inserted with correct polarity (+/-). Remove any objects blocking the line of sight between the remote and the TV's IR sensor. Ensure the TV's IR sensor is not blocked.
Certain buttons do not work.	Dirt or debris under the button. Remote control malfunction.	Clean the remote control thoroughly. If the issue persists, the remote may be faulty.
Remote does not control the TV.	Incompatible TV model.	Verify that your TV model is listed as compatible. This remote is a replacement for specific RCA Smart TV models.

Important Note: If the remote does not work, please ensure you are using **BRAND NEW ALKALINE BATTERIES**, not rechargeable ones. Also, confirm that nothing is blocking the front of your television where the infrared receiver is located.

Specifications

Feature	Detail
Model Number	RC40A18S
Compatible Models	RC32S19T2-SM, RC40A16S-SM, RC40A18S-SM
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Material	ABS
Color	Black
Product Dimensions	6 x 3 x 0.5 inches (approx. 15.2 x 7.6 x 1.3 cm)
Item Weight	2 ounces (approx. 56.7 grams)
Special Feature	Ergonomic design



21 cm / 8.27 in



Figure 4: Dimensions of the RC40A18S-SM remote control.

Support

For further assistance or if you have questions regarding the compatibility or functionality of your ECONTROLLY RC40A18S-SM Replacement Remote Control, please contact the seller or manufacturer directly. Providing a picture of your original remote control or TV model number can help expedite support.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question