

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Juskys](#) /
- › [Juskys Savannah Gas Barbecue Instruction Manual - Model 22022](#)

Juskys 22022

Juskys Savannah Gas Barbecue Instruction Manual

Model: 22022

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Juskys Savannah Gas Barbecue. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new gas grill. Please read all instructions carefully before use and retain this manual for future reference.

The Juskys Savannah Gas Barbecue is designed for outdoor cooking, featuring four powerful main burners and an additional side burner, providing versatile cooking options. Its robust construction and user-friendly design ensure a satisfying grilling experience.



Image 1.1: The Juskys Savannah Gas Barbecue, highlighting its powerful burner system and spacious cooking area.

2. SAFETY INFORMATION

Your safety is paramount. Failure to follow these instructions could result in fire, explosion, or serious injury.

- **Outdoor Use Only:** This gas barbecue is for outdoor use only. Do not operate indoors or in enclosed spaces.

- **Gas Leak Check:** Always check for gas leaks before each use and after replacing the gas cylinder. Use a soapy water solution; never use an open flame.
- **Ventilation:** Ensure adequate ventilation around the barbecue. Do not obstruct ventilation openings.
- **Keep Away from Combustibles:** Maintain a safe distance from combustible materials, walls, and other structures.
- **Children and Pets:** Keep children and pets away from the hot barbecue.
- **Gas Cylinder:** Use only Butane or Propane gas cylinders with a pressure regulator set to 50 mbar. Store gas cylinders upright and away from heat sources.
- **Hot Surfaces:** The barbecue surfaces become very hot during operation. Use heat-resistant gloves and avoid direct contact.
- **Never Leave Unattended:** Do not leave the barbecue unattended while in use.
- **Proper Assembly:** Ensure all components are correctly assembled and tightened according to the instructions.



Image 2.1: Secure storage for the gas bottle within the barbecue cabinet, designed for safety and stability.

3. SETUP AND ASSEMBLY

Assembly of the Juskys Savannah Gas Barbecue requires careful attention to detail. It is recommended to have two people for assembly. Ensure you have all parts listed in the packing list before starting.

3.1 Unpacking and Part Inspection

- Carefully remove all components from the packaging.
- Check the parts against the provided parts list to ensure nothing is missing or damaged.
- Remove any protective films or packaging materials.

3.2 Assembly Steps (General Guidance)

While specific steps are detailed in the included assembly guide, the general sequence involves:

1. Assemble the base frame and attach the wheels.
2. Mount the main burner housing onto the base.
3. Install the side shelves and side burner unit.
4. Place the main cooking grates and warming rack.
5. Attach the lid with the integrated thermometer.
6. Connect the gas hose and regulator to the barbecue's gas inlet.

Note: The assembly process is designed to be straightforward, but always refer to the detailed diagrams and instructions provided in the separate assembly manual for precise steps and fastener usage.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your gas barbecue.

4.1 Connecting the Gas Bottle

1. Ensure all burner control knobs are in the 'OFF' position.
2. Connect the gas regulator to the gas bottle valve. Tighten securely.
3. Connect the other end of the gas hose to the barbecue's gas inlet.
4. Perform a gas leak test: Apply a soapy water solution to all connections. Bubbles indicate a leak. If a leak is detected, turn off the gas, tighten connections, and retest. Do not use the barbecue if a leak persists.

4.2 Ignition Procedure

1. Open the gas supply valve on the gas bottle.
2. Push and turn one of the main burner control knobs to the 'HIGH' position.
3. Press the electronic piezo ignition button (usually labeled 'IGNITOR') repeatedly until the burner ignites. You should hear a clicking sound and see a flame.
4. If the burner does not ignite within 5 seconds, turn the control knob to 'OFF', wait 5 minutes for gas to disperse, then repeat the ignition procedure.
5. Once the first burner is lit, you can ignite other main burners by simply turning their control knobs to 'HIGH'.
6. For the side burner, follow the same push-and-turn ignition procedure using its dedicated control knob and ignitor.

4.3 Temperature Control and Cooking

- **Preheating:** Close the lid and preheat the barbecue on high for 10-15 minutes to reach the desired cooking temperature. The integrated thermometer on the lid will display the internal temperature.
- **Burner Adjustment:** Each burner has an independent control knob, allowing precise temperature adjustment for direct or indirect grilling.
- **Warming Rack:** Use the upper warming rack to keep cooked food warm or for gentle cooking of delicate items.



FÜR UNVERGESSLICHE GRILLMOMENTE

Image 4.1: Key operational features including the lid thermometer for temperature monitoring, the versatile side burner, and the accessible grease drip tray.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your barbecue and ensure optimal performance.

5.1 After Each Use

- **Burn-off:** After cooking, turn all burners to high for 5-10 minutes with the lid closed to burn off any food residue.
- **Grates:** Once cooled, brush the cast iron cooking grates with a stiff wire brush.
- **Grease Tray:** Empty and clean the grease drip tray regularly to prevent grease fires.

5.2 Periodic Cleaning

- **Burner Tubes:** Periodically inspect burner ports for blockages (e.g., spider webs). Clean with a wire brush or pipe cleaner if necessary.
- **Exterior Surfaces:** Clean exterior surfaces with a mild detergent and a soft cloth. Avoid abrasive cleaners.
- **Storage:** When not in use, especially during off-season, store the barbecue in a dry, protected area. Using a protective cover (such as the included cover) is highly recommended.



**Inklusive
Abdeckplane**



**Flexibel
dank der Räder**



**Großzügige
Ablageflächen**

Image 5.1: The Juskys Savannah Gas Barbecue shown with its protective cover, emphasizing ease of storage and mobility thanks to its wheels.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your gas barbecue.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply, clogged burner port, faulty igniter, loose gas connection.	Check gas bottle, ensure valve is open. Clean burner ports. Check igniter electrode and wire. Tighten gas connections and perform leak test.
Low flame or uneven heat	Low gas in bottle, clogged burner ports, regulator issue.	Replace gas bottle if empty. Clean burner ports. Check regulator for proper function.
Flare-ups	Excessive fat accumulation, high heat.	Clean grease tray and cooking grates regularly. Reduce heat. Trim excess fat from food.
Gas smell	Gas leak.	Immediately turn off gas supply. Perform a leak test with soapy water. Do not use until leak is resolved.

If you are unable to resolve an issue using these troubleshooting steps, please contact customer support.

7. SPECIFICATIONS

Key technical specifications for the Juskys Savannah Gas Barbecue:

Feature	Specification
Model Number	22022
Dimensions (L x W x H)	133 x 57 x 114 cm
Weight	25 kg
Main Burners	4 x 3 kW
Side Burner	1 x 2.5 kW
Total Power Output	14.5 kW
Cooking Surface Area	71 x 42 cm
Material	Powder-coated steel, Cast iron grates
Fuel Type	Butane / Propane Gas
Gas Pressure	50 mbar
Ignition Type	Piezo Electric
Special Features	Side burner, Protective cover, Lid with window and thermometer, Side shelves, Cabinet for gas bottle



Image 7.1: Detailed diagram illustrating the dimensions and technical specifications of the barbecue.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical assistance, replacement parts, or have any questions not covered in this manual, please contact Juskys customer support or your authorized dealer.

Please have your model number (22022) and purchase details ready when contacting support.