

[Manuals.plus](#) /

> [Maclean](#) /

> Maclean MC-972 TV Floor Stand User Manual

Maclean MC-972

Maclean MC-972 TV Floor Stand User Manual

Model: MC-972 | Brand: Maclean

1. PRODUCT OVERVIEW

The Maclean MC-972 is a high-quality freestanding TV floor stand designed to securely mount LED, LCD, OLED, and QLED televisions and monitors. It supports screens ranging from 23 to 55 inches and weighing up to 35 kg. This versatile stand features a robust construction, a convenient integrated shelf for media devices, and an efficient cable management system to maintain a tidy appearance.

Its powder-coated finish ensures durability and resistance against corrosion and scratches. The stand is compatible with various TV brands and VESA mounting patterns, offering a practical and stable solution for your home entertainment or office setup.





Figure 1: Front view of the Maclean MC-972 TV Floor Stand.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Failure to follow these instructions may result in property damage, serious injury, or death. If you do not understand these instructions, or have doubts about the safety of the installation, please contact a qualified professional.

- Do not exceed the maximum load capacity of 35 kg (77 lbs) for the TV and 10 kg (22 lbs) for the shelf.
- Ensure the stand is placed on a stable, level surface to prevent tipping.
- Keep children and pets away from the stand during assembly.
- Do not attempt to modify the product. Any modifications will void the warranty and may cause product failure.
- Check all connections periodically to ensure they remain secure.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- TV Floor Stand (Base, Main Column, TV Mounting Bracket)
- Integrated Media Shelf
- Mounting Hardware Kit (various screws, washers, spacers, and tools)
- Installation Manual

4. SPECIFICATIONS

Feature	Specification
Model	MC-972
Brand	Maclean
Material	Alloy Steel
Mount Type	Floor Mount
Movement Type	Tilting
Color	Black
Screen Size Compatibility	23" - 55"
Maximum TV Load Capacity	35 kg (77 lbs)
Maximum Shelf Load Capacity	10 kg (22 lbs)
VESA Compatibility	100x100, 100x200, 200x100, 200x200, 300x200, 400x200, 300x300, 400x300, 400x400 mm
Adjustable Tilt Angle	+6° to -6°
Adjustable Screen Height	868/908/948/988/1028/1068 mm (6 levels)
Total Height	1283 mm
Base Dimensions (L x W)	700 x 350 mm
Shelf Dimensions (L x W)	380 x 190 mm

Dimensions (mm)

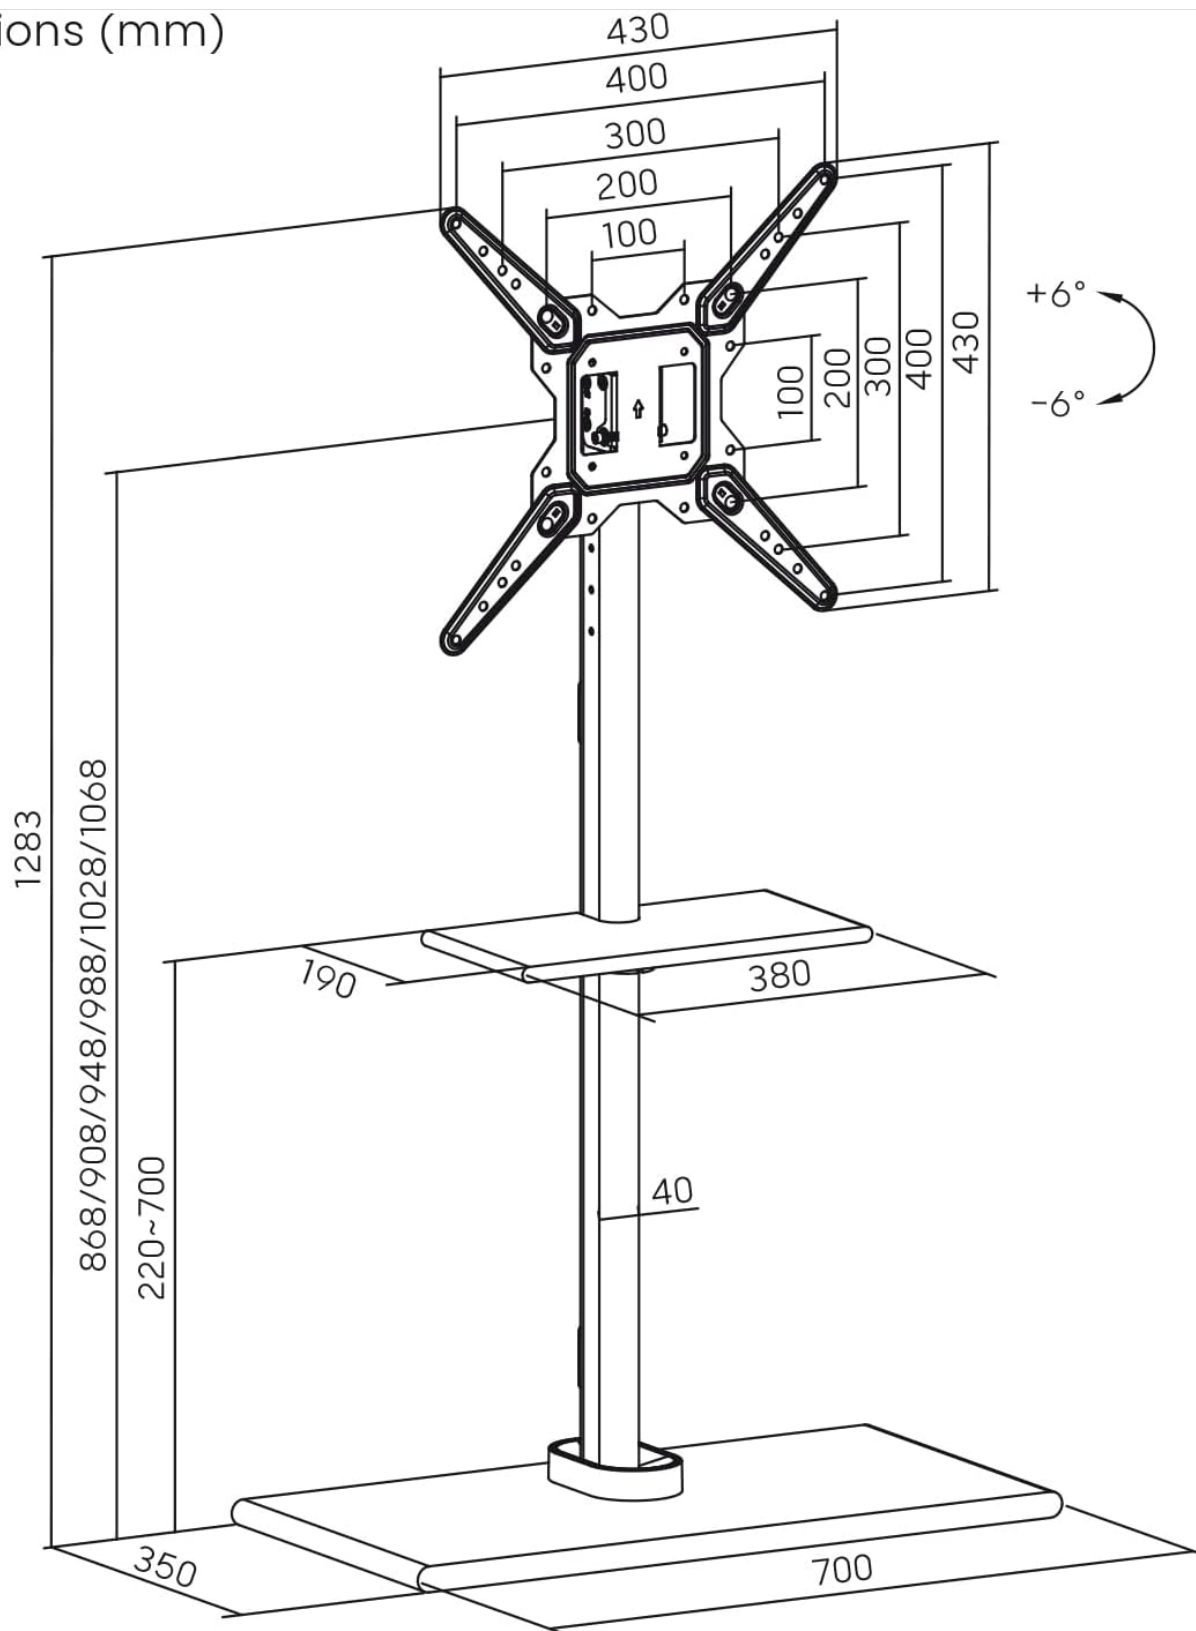


Figure 2: Detailed dimensions of the Maclean MC-972 TV Floor Stand.

5. SETUP AND INSTALLATION

Follow these steps carefully to assemble your Maclean MC-972 TV Floor Stand. It is recommended to have a second person assist during certain stages of assembly, especially when mounting the TV.

1. Assemble the Base and Main Column:

Attach the main vertical column to the sturdy base plate using the provided screws and tools. Ensure all connections are tightened securely to provide a stable foundation for your TV.





Figure 3: Side view illustrating the main column and base assembly.

2. Install the Media Shelf:

Slide the integrated media shelf onto the main column at your desired height. Secure it in place using the designated fasteners. This shelf is designed to hold media players, gaming consoles, or other accessories.

3. Attach the TV Mounting Bracket:

Secure the TV mounting bracket to the main column. This bracket allows for height adjustment and tilting of the television. Refer to the included installation manual for specific screw types and attachment points.

4. Prepare Your TV for Mounting:

Identify the VESA mounting holes on the back of your television. Attach the VESA adapter plates (if necessary, depending on your TV's VESA pattern) and the TV mounting arms to the back of your TV using the appropriate screws and spacers from the hardware kit. Ensure the screws are not too long, which could damage internal components.

5. Mount the TV onto the Stand:

With assistance, carefully lift your television and hook the TV mounting arms onto the bracket attached to the stand's main column. Secure the TV in place using the locking mechanisms or safety screws provided. Double-check that the TV is firmly seated and cannot accidentally dislodge.

6. Cable Management:

Utilize the integrated cable management system to route and conceal power cords and AV cables. This helps maintain a clean and organized appearance and prevents tripping hazards.

6. OPERATING INSTRUCTIONS

The Maclean MC-972 TV Floor Stand offers adjustable features for optimal viewing comfort.

- **Adjusting TV Height:**

The TV mounting bracket allows for 6 levels of height adjustment. To change the height, carefully lift the TV slightly (with assistance if needed), disengage the locking mechanism, adjust to the desired height, and re-engage the lock. Ensure the TV is level after adjustment.

- **Adjusting TV Tilt:**

The TV can be tilted from +6° to -6°. Loosen the tilt adjustment knobs or screws on the side of the TV mounting bracket, adjust the screen to the desired angle, and then securely tighten the knobs/screws to lock the tilt in place.

- **Using the Media Shelf:**

Place your media devices, such as Blu-ray players, soundbars, or gaming consoles, on the integrated shelf. Ensure the total weight on the shelf does not exceed 10 kg (22 lbs).

7. MAINTENANCE

Regular maintenance will help ensure the longevity and safe operation of your TV floor stand.

- **Cleaning:**

Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild detergent can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents that may damage the powder-coated finish.

- **Inspections:**

Periodically check all screws and connections to ensure they are tight and secure. Loose connections can compromise stability and safety.

• **Weight Limits:**

Always adhere to the specified maximum weight capacities for both the TV and the media shelf. Overloading can lead to structural failure.

8. TROUBLESHOOTING

If you encounter any issues with your Maclean MC-972 TV Floor Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose connections; uneven floor; overloaded.	Ensure all screws are tightened. Move the stand to a level surface. Verify TV and shelf weights are within limits.
TV does not fit the mounting bracket.	Incorrect VESA pattern; TV size outside range.	Check your TV's VESA pattern against the stand's specifications. Confirm your TV's screen size is between 23" and 55".
Difficulty adjusting TV height or tilt.	Locking mechanisms engaged; screws too tight.	Ensure all locking mechanisms are disengaged before attempting adjustment. Loosen adjustment screws slightly, adjust, then re-tighten.

9. WARRANTY AND SUPPORT

Maclean products are designed for durability and performance. For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, visit the [Maclean Brand Store](#) or contact your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D22M67WF>

More documents and user manuals: <https://manuals.plus/>