

[Manuals.plus](#) /

› [Furmax](#) /

› Furmax Vanity Desk User Manual

Furmax F24VN02430474

Furmax Vanity Desk with LED Lighted Mirror & Power Outlet

Model: F24VN02430474

Brand: Furmax

INTRODUCTION

The Furmax Vanity Desk is designed to provide a functional and stylish space for your daily beauty routine. Featuring an LED lighted mirror with adjustable lighting, ample storage, and integrated power outlets, this vanity desk offers convenience and organization for your bedroom or dressing room.



Figure 1: Furmax Vanity Desk in a bedroom setting.

KEY FEATURES

- **LED Lighted Mirror:** Equipped with 10 LED bulbs and a clear mirror, offering 3 adjustable light settings (Daylight white, Warm white, Natural white) to suit various makeup needs and scenes.
- **Ample Storage:** Features 4 spacious drawers and 3 open shelves, providing organized storage for cosmetics, jewelry, perfumes, and other beauty essentials.
- **Integrated Power Outlet:** Includes 2 AC outlets and 2 USB ports for convenient charging of mobile devices and powering beauty tools.
- **Hair Dryer Rack:** A dedicated rack for easy access and storage of your hair dryer.
- **Durable Construction:** Made from high-quality solid wood with strong load-bearing capacity, ensuring stability and longevity. The surface is smooth and easy to clean.
- **Stylish Design:** A beautiful and practical design that complements various room decors.



Figure 2: The LED mirror offers three distinct lighting colors for optimal makeup application.



Figure 3: Convenient power strip and hair dryer rack for easy access to tools and charging.

SETUP AND ASSEMBLY

This vanity desk requires assembly. Please follow the included instructions carefully to ensure proper and safe construction. It is recommended to have two people for assembly.

Before You Begin:

- Unpack all components and verify against the parts list in your assembly manual.
- Ensure you have all necessary tools (e.g., screwdriver, hammer).
- Clear a spacious area for assembly to prevent damage to components or your flooring.
- Familiarize yourself with the hardware. Each type of screw, dowel, and bracket is typically labeled.



Figure 4: Product dimensions for planning your space.

Important Assembly Notes:

- Follow the assembly instructions carefully. Improperly assembled furniture can pose stability risks.
- Ensure that all parts are securely fastened before using the vanity desk.
- Do not overtighten screws, as this may damage the wood.
- If you encounter missing holes or misaligned parts, refer to the troubleshooting section or contact customer support.

OPERATING INSTRUCTIONS

LED Lighted Mirror:

The LED lights are controlled by a power button located on the mirror frame or an inline switch on the power cord. Press the button to cycle through the three light settings: Daylight white, Warm white, and Natural white. Press and hold the button to adjust the brightness of the lights.

Power Outlets and USB Ports:

The vanity desk is equipped with 2 standard AC outlets (125V/12A) and 2 USB ports (5V/2A). Simply plug in your devices or beauty tools into the appropriate ports. Ensure the vanity is plugged into a wall outlet using the provided 4.6-foot power cord.

MAINTENANCE

- **Cleaning:** Wipe the surface of the vanity desk with a dry cloth. For stubborn marks, use a slightly damp cloth with mild soap and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Mirror Care:** Clean the mirror with a glass cleaner and a soft, lint-free cloth. Do not spray cleaner directly onto the mirror; instead, apply it to the cloth first.
- **Drawer Maintenance:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Hardware Check:** Regularly inspect all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Missing parts or hardware	Packaging error or lost during transit.	Carefully check all packaging materials. If still missing, contact Furmax customer support with your product model and a list of missing parts.
Holes do not line up during assembly	Incorrect orientation of parts or manufacturing defect.	Double-check the assembly instructions to ensure parts are oriented correctly. If the issue persists, do not force parts; contact customer support for guidance.
LED lights not working	Power cord not properly connected, power outlet issue, or light switch malfunction.	Ensure the vanity's power cord is securely plugged into a working wall outlet. Check the inline power switch for the lights. If issues persist, contact customer support.
Drawers are stiff or do not slide smoothly	Misalignment of drawer slides or debris in the tracks.	Ensure drawer slides are correctly installed and aligned. Clean any dust or debris from the tracks. A small amount of silicone lubricant can improve smoothness.

SPECIFICATIONS

Attribute	Detail
Brand	Furmax

Attribute	Detail
Model Number	F24VN02430474
Product Dimensions	15.7"D x 39.3"W x 58.8"H
Item Weight	97.7 pounds
Frame Material	Wood
Furniture Finish	Engineered Wood
Color	White
Assembly Required	Yes
Batteries Required	No
Included Components	Mirror

WARRANTY AND SUPPORT

Furmax is committed to providing high-quality products. For any questions, concerns, or assistance with your vanity desk, please contact Furmax customer support. You may also refer to the following general information:

- **Returns:** This product is eligible for 30-day easy returns. Please refer to your purchase platform for detailed return policies.
- **Customer Support:** For direct assistance, visit the official Furmax store or contact their customer service channels as provided at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question